

Bug 168237

Monday, 1.09.2025

https://bugs.documentfoundation.org/show_bug.cgi?id=168237


Bug 168237 - GDI EMF OOXML: 'Wall Chart' resizes after reopen DOCX saved in LO with chart pasted to Writer from Excel ([edit](#))

Reported: 2025-09-01 16:47 UTC by [Piotr Osada](#)


Behavior observed during further investigation of a previously reported bug ticket:

Bug 163158 - [SVM to EMF export] Writer can't save 'Chart Wall'-background (in plot area) in DOCX when pasted as GDI from Calc ([edit](#))

Reported: 2024-09-25 19:39 UTC by [Piotr Osada](#)

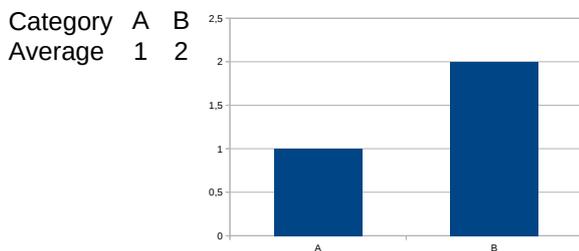

0,0	1,0
0,1	1,0
0,1	0,9
1,0	0,0

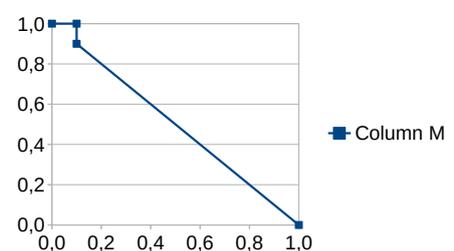


Steps:

- 1) In MS Excel copy any chart
- 2) In LO Writer: Ctrl+Shift+V
- 3) Paste special → Graphics Device Interface metafile (GDI)
- 4) Save as DOCX
- 5) Reopen DOCX in Writer or Word

Result:

The 'Chart Wall' (plot region) shows a small part (approximately 20% x 20%) of the original chart, stretched across the entire wall starting from the top-left corner.

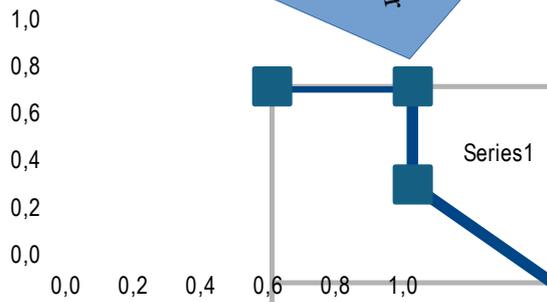

Expected:

A chart inserted in document as a vector graphic (using GDI interface) should retain the same proportions as it appears in spreadsheet applications.

Version: 25.8.1.1 (X86_64)

Build ID: [54047653041915e595ad4e45cccea684809c77b5](#)

CPU threads: 16; OS: Windows 11 X86_64 (build 26100); UI render: Skia/Raster; VCL: win

Locale: pl-PL (pl_PL); UI: en-US

Calc: CL threaded


Microsoft® Word for Microsoft 365 MSO (Version 2507 Build 16.0.19029.20136) 64-bit

EMFParser can be downloaded from here:


https://download.cnet.com/download/emf-parser/3000-2383_4-10558240.html

Following four images are chart copied in specified spreadsheet application and pasted to Writer using: **Paste Special (Ctrl+Shift+V) → Graphics Device Interface metafile (GDI)**


1) LO saved ODS Calc to Writer

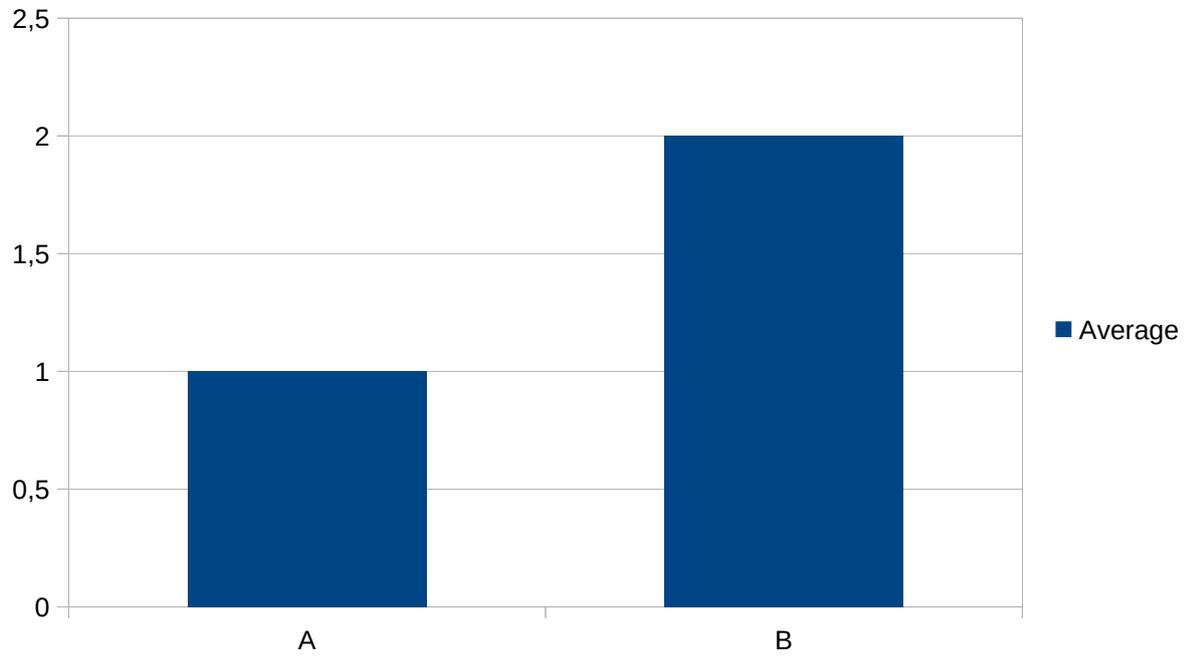


2) LO saved XLSX Calc to Writer

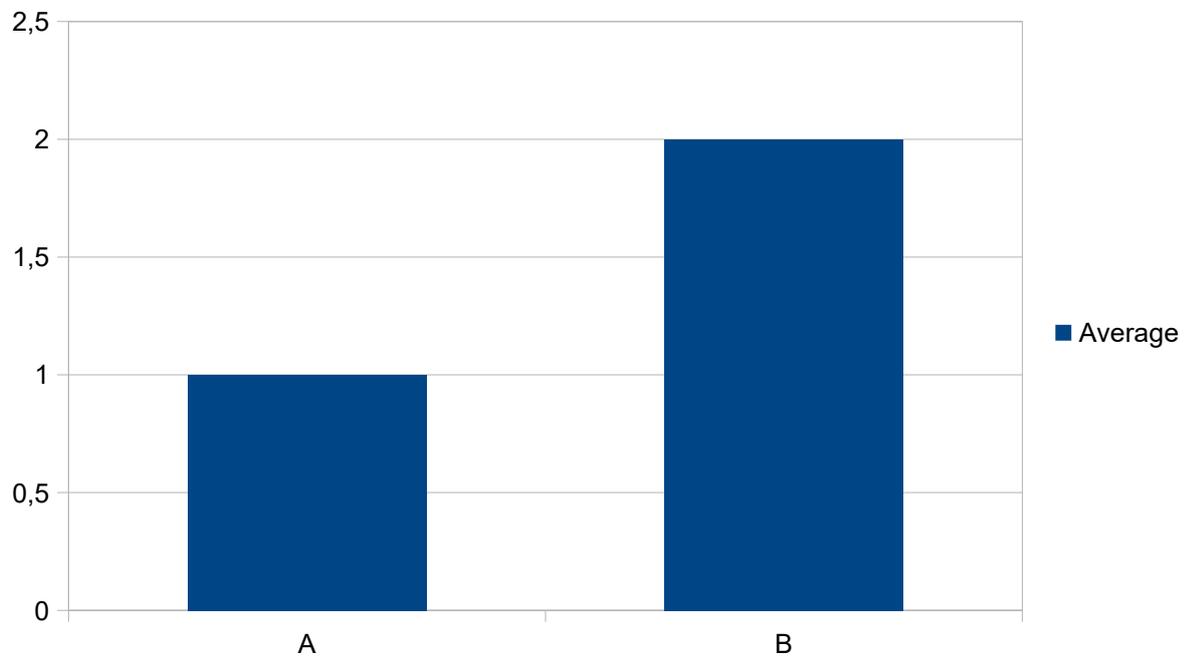

3) LO saved ODS Excel to Writer


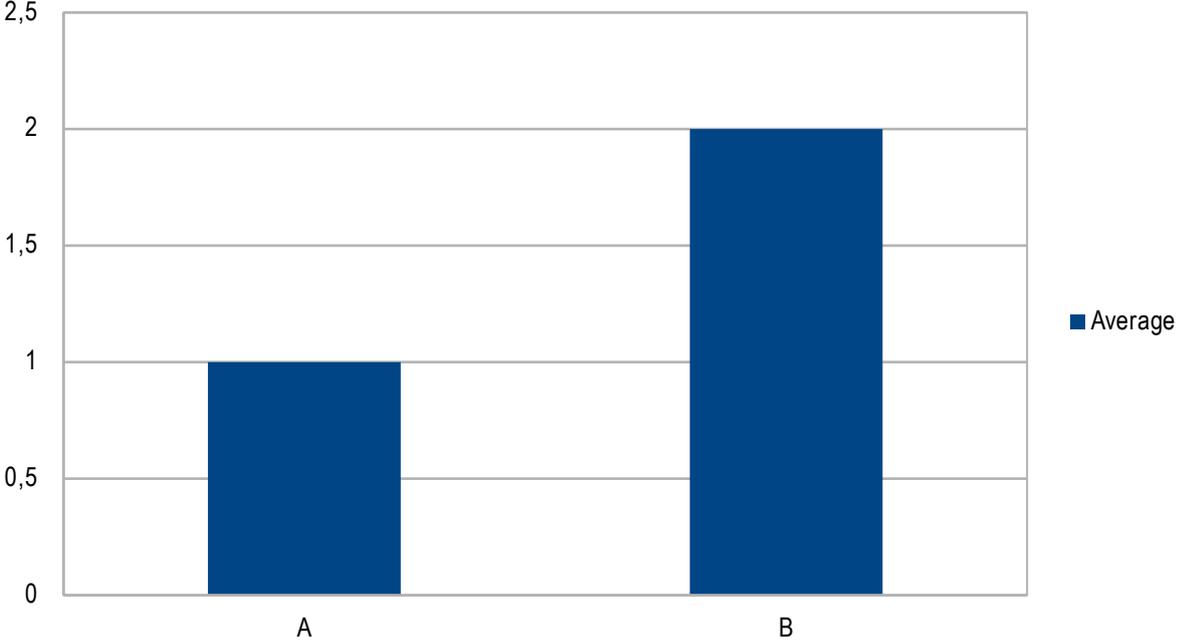


4) LO saved XLSX Excel to Writer


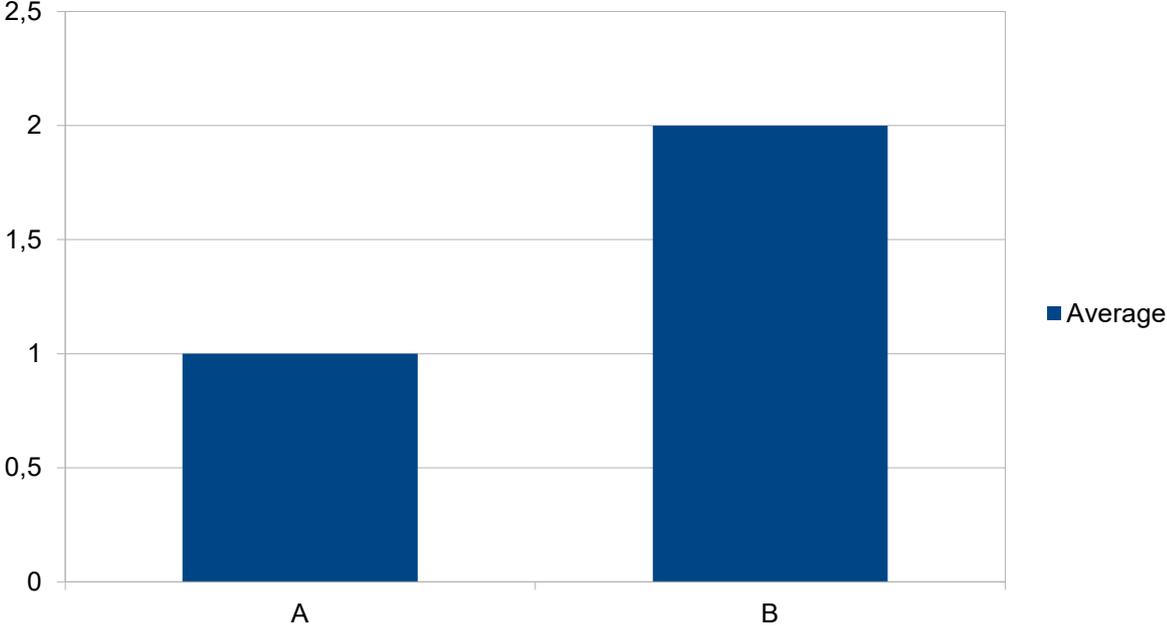


ODT save-reopen result (no bug)

ODT document pages showing charts pasted in four ways (Calc, Excel→ Writer) **file before reload**

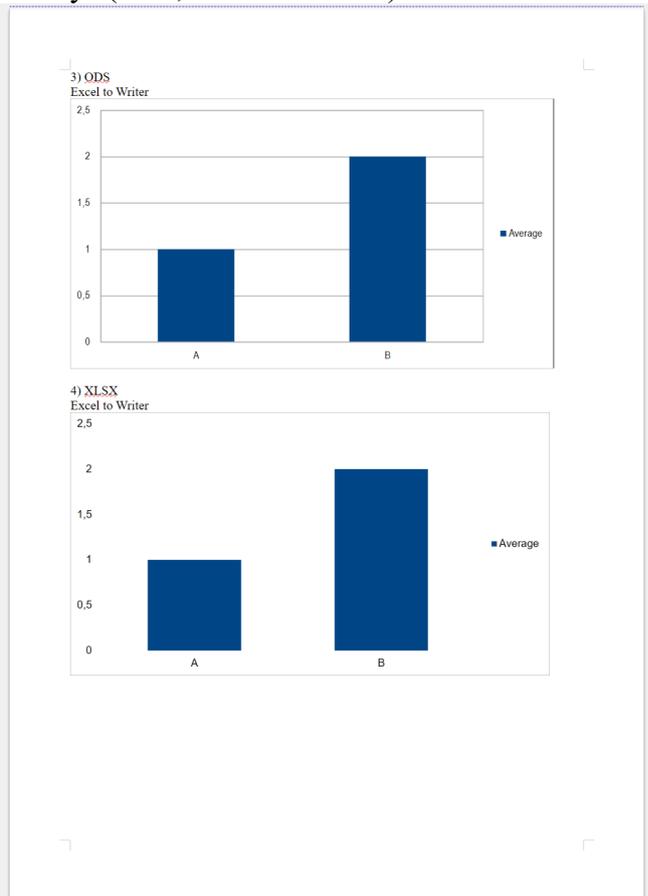
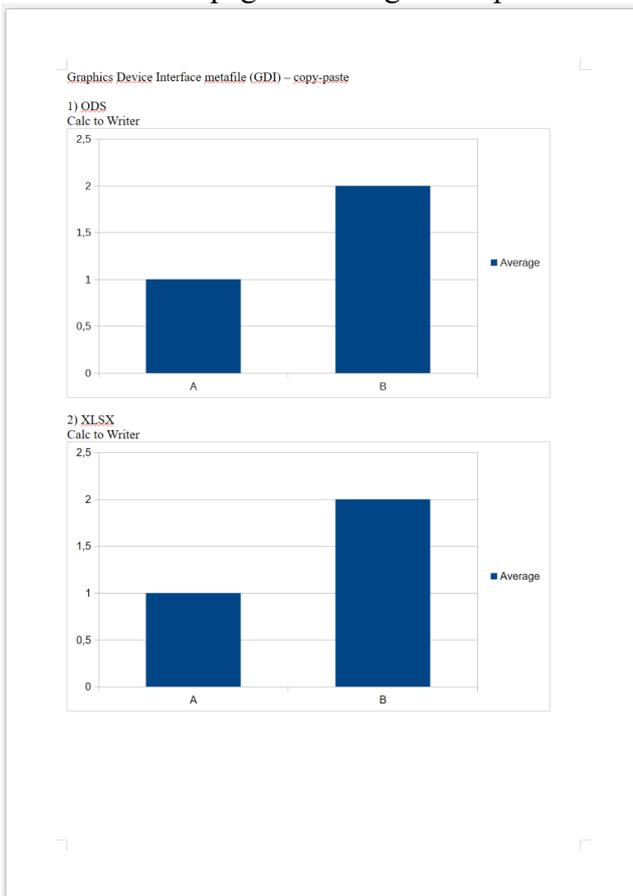


ODT **after** file reload

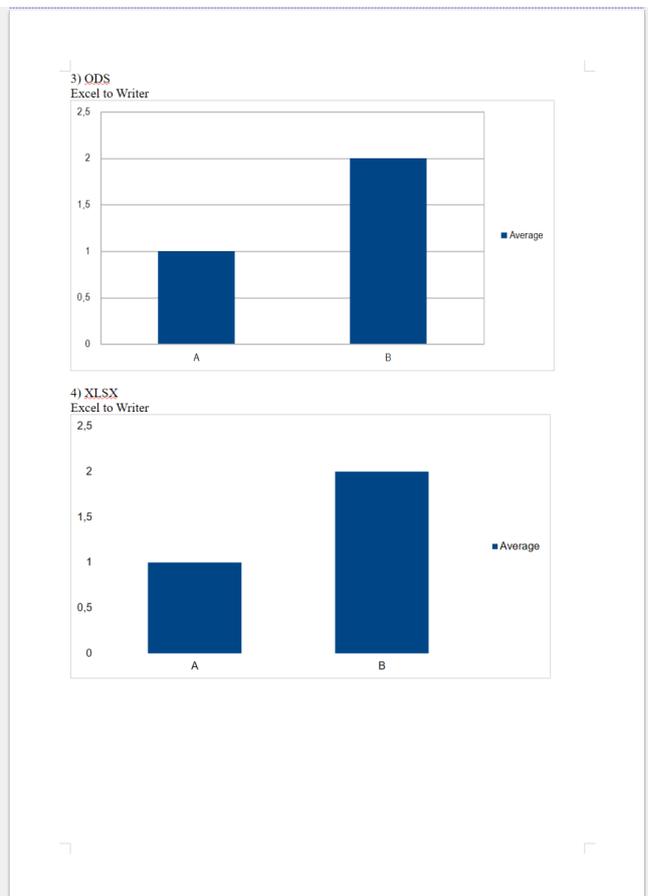
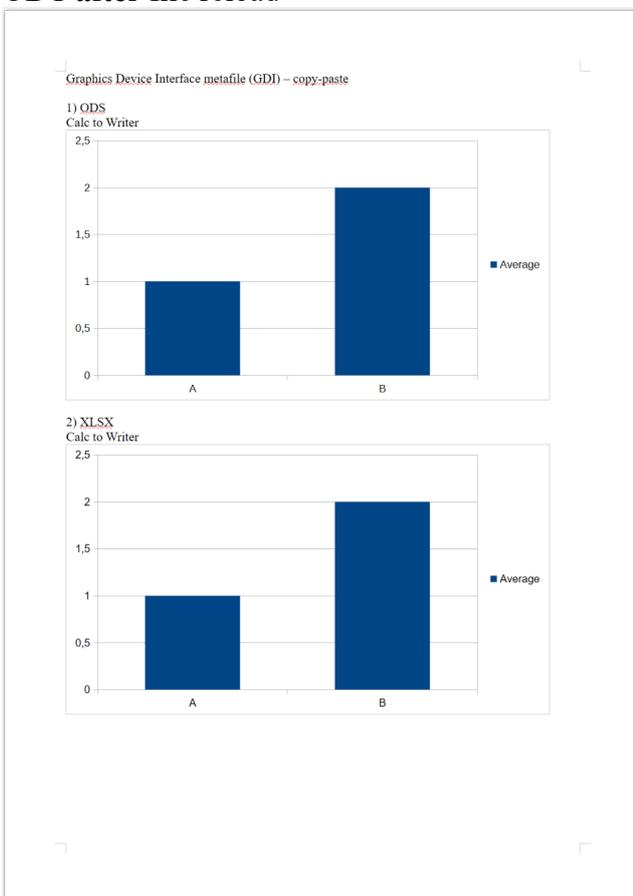


DOCX save-reopen result (bug: chart resize)

Above mentioned ODT text document saved as DOCX **before** reload (images from 1) to 4))

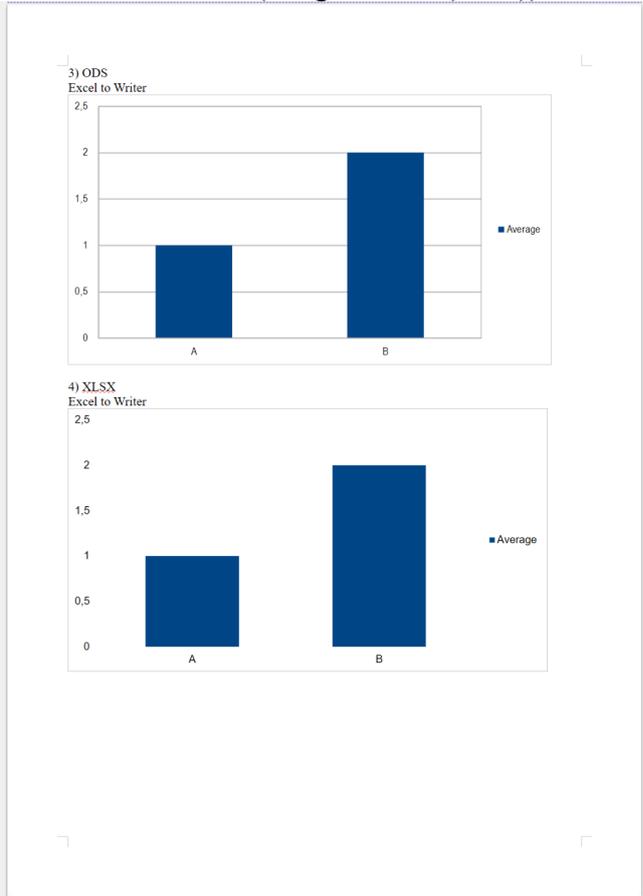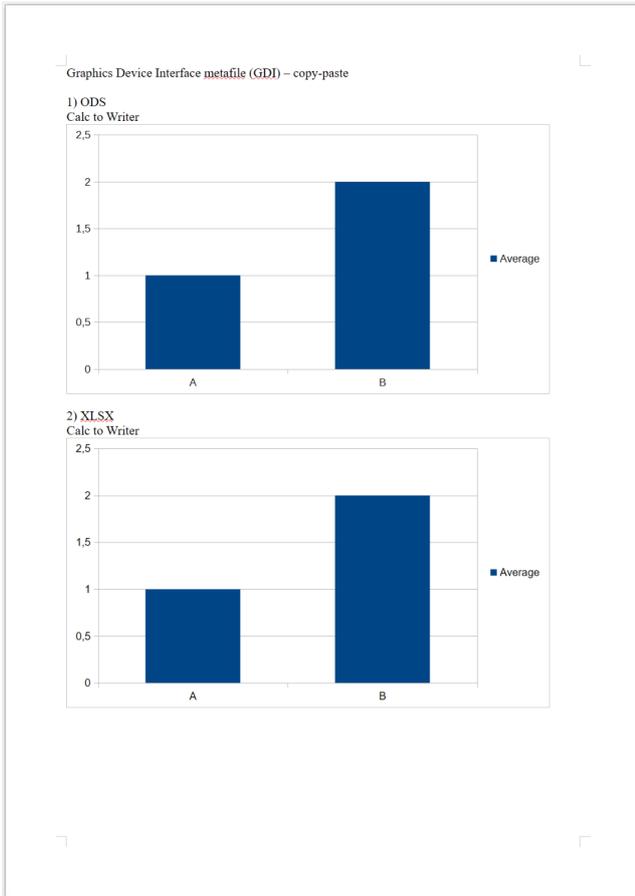


DOCX after reload

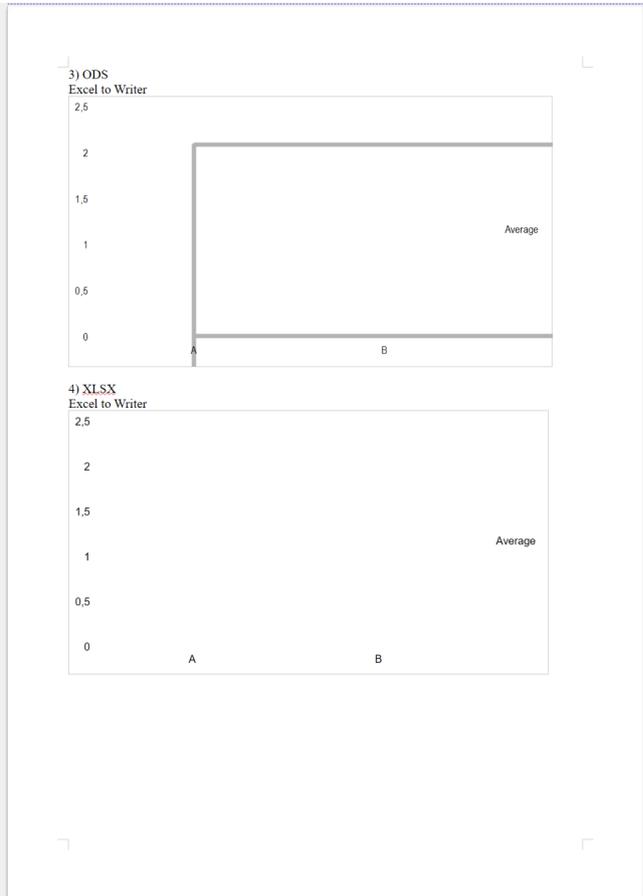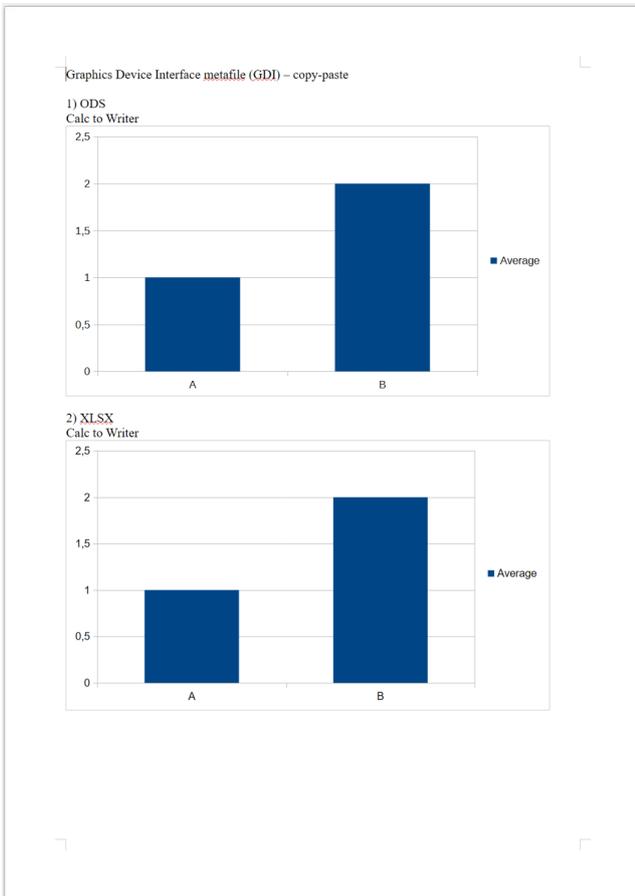

EMF Parser

1) Image (LO-ODS Calc to Writer)

1) LO saved ODS Calc to Writer

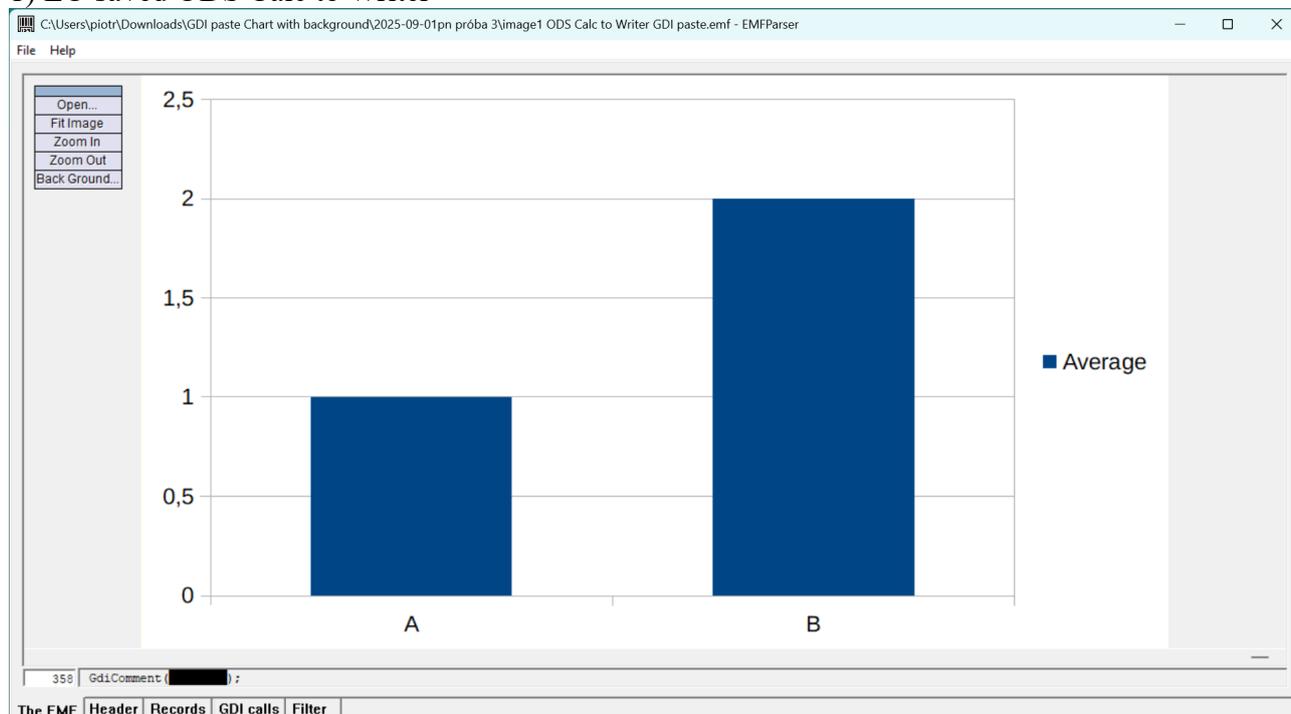

1) Header

EMF Header Info

```
filename:      C:\Users\piotr\Downloads\GDI paste Chart with background\2025-09-01pn
próba 3\image1 ODS Calc to Writer GDI paste.emf
iType:        1
nSize:        108
rclBounds:    (0, 0) - (906, 509)
rclFrame:     (0, 0) - (15999, 8999)
dSignature:   0x464D4520
nVersion:     0x00010000
nBytes:       9672
nRecords:     359
nHandles:     4
sReserved:    0
nDescription: 0
offDescription: 0
nPalEntries:  0 (0x0000)
szlDevice:    907, 510
szlMillimeters: 160, 90
```

image1.emf is a chart extracted from *.DOCX-file archive. It is the same file as parsed in section „1) LO saved ODS Calc to Writer”, respectively.

The screenshot shows a file explorer window with the address bar: "2025-09-01pn próba 3 > ODS — kopia.docx.zip > word > media". The toolbar includes icons for "Nowy", "Kopiuje", "Wklej", "Usuń", "Sortuj", "Wyświetl", and "Wyodrębni wszystkie". The main area contains a table of files:

Nazwa	Rozmiar	Stopec	Data modyfikacji
image1.emf	10 KB	91%	01.09.2025 11:54
image2.emf	9 KB	90%	01.09.2025 11:54
image3.emf	15 KB	92%	01.09.2025 11:54
image4.emf	16 KB	92%	01.09.2025 11:54

At the bottom, it says "Elementy: 7 | 1 zaznaczony element, 9.44 KB".

1) Records

EMF Records List

Number of Records: 360

iType	nSize	Data
0 EMR_HEADER 00 00 00l..... 00 00 00 □...ý..... 00 01 00 >..'#.. EMF.... 00 00 00 È%.g..... 01 00 00□...p... 00 00 00 ...Z.....q..□_...	0x006C(108)	01 00 00 00 6C 00 00 00-00 00 00 00 00 8A 03 00 00 FD 01 00 00-00 00 00 00 00 7F 3E 00 00 27 23 00 00-20 45 4D 46 00 C8 25 00 00 67 01 00 00-04 00 00 00 00 00 00 00 00 00 00 00 00-8B 03 00 00 FE A0 00 00 00 5A 00 00 00-00 00 00 00 00 00 00 00 00 00 71 02 00-90 5F 01 00
1 EMR_GDICOMMENT 4D 46 2B F....,.... EMF+ 10 C0 DB .@.....ÀÛ□...□...	0x002C(44)	46 00 00 00 2C 00 00 00-20 00 00 00 45 01 40 01 00 1C 00 00 00-10 00 00 00 02 01 00 00 00 8D 00 00 00-8D 00 00 00
2 EMR_GDICOMMENT 4D 46 2B F...L...@...EMF+ 40 09 00 "@.....@.. 00 00 00\$@..... 00 00 00!@..... .@.....	0x004C(76)	46 00 00 00 4C 00 00 00-40 00 00 00 45 22 40 00 00 0C 00 00 00-00 00 00 00 1E 0C 00 00 00 00 00 00 00-24 40 00 01 0C 00 00 00 00 21 40 00 00-0C 00 00 00 00 04 40 00 00 0C 00 00 00-00 00 00 00
3 EMR_SETMAPMODE	0x000C(12)	11 00 00 00 0C 00 00 00-08 00 00 00
4 EMR_SETVIEWPORTEXTEX 00 00 00□...□...	0x0010(16)	0B 00 00 00 10 00 00 00-90 00 00 00 90
5 EMR_SETWINDOWEXTEX 09 00 00i...i...	0x0010(16)	09 00 00 00 10 00 00 00-EC 09 00 00 EC
6 EMR_SETVIEWPORTORTEX 00 00 00	0x0010(16)	0C 00 00 00 10 00 00 00-00 00 00 00 00
7 EMR_SETWINDOWORTEX 00 00 00	0x0010(16)	0A 00 00 00 10 00 00 00-00 00 00 00 00
8 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
9 EMR_SETBKMODE	0x000C(12)	12 00 00 00 0C 00 00 00-01 00 00 00
10 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
11 EMR_CREATEBRUSHINDIRECT 00 00 00 'r..... ÿÿÿ.....	0x0018(24)	27 00 00 00 18 00 00 00-01 00 00 00 00 FF FF FF 00 00 00 00 00-

12	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
13	EMR_CREATEPEN 00 00 00 &.....ÿÿÿ.	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 05 00 00 00 00 00 00 00 00-FF FF FF 00
14	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
15	EMR_POLYGON 00 00 00L..... 1F 00 00 >..'#.....@... 00 00 00 '#.....'#..... 3E 00 00 >..... >.. '#..@...'#..	0x004C(76)	03 00 00 00 4C 00 00 00-00 00 00 00 00 7F 3E 00 00 27 23 00 00-06 00 00 00 40 27 23 00 00 00 00 00 00-27 23 00 00 00 00 00 00 00 7F 3E 00 00-00 00 00 00 7F 27 23 00 00 40 1F 00 00-27 23 00 00
16	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
17	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
18	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
19	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
20	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
21	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00-B3 B3 B3 00
22	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
23	EMR_POLYLINE 01 00 00L...%...w... 1C 00 00 *5..ô....." 04 00 00 ô...%...ô...%... 35 00 00 w...*5..w...*5.. ô..." ô...	0x004C(76)	04 00 00 00 4C 00 00 00-25 04 00 00 77 2A 35 00 00 F4 1F 00 00-06 00 00 00 A8 F4 1F 00 00 25 04 00 00-F4 1F 00 00 25 77 01 00 00 2A 35 00 00-77 01 00 00 2A F4 1F 00 00 A8 1C 00 00-F4 1F 00 00
24	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
25	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
26	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
27	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
28	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00

29	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00	&.....		00 00 00 00 00 00 00 00-B3 B3 B3 00
 ^{3 3 3} .		
30	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
31	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 F3
1F 00 00%...ó...		29 35 00 00 F3 1F 00 00-02 00 00 00 29
35 00 00)5..ó.....)5..		F3 1F 00 00 25 04 00 00-F3 1F 00 00
ó...%...ó...			
32	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
33	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
34	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
35	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
36	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
37	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00	&.....		00 00 00 00 00 00 00 00-B3 B3 B3 00
 ^{3 3 3} .		
38	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
39	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 D9
19 00 00%...Û...		29 35 00 00 D9 19 00 00-02 00 00 00 29
35 00 00)5..Û.....)5..		D9 19 00 00 25 04 00 00-D9 19 00 00
Û...%...Û...			
40	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
41	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
42	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
43	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
44	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
45	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00	&.....		00 00 00 00 00 00 00 00-B3 B3 B3 00
 ^{3 3 3} .		
46	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
47	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 C0
13 00 00%...À...		

35 00 00)5..À.....)5..		29 35 00 00 C0 13 00 00-02 00 00 00 29
À...%...À...		C0 13 00 00 25 04 00 00-C0 13 00 00
48 EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
49 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
50 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
51 EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
52 EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
53 EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00-B3 B3 B3 00
54 EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
55 EMR_POLYLINE 0D 00 00%..... 35 00 00)5.."......)5.. "....%....."	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 A8 29 35 00 00 A8 0D 00 00-02 00 00 00 29 A8 0D 00 00 25 04 00 00-A8 0D 00 00
56 EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
57 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
58 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
59 EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
60 EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
61 EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00-B3 B3 B3 00
62 EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
63 EMR_POLYLINE 07 00 00%.....□... 35 00 00)5..□.....)5.. □...%.....□...	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 8F 29 35 00 00 8F 07 00 00-02 00 00 00 29 8F 07 00 00 25 04 00 00-8F 07 00 00
64 EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
65 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00

66	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
67	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
68	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
69	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
70	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
71	EMR_POLYLINE 01 00 00%...v... 35 00 00)5..v.....)5.. v...%...v...	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 76 29 35 00 00 76 01 00 00-02 00 00 00 29 76 01 00 00 25 04 00 00-76 01 00 00
72	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
73	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
74	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
75	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
76	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
77	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
78	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
79	EMR_POLYLINE 1F 00 00%...ó... 04 00 00 %...□%... □ ..%...ó...	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 F3 25 04 00 00 89 20 00 00-02 00 00 00 25 89 20 00 00 25 04 00 00-F3 1F 00 00
80	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
81	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
82	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
83	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
84	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
85	EMR_CREATEPEN 00 00 00 &.....	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00

 ^{3 3 3} .		00 00 00 00 00 00 00 00-B3 B3 B3 00
86	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
87	EMR_POLYLINE 1F 00 00%...ó... 04 00 00 %...□%... □ ..%...ó...	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 F3 25 04 00 00 89 20 00 00-02 00 00 00 25 89 20 00 00 25 04 00 00-F3 1F 00 00
88	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
89	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
90	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
91	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
92	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
93	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
94	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
95	EMR_POLYLINE 1F 00 00\$...ó... 1C 00 00 \$...□\$... □ ..\$...ó...	0x002C(44)	04 00 00 00 2C 00 00 00-A7 1C 00 00 F3 A7 1C 00 00 89 20 00 00-02 00 00 00 A7 89 20 00 00 A7 1C 00 00-F3 1F 00 00
96	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
97	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
98	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
99	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
100	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
101	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
102	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
103	EMR_POLYLINE 1F 00 00\$...ó... 1C 00 00 \$...□\$...	0x002C(44)	04 00 00 00 2C 00 00 00-A7 1C 00 00 F3 A7 1C 00 00 89 20 00 00-02 00 00 00 A7

			89 20 00 00 A7 1C 00 00-F3 1F 00 00
□ ..\$.ó...			
104	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
105	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
106	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
107	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
108	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
109	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			
..... ^{3 3 3} .			00 00 00 00 00 00 00 00-B3 B3 B3 00
110	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
111	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-29 35 00 00 F3
1F 00 00,...)5..ó...			
35 00 00)5..□)5..			29 35 00 00 89 20 00 00-02 00 00 00 29
□ ..)5..ó...			89 20 00 00 29 35 00 00-F3 1F 00 00
112	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
113	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
114	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
115	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
116	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
117	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			
..... ^{3 3 3} .			00 00 00 00 00 00 00 00-B3 B3 B3 00
118	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
119	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-29 35 00 00 F3
1F 00 00,...)5..ó...			
35 00 00)5..□)5..			29 35 00 00 89 20 00 00-02 00 00 00 29
□ ..)5..ó...			89 20 00 00 29 35 00 00-F3 1F 00 00
120	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
121	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
122	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			

123	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
124	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
125	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
126	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
127	EMR_POLYLINE 1F 00 00%...ó... 04 00 00)5..ó.....%... ó...)5..ó...	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 F3 29 35 00 00 F3 1F 00 00-02 00 00 00 25 F3 1F 00 00 29 35 00 00-F3 1F 00 00
128	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
129	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
130	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
131	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
132	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
133	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
134	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
135	EMR_POLYLINE 1F 00 00□...ó... 03 00 00 %...ó.....□... ó...%...ó...	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 F3 25 04 00 00 F3 1F 00 00-02 00 00 00 8F F3 1F 00 00 25 04 00 00-F3 1F 00 00
136	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
137	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
138	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
139	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
140	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
141	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00

142	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
143	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 F3
1F 00 00□...ó...			25 04 00 00 F3 1F 00 00-02 00 00 00 8F
03 00 00 %...ó.....□...			F3 1F 00 00 25 04 00 00-F3 1F 00 00
ó...%...ó...			
144	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
145	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
146	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
147	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
148	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
149	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			00 00 00 00 00 00 00 00-B3 B3 B3 00
..... ^{3 3 3} .			
150	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
151	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 D9
19 00 00□...Û...			25 04 00 00 D9 19 00 00-02 00 00 00 8F
03 00 00 %...Û.....□...			D9 19 00 00 25 04 00 00-D9 19 00 00
Û...%...Û...			
152	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
153	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
154	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
155	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
156	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
157	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			00 00 00 00 00 00 00 00-B3 B3 B3 00
..... ^{3 3 3} .			
158	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
159	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 D9
19 00 00□...Û...			25 04 00 00 D9 19 00 00-02 00 00 00 8F
03 00 00 %...Û.....□...			D9 19 00 00 25 04 00 00-D9 19 00 00
Û...%...Û...			

160	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
161	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
162	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
163	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
164	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
165	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00-B3 B3 B3 00
166	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
167	EMR_POLYLINE 13 00 00,...□...À... 03 00 00 %...À.....□... À...%...À...	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 C0 25 04 00 00 C0 13 00 00-02 00 00 00 8F C0 13 00 00 25 04 00 00-C0 13 00 00
168	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
169	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
170	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
171	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
172	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
173	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00-B3 B3 B3 00
174	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
175	EMR_POLYLINE 13 00 00,...□...À... 03 00 00 %...À.....□... À...%...À...	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 C0 25 04 00 00 C0 13 00 00-02 00 00 00 8F C0 13 00 00 25 04 00 00-C0 13 00 00
176	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
177	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
178	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
179	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80

180	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
181	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
182	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
183	EMR_POLYLINE 0D 00 00□..... 03 00 00 %.....□... "...%..."...	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 A8 25 04 00 00 A8 0D 00 00-02 00 00 00 8F A8 0D 00 00 25 04 00 00-A8 0D 00 00
184	EMR_RESTOREDC ".....ÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
185	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
186	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
187	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
188	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
189	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
190	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
191	EMR_POLYLINE 0D 00 00□..... 03 00 00 %.....□... "...%..."...	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 A8 25 04 00 00 A8 0D 00 00-02 00 00 00 8F A8 0D 00 00 25 04 00 00-A8 0D 00 00
192	EMR_RESTOREDC ".....ÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
193	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
194	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
195	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
196	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
197	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
198	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00

199	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 8F
07 00 00□...□...		25 04 00 00 8F 07 00 00-02 00 00 00 8F
03 00 00	%...□.....□...		8F 07 00 00 25 04 00 00-8F 07 00 00
	□...%...□...		
200	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
201	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
202	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
203	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
204	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
205	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			00 00 00 00 00 00 00 00-02 00 00 00 00
..... ^{3 3 3} .			00 00 00 00 00 00 00 00-02 00 00 00 00
206	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
207	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 8F
07 00 00□...□...		25 04 00 00 8F 07 00 00-02 00 00 00 8F
03 00 00	%...□.....□...		8F 07 00 00 25 04 00 00-8F 07 00 00
	□...%...□...		
208	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
209	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
210	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
211	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
212	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
213	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			00 00 00 00 00 00 00 00-02 00 00 00 00
..... ^{3 3 3} .			00 00 00 00 00 00 00 00-02 00 00 00 00
214	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
215	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 76
01 00 00□...v...		25 04 00 00 76 01 00 00-02 00 00 00 8F
03 00 00	%...v.....□...		76 01 00 00 25 04 00 00-76 01 00 00
	v...%...v...		
216	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			

217	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
218	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
219	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
220	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
221	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
222	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
223	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8F 03 00 00 76
224	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
225	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
226	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
227	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
228	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
229	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
230	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
231	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-25 04 00 00 76
232	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
233	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
234	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
235	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 80
236	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00

237	EMR_CREATEBRUSHINDIRECT	0x0018(24)	27 00 00 00 18 00 00 00-01 00 00 00 00
	00 00 00 '.....		00 45 86 00 00 00 00 00-
	.E□.....		
238	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
	%.....		
239	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
	%.....€		
240	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
	(.....		
241	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 05
	00 00 00 &.....		00 00 00 00 00 00 00 00-FF FF FF 00
ÿÿÿ.		
242	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
	%.....		
243	EMR_POLYGON	0x0044(68)	03 00 00 00 44 00 00 00-45 0A 00 00 C0
	13 00 00D...E...À...		87 16 00 00 F3 1F 00 00-05 00 00 00 45
	0A 00 00 □...ó.....E...		F3 1F 00 00 87 16 00 00-F3 1F 00 00 87
	16 00 00 ó...□...ó...□...		C0 13 00 00 45 0A 00 00-C0 13 00 00 45
	0A 00 00 À...E...À...E...		F3 1F 00 00
	ó...		
244	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
	".....ÿÿÿÿ		
245	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
		
246	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
	!.....		
247	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 80
	%.....€		
248	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00
	(.....		
249	EMR_CREATEBRUSHINDIRECT	0x0018(24)	27 00 00 00 18 00 00 00-01 00 00 00 00
	00 00 00 '.....		00 45 86 00 00 00 00 00-
	.E□.....		
250	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
	%.....		
251	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
	%.....€		
252	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
	(.....		
253	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 05
	00 00 00 &.....		00 00 00 00 00 00 00 00-FF FF FF 00
ÿÿÿ.		
254	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
	%.....		

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
290	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
291	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
292	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-03 00 00 00
293	EMR_EXTTEXTOUTW 1A 00 00 T...`...A...V... 00 00 00 *...Û..... 00 00 00A...V..... 00 00 00 L..... 00 2C 00T...0,, 00 00 00 5...Ä...b...Ä...	0x0060(96)	54 00 00 00 60 00 00 00-41 01 00 00 56 2A 03 00 00 D9 1B 00 00-01 00 00 00 00 00 00 00 00 41 01 00 00-56 1A 00 00 03 4C 00 00 00 02 00 00 00-00 00 00 00 00 00 00 00 00 00 00 00 00-54 00 00 00 30 35 00 00 00 C4 00 00 00-62 00 00 00 C4
294	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
295	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
296	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
297	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-0A 00 00 80
298	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-03 00 00 00
299	EMR_EXTCREATEFONTINDIRECTW FE FF FF R...L.....□pÿÿ 01 00 00□... 00 65 00L.i.b.e. 00 53 00 r.a.t.i.o.n. .S. 00 00 00 a.n.s..... 00 00 00	0x014C(332)	52 00 00 00 4C 01 00 00-03 00 00 00 9F 00 00 00 00 00 00 00 00-00 00 00 00 90 00 00 00 00 00 00 00 02-4C 00 69 00 62 72 00 61 00 74 00 69 00-6F 00 6E 00 20 61 00 6E 00 73 00 00 00-00 00 00 00 00 00 00 00 00 00 00 00 00-00 00 00 00 00

00 00 00	*...v.....		2A 03 00 00 76 03 00 00-01 00 00 00 00
00 00 00A...ó.....		00 00 00 00 41 01 00 00-F3 01 00 00 03
00 00 00	L.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 2C 00T...2.,.		00 00 00 00 00 00 00 00-54 00 00 00 32
00 00 00	5...Ä...b...Ä...		35 00 00 00 C4 00 00 00-62 00 00 00 C4
334	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
335	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
336	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
337	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 80
338	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00
339	EMR_CREATEBRUSHINDIRECT 00 00 00 '..... .E□.....	0x0018(24)	27 00 00 00 18 00 00 00-01 00 00 00 00 00 45 86 00 00 00 00 00-
340	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
341	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
342	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
343	EMR_CREATEPEN 00 00 00 &.....ÿÿÿÿ.	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 05 00 00 00 00 00 00 00 00-FF FF FF 00
344	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
345	EMR_POLYGON 11 00 00L...Ð6...*... 37 00 00 ±7..ü.....H7.. 36 00 00 ü...Ð6..ü...Ð6.. 37 00 00 *...±7...*...±7.. ü...H7..ü...	0x004C(76)	03 00 00 00 4C 00 00 00-DE 36 00 00 2A B1 37 00 00 FC 11 00 00-06 00 00 00 48 FC 11 00 00 DE 36 00 00-FC 11 00 00 DE 2A 11 00 00 B1 37 00 00-2A 11 00 00 B1 FC 11 00 00 48 37 00 00-FC 11 00 00
346	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
347	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
348	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
349	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-0A 00 00 80

356	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
"ÿÿÿÿ		
357	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
358	EMR_GDICOMMENT	0x001C(28)	46 00 00 00 1C 00 00 00-10 00 00 00 45
4D 46 2B F.....EMF+			02 40 00 00 0C 00 00 00-00 00 00 00
.@.....			
359	EMR_EOF	0x0014(20)	0E 00 00 00 14 00 00 00-00 00 00 00 10
00 00 00			14 00 00 00
....			

1) GDI calls

EMF GDI Calls

Number of Calls: 358

```
1      GdiComment(██████████);
2      GdiComment(██████████);
3      SetMapMode(hDC, MM_ANISOTROPIC);
4      SetViewportExtEx(hDC, 144, 144, NULL);
5      SetWindowExtEx(hDC, 2540, 2540, NULL);
6      SetViewportOrgEx(hDC, 0, 0, NULL);
7      SetWindowOrgEx(hDC, 0, 0, NULL);
8      SetROP2(hDC, R2_COPYPEN);
9      SetBkMode(hDC, TRANSPARENT);
10     SaveDC(hDC);
11     CreateBrushIndirect(&lb);      // EMRCREATEBRUSHINDIRECT.ihBrush = 1
        // Parameter(s):
        LOGBRUSH lb;
        lb.lbStyle = BS_SOLID;
        lb.lbColor = RGB(255, 255, 255);
        lb.lbHatch = 0;
12     SelectObject(hDC, 1);
13     CreatePen(PS_NULL, 0, RGB(255, 255, 255));      // EMRCREATEPEN.ihPen = 2
14     SelectObject(hDC, 2);
15     Polygon(hDC, lppt, 6);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (8000, 8999);
        lppt[1] = (0, 8999);
        lppt[2] = (0, 0);
        lppt[3] = (15999, 0);
        lppt[4] = (15999, 8999);
        lppt[5] = (8000, 8999);
        rclBounds = RECT(0, 0, 15999, 8999);
16     RestoreDC(hDC, -1);
17     SetROP2(hDC, R2_COPYPEN);
18     SaveDC(hDC);
19     SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
20     DeleteObject(hDC, 2);
21     CreatePen(PS_SOLID, 0, RGB(179, 179, 179));      // EMRCREATEPEN.ihPen = 2
22     SelectObject(hDC, 2);
23     Polyline(hDC, lppt, 6);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (7336, 8180);
        lppt[1] = (1061, 8180);
        lppt[2] = (1061, 375);
        lppt[3] = (13610, 375);
        lppt[4] = (13610, 8180);
        lppt[5] = (7336, 8180);
        rclBounds = RECT(1061, 375, 13610, 8180);
24     RestoreDC(hDC, -1);
25     SetROP2(hDC, R2_COPYPEN);
26     SaveDC(hDC);
27     SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
28     DeleteObject(hDC, 2);
29     CreatePen(PS_SOLID, 0, RGB(179, 179, 179));      // EMRCREATEPEN.ihPen = 2
30     SelectObject(hDC, 2);
31     Polyline(hDC, lppt, 2);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (13609, 8179);
        lppt[1] = (1061, 8179);
        rclBounds = RECT(1061, 8179, 13609, 8179);
32     RestoreDC(hDC, -1);
33     SetROP2(hDC, R2_COPYPEN);
34     SaveDC(hDC);
35     SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
```

```

36 DeleteObject(hDC, 2);
37 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
38 SelectObject(hDC, 2);
39 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13609, 6617);
    lppt[1] = (1061, 6617);
    rclBounds = RECT(1061, 6617, 13609, 6617);
40 RestoreDC(hDC, -1);
41 SetROP2(hDC, R2_COPYPEN);
42 SaveDC(hDC);
43 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
44 DeleteObject(hDC, 2);
45 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
46 SelectObject(hDC, 2);
47 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13609, 5056);
    lppt[1] = (1061, 5056);
    rclBounds = RECT(1061, 5056, 13609, 5056);
48 RestoreDC(hDC, -1);
49 SetROP2(hDC, R2_COPYPEN);
50 SaveDC(hDC);
51 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
52 DeleteObject(hDC, 2);
53 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
54 SelectObject(hDC, 2);
55 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13609, 3496);
    lppt[1] = (1061, 3496);
    rclBounds = RECT(1061, 3496, 13609, 3496);
56 RestoreDC(hDC, -1);
57 SetROP2(hDC, R2_COPYPEN);
58 SaveDC(hDC);
59 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
60 DeleteObject(hDC, 2);
61 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
62 SelectObject(hDC, 2);
63 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13609, 1935);
    lppt[1] = (1061, 1935);
    rclBounds = RECT(1061, 1935, 13609, 1935);
64 RestoreDC(hDC, -1);
65 SetROP2(hDC, R2_COPYPEN);
66 SaveDC(hDC);
67 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
68 DeleteObject(hDC, 2);
69 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
70 SelectObject(hDC, 2);
71 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13609, 374);
    lppt[1] = (1061, 374);
    rclBounds = RECT(1061, 374, 13609, 374);
72 RestoreDC(hDC, -1);
73 SetROP2(hDC, R2_COPYPEN);
74 SaveDC(hDC);
75 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
76 DeleteObject(hDC, 2);
77 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
78 SelectObject(hDC, 2);
79 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;

```

```

    lppt[0] = (1061, 8329);
    lppt[1] = (1061, 8179);
    rclBounds = RECT(1061, 8179, 1061, 8329);
80 RestoreDC(hDC, -1);
81 SetROP2(hDC, R2_COPYPEN);
82 SaveDC(hDC);
83 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
84 DeleteObject(hDC, 2);
85 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
86 SelectObject(hDC, 2);
87 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (1061, 8329);
    lppt[1] = (1061, 8179);
    rclBounds = RECT(1061, 8179, 1061, 8329);
88 RestoreDC(hDC, -1);
89 SetROP2(hDC, R2_COPYPEN);
90 SaveDC(hDC);
91 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
92 DeleteObject(hDC, 2);
93 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
94 SelectObject(hDC, 2);
95 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (7335, 8329);
    lppt[1] = (7335, 8179);
    rclBounds = RECT(7335, 8179, 7335, 8329);
96 RestoreDC(hDC, -1);
97 SetROP2(hDC, R2_COPYPEN);
98 SaveDC(hDC);
99 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
100 DeleteObject(hDC, 2);
101 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
102 SelectObject(hDC, 2);
103 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (7335, 8329);
    lppt[1] = (7335, 8179);
    rclBounds = RECT(7335, 8179, 7335, 8329);
104 RestoreDC(hDC, -1);
105 SetROP2(hDC, R2_COPYPEN);
106 SaveDC(hDC);
107 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
108 DeleteObject(hDC, 2);
109 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
110 SelectObject(hDC, 2);
111 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13609, 8329);
    lppt[1] = (13609, 8179);
    rclBounds = RECT(13609, 8179, 13609, 8329);
112 RestoreDC(hDC, -1);
113 SetROP2(hDC, R2_COPYPEN);
114 SaveDC(hDC);
115 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
116 DeleteObject(hDC, 2);
117 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
118 SelectObject(hDC, 2);
119 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13609, 8329);
    lppt[1] = (13609, 8179);
    rclBounds = RECT(13609, 8179, 13609, 8329);
120 RestoreDC(hDC, -1);
121 SetROP2(hDC, R2_COPYPEN);
122 SaveDC(hDC);

```

```

123 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
124 DeleteObject(hDC, 2);
125 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
126 SelectObject(hDC, 2);
127 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (1061, 8179);
    lppt[1] = (13609, 8179);
    rclBounds = RECT(1061, 8179, 13609, 8179);
128 RestoreDC(hDC, -1);
129 SetROP2(hDC, R2_COPYPEN);
130 SaveDC(hDC);
131 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
132 DeleteObject(hDC, 2);
133 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
134 SelectObject(hDC, 2);
135 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 8179);
    lppt[1] = (1061, 8179);
    rclBounds = RECT(911, 8179, 1061, 8179);
136 RestoreDC(hDC, -1);
137 SetROP2(hDC, R2_COPYPEN);
138 SaveDC(hDC);
139 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
140 DeleteObject(hDC, 2);
141 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
142 SelectObject(hDC, 2);
143 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 8179);
    lppt[1] = (1061, 8179);
    rclBounds = RECT(911, 8179, 1061, 8179);
144 RestoreDC(hDC, -1);
145 SetROP2(hDC, R2_COPYPEN);
146 SaveDC(hDC);
147 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
148 DeleteObject(hDC, 2);
149 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
150 SelectObject(hDC, 2);
151 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 6617);
    lppt[1] = (1061, 6617);
    rclBounds = RECT(911, 6617, 1061, 6617);
152 RestoreDC(hDC, -1);
153 SetROP2(hDC, R2_COPYPEN);
154 SaveDC(hDC);
155 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
156 DeleteObject(hDC, 2);
157 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
158 SelectObject(hDC, 2);
159 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 6617);
    lppt[1] = (1061, 6617);
    rclBounds = RECT(911, 6617, 1061, 6617);
160 RestoreDC(hDC, -1);
161 SetROP2(hDC, R2_COPYPEN);
162 SaveDC(hDC);
163 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
164 DeleteObject(hDC, 2);
165 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
166 SelectObject(hDC, 2);
167 Polyline(hDC, lppt, 2);
    // Parameter(s):

```

```

    const POINT* lppt;
    lppt[0] = (911, 5056);
    lppt[1] = (1061, 5056);
    rclBounds = RECT(911, 5056, 1061, 5056);
168 RestoreDC(hDC, -1);
169 SetROP2(hDC, R2_COPYPEN);
170 SaveDC(hDC);
171 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
172 DeleteObject(hDC, 2);
173 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
174 SelectObject(hDC, 2);
175 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 5056);
    lppt[1] = (1061, 5056);
    rclBounds = RECT(911, 5056, 1061, 5056);
176 RestoreDC(hDC, -1);
177 SetROP2(hDC, R2_COPYPEN);
178 SaveDC(hDC);
179 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
180 DeleteObject(hDC, 2);
181 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
182 SelectObject(hDC, 2);
183 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 3496);
    lppt[1] = (1061, 3496);
    rclBounds = RECT(911, 3496, 1061, 3496);
184 RestoreDC(hDC, -1);
185 SetROP2(hDC, R2_COPYPEN);
186 SaveDC(hDC);
187 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
188 DeleteObject(hDC, 2);
189 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
190 SelectObject(hDC, 2);
191 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 3496);
    lppt[1] = (1061, 3496);
    rclBounds = RECT(911, 3496, 1061, 3496);
192 RestoreDC(hDC, -1);
193 SetROP2(hDC, R2_COPYPEN);
194 SaveDC(hDC);
195 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
196 DeleteObject(hDC, 2);
197 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
198 SelectObject(hDC, 2);
199 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 1935);
    lppt[1] = (1061, 1935);
    rclBounds = RECT(911, 1935, 1061, 1935);
200 RestoreDC(hDC, -1);
201 SetROP2(hDC, R2_COPYPEN);
202 SaveDC(hDC);
203 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
204 DeleteObject(hDC, 2);
205 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
206 SelectObject(hDC, 2);
207 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 1935);
    lppt[1] = (1061, 1935);
    rclBounds = RECT(911, 1935, 1061, 1935);
208 RestoreDC(hDC, -1);
209 SetROP2(hDC, R2_COPYPEN);

```

```

210 SaveDC(hDC);
211 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
212 DeleteObject(hDC, 2);
213 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
214 SelectObject(hDC, 2);
215 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 374);
    lppt[1] = (1061, 374);
    rclBounds = RECT(911, 374, 1061, 374);
216 RestoreDC(hDC, -1);
217 SetROP2(hDC, R2_COPYPEN);
218 SaveDC(hDC);
219 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
220 DeleteObject(hDC, 2);
221 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
222 SelectObject(hDC, 2);
223 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (911, 374);
    lppt[1] = (1061, 374);
    rclBounds = RECT(911, 374, 1061, 374);
224 RestoreDC(hDC, -1);
225 SetROP2(hDC, R2_COPYPEN);
226 SaveDC(hDC);
227 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
228 DeleteObject(hDC, 2);
229 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
230 SelectObject(hDC, 2);
231 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (1061, 8179);
    lppt[1] = (1061, 374);
    rclBounds = RECT(1061, 374, 1061, 8179);
232 RestoreDC(hDC, -1);
233 SetROP2(hDC, R2_COPYPEN);
234 SaveDC(hDC);
235 SelectObject(hDC, (HGDIOBJ)LTGRAY_BRUSH);
236 DeleteObject(hDC, 1);
237 CreateBrushIndirect(&lb); // EMRCREATEBRUSHINDIRECT.ihBrush = 1
    // Parameter(s):
    LOGBRUSH lb;
    lb.lbStyle = BS_SOLID;
    lb.lbColor = RGB(0, 69, 134);
    lb.lbHatch = 0;
238 SelectObject(hDC, 1);
239 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
240 DeleteObject(hDC, 2);
241 CreatePen(PS_NULL, 0, RGB(255, 255, 255)); // EMRCREATEPEN.ihPen = 2
242 SelectObject(hDC, 2);
243 Polygon(hDC, lppt, 5);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (2629, 8179);
    lppt[1] = (5767, 8179);
    lppt[2] = (5767, 5056);
    lppt[3] = (2629, 5056);
    lppt[4] = (2629, 8179);
    rclBounds = RECT(2629, 5056, 5767, 8179);
244 RestoreDC(hDC, -1);
245 SetROP2(hDC, R2_COPYPEN);
246 SaveDC(hDC);
247 SelectObject(hDC, (HGDIOBJ)LTGRAY_BRUSH);
248 DeleteObject(hDC, 1);
249 CreateBrushIndirect(&lb); // EMRCREATEBRUSHINDIRECT.ihBrush = 1
    // Parameter(s):
    LOGBRUSH lb;
    lb.lbStyle = BS_SOLID;

```

```

        lb.lbColor = RGB(0, 69, 134);
        lb.lbHatch = 0;
250 SelectObject(hDC, 1);
251 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
252 DeleteObject(hDC, 2);
253 CreatePen(PS_NULL, 0, RGB(255, 255, 255)); // EMRCREATEPEN.ihPen = 2
254 SelectObject(hDC, 2);
255 Polygon(hDC, lppt, 5);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (8903, 8179);
        lppt[1] = (12041, 8179);
        lppt[2] = (12041, 1935);
        lppt[3] = (8903, 1935);
        lppt[4] = (8903, 8179);
        rclBounds = RECT(8903, 1935, 12041, 8179);
256 RestoreDC(hDC, -1);
257 SetROP2(hDC, R2_COPYPEN);
258 SaveDC(hDC);
259 CreateFontIndirect(&lf); // Liberation Sans, ihFont = 3
        // Parameter(s):
        LOGFONT lf;
        lf.lfHeight = -353;
        lf.lfWidth = 0;
        lf.lfEscapement = 0;
        lf.lfOrientation = 0;
        lf.lfWeight = FW_NORMAL | FW_REGULAR;
        lf.lfItalic = FALSE;
        lf.lfUnderline = FALSE;
        lf.lfStrikeOut = FALSE;
        lf.lfCharSet = ANSI_CHARSET;
        lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
        lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
        lf.lfQuality = DEFAULT_QUALITY;
        lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
        lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
260 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
261 SetTextColor(hDC, RGB(0, 0, 0));
262 SelectObject(hDC, 3);
263 ExtTextOutW(hDC, 4081, 8747, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("A"), 1, lpDx);
        // Parameter(s):
        int* lpDx;
        lpDx[0] = 235;
264 RestoreDC(hDC, -1);
265 SetROP2(hDC, R2_COPYPEN);
266 SaveDC(hDC);
267 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
268 DeleteObject(hDC, 3);
269 CreateFontIndirect(&lf); // Liberation Sans, ihFont = 3
        // Parameter(s):
        LOGFONT lf;
        lf.lfHeight = -353;
        lf.lfWidth = 0;
        lf.lfEscapement = 0;
        lf.lfOrientation = 0;
        lf.lfWeight = FW_NORMAL | FW_REGULAR;
        lf.lfItalic = FALSE;
        lf.lfUnderline = FALSE;
        lf.lfStrikeOut = FALSE;
        lf.lfCharSet = ANSI_CHARSET;
        lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
        lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
        lf.lfQuality = DEFAULT_QUALITY;
        lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
        lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
270 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
271 SetTextColor(hDC, RGB(0, 0, 0));
272 SelectObject(hDC, 3);
273 ExtTextOutW(hDC, 10355, 8747, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("B"), 1, lpDx);
        // Parameter(s):
        int* lpDx;

```

```

    lpDx[0] = 235;
274 RestoreDC(hDC, -1);
275 SetROP2(hDC, R2_COPYPEN);
276 SaveDC(hDC);
277 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
278 DeleteObject(hDC, 3);
279 CreateFontIndirect(&lf);    // Liberation Sans, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
280 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
281 SetTextColor(hDC, RGB(0, 0, 0));
282 SelectObject(hDC, 3);
283 ExtTextOutW(hDC, 615, 8304, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("0"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 196;
284 RestoreDC(hDC, -1);
285 SetROP2(hDC, R2_COPYPEN);
286 SaveDC(hDC);
287 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
288 DeleteObject(hDC, 3);
289 CreateFontIndirect(&lf);    // Liberation Sans, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
290 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
291 SetTextColor(hDC, RGB(0, 0, 0));
292 SelectObject(hDC, 3);
293 ExtTextOutW(hDC, 321, 6742, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("0,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 196;
    lpDx[1] = 98;
    lpDx[2] = 196;
294 RestoreDC(hDC, -1);
295 SetROP2(hDC, R2_COPYPEN);
296 SaveDC(hDC);
297 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
298 DeleteObject(hDC, 3);
299 CreateFontIndirect(&lf);    // Liberation Sans, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;

```

```

    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
300 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
301 SetTextColor(hDC, RGB(0, 0, 0));
302 SelectObject(hDC, 3);
303 ExtTextOutW(hDC, 615, 5181, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("1"), 1, lpDx);
    // Parameter(s):
    int* lpDx;
    lpDx[0] = 196;
304 RestoreDC(hDC, -1);
305 SetROP2(hDC, R2_COPYPEN);
306 SaveDC(hDC);
307 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
308 DeleteObject(hDC, 3);
309 CreateFontIndirect(&lf);    // Liberation Sans, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
310 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
311 SetTextColor(hDC, RGB(0, 0, 0));
312 SelectObject(hDC, 3);
313 ExtTextOutW(hDC, 321, 3621, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("1,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx;
    lpDx[0] = 196;
    lpDx[1] = 98;
    lpDx[2] = 196;
314 RestoreDC(hDC, -1);
315 SetROP2(hDC, R2_COPYPEN);
316 SaveDC(hDC);
317 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
318 DeleteObject(hDC, 3);
319 CreateFontIndirect(&lf);    // Liberation Sans, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;

```

```

    lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
320 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
321 SetTextColor(hDC, RGB(0, 0, 0));
322 SelectObject(hDC, 3);
323 ExtTextOutW(hDC, 615, 2060, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("2"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 196;
324 RestoreDC(hDC, -1);
325 SetROP2(hDC, R2_COPYPEN);
326 SaveDC(hDC);
327 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
328 DeleteObject(hDC, 3);
329 CreateFontIndirect(&lf);    // Liberation Sans, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
330 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
331 SetTextColor(hDC, RGB(0, 0, 0));
332 SelectObject(hDC, 3);
333 ExtTextOutW(hDC, 321, 499, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("2,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 196;
    lpDx[1] = 98;
    lpDx[2] = 196;
334 RestoreDC(hDC, -1);
335 SetROP2(hDC, R2_COPYPEN);
336 SaveDC(hDC);
337 SelectObject(hDC, (HGDIOBJ)LTGRAY_BRUSH);
338 DeleteObject(hDC, 1);
339 CreateBrushIndirect(&lb);    // EMRCREATEBRUSHINDIRECT.ihBrush = 1
    // Parameter(s):
    LOGBRUSH lb;
    lb.lbStyle = BS_SOLID;
    lb.lbColor = RGB(0, 69, 134);
    lb.lbHatch = 0;
340 SelectObject(hDC, 1);
341 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
342 DeleteObject(hDC, 2);
343 CreatePen(PS_NULL, 0, RGB(255, 255, 255));    // EMRCREATEPEN.ihPen = 2
344 SelectObject(hDC, 2);
345 Polygon(hDC, lppt, 6);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (14152, 4604);
    lppt[1] = (14046, 4604);
    lppt[2] = (14046, 4394);
    lppt[3] = (14257, 4394);
    lppt[4] = (14257, 4604);
    lppt[5] = (14152, 4604);
    rclBounds = RECT(14046, 4394, 14257, 4604);
346 RestoreDC(hDC, -1);
347 SetROP2(hDC, R2_COPYPEN);
348 SaveDC(hDC);
349 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
350 DeleteObject(hDC, 3);
351 CreateFontIndirect(&lf);    // Liberation Sans, ihFont = 3

```


```

// Parameter(s):
LOGFONT lf;
lf.lfHeight = -353;
lf.lfWidth = 0;
lf.lfEscapement = 0;
lf.lfOrientation = 0;
lf.lfWeight = FW_NORMAL | FW_REGULAR;
lf.lfItalic = FALSE;
lf.lfUnderline = FALSE;
lf.lfStrikeOut = FALSE;
lf.lfCharSet = ANSI_CHARSET;
lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
lf.lfQuality = DEFAULT_QUALITY;
lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Liberation Sans"));
352 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
353 SetTextColor(hDC, RGB(0, 0, 0));
354 SelectObject(hDC, 3);
355 ExtTextOutW(hDC, 14357, 4622, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("Average"), 7,
lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 235;
    lpDx[1] = 176;
    lpDx[2] = 196;
    lpDx[3] = 118;
    lpDx[4] = 196;
    lpDx[5] = 196;
    lpDx[6] = 196;
356 RestoreDC(hDC, -1);
357 SetROP2(hDC, R2_COPYPEN);
358 GdiComment(██████████);

```

2) Image (LO-XLSX Calc to Writer)

2) LO saved XLSX Calc to Writer

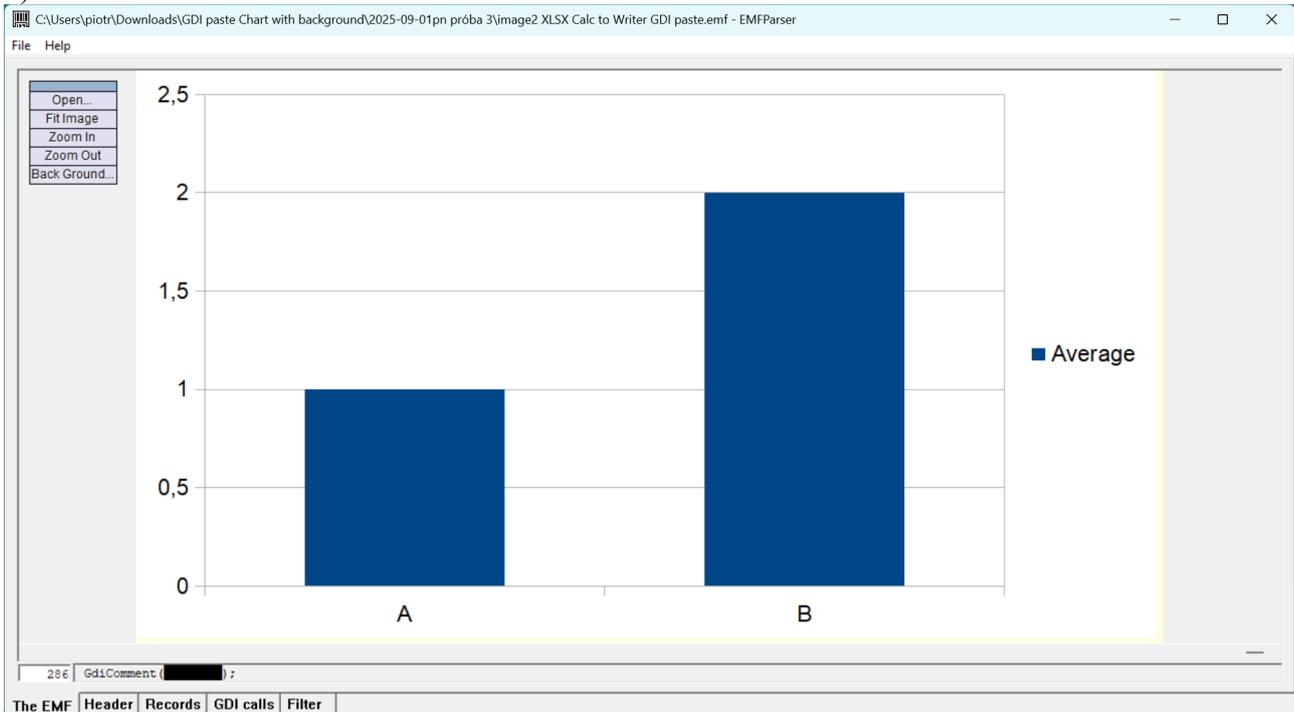

2) Header

EMF Header Info

```
filename:      C:\Users\piotr\Downloads\GDI paste Chart with background\2025-09-01pn
próba 3\image2 XLSX Calc to Writer GDI paste.emf
iType:        1
nSize:        108
rclBounds:    (0, 0) - (906, 509)
rclFrame:     (0, 0) - (15998, 8998)
dSignature:   0x464D4520
nVersion:     0x00010000
nBytes:       8412
nRecords:    287
nHandles:     4
sReserved:    0
nDescription: 0
offDescription: 0
nPalEntries:  0 (0x0000)
szlDevice:    907, 510
szlMillimeters: 159, 89
```

2) Records

EMF Records List

Number of Records: 288

iType	nSize	Data
0 EMR_HEADER 00 00 00l..... 00 00 00 □...ý..... 00 01 00 ~>..&#.. EMF.... 00 00 00 ũ 01 00 00□...p... 00 00 00 □...Y.....öp..□_..	0x006C(108)	01 00 00 00 6C 00 00 00-00 00 00 00 00 8A 03 00 00 FD 01 00 00-00 00 00 00 00 7E 3E 00 00 26 23 00 00-20 45 4D 46 00 DC 20 00 00 1F 01 00 00-04 00 00 00 00 00 00 00 00 00 00 00 00-8B 03 00 00 FE 9F 00 00 00 59 00 00 00-00 00 00 00 00 00 00 00 00 F6 70 02 00-86 5F 01 00
1 EMR_GDICOMMENT 4D 46 2B F....,.... EMF+ 10 C0 DB .@.....ÀÛ□...□...	0x002C(44)	46 00 00 00 2C 00 00 00-20 00 00 00 45 01 40 01 00 1C 00 00 00-10 00 00 00 02 01 00 00 00 8E 00 00 00-8F 00 00 00
2 EMR_GDICOMMENT 4D 46 2B F...L...@...EMF+ 40 09 00 "@.....@.. 00 00 00\$@..... 00 00 00!@..... .@.....	0x004C(76)	46 00 00 00 4C 00 00 00-40 00 00 00 45 22 40 00 00 0C 00 00 00-00 00 00 00 1E 0C 00 00 00 00 00 00 00-24 40 00 01 0C 00 00 00 00 21 40 00 00-0C 00 00 00 00 04 40 00 00 0C 00 00 00-00 00 00 00
3 EMR_SETMAPMODE	0x000C(12)	11 00 00 00 0C 00 00 00-08 00 00 00
4 EMR_SETVIEWPORTEXTEX 00 00 00□...□...	0x0010(16)	0B 00 00 00 10 00 00 00-90 00 00 00 90
5 EMR_SETWINDOWEXTEX 09 00 00i...i...	0x0010(16)	09 00 00 00 10 00 00 00-EC 09 00 00 EC
6 EMR_SETVIEWPORTORTEX 00 00 00	0x0010(16)	0C 00 00 00 10 00 00 00-00 00 00 00 00
7 EMR_SETWINDOWORTEX 00 00 00	0x0010(16)	0A 00 00 00 10 00 00 00-00 00 00 00 00
8 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
9 EMR_SETBKMODE	0x000C(12)	12 00 00 00 0C 00 00 00-01 00 00 00
10 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
11 EMR_CREATEBRUSHINDIRECT 00 00 00 r..... ÿÿÿ.....	0x0018(24)	27 00 00 00 18 00 00 00-01 00 00 00 00 FF FF FF 00 00 00 00 00-

12	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
%.....			
13	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 05
00 00 00 &.....			00 00 00 00 00 00 00 00-FF FF FF 00
.....ÿÿÿ.			
14	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
15	EMR_POLYGON	0x004C(76)	03 00 00 00 4C 00 00 00-00 00 00 00 00
00 00 00L.....			7E 3E 00 00 26 23 00 00-06 00 00 00 3F
1F 00 00 ~>..&#.....?...			26 23 00 00 00 00 00 00-26 23 00 00 00
00 00 00 &#.....&#.....			00 00 00 00 7E 3E 00 00-00 00 00 00 7E
3E 00 00~>.....~>..			26 23 00 00 3F 1F 00 00-26 23 00 00
&#..?...&#..			
16	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
"......ÿÿÿÿ			
17	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
18	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
19	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
20	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
21	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			00 00 00 00 00 00 00 00-00-B3 B3 B3 00
..... ^{3 3 3} .			
22	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
23	EMR_POLYLINE	0x004C(76)	04 00 00 00 4C 00 00 00-24 04 00 00 76
01 00 00L...\$...v...			2A 35 00 00 F4 1F 00 00-06 00 00 00 A7
1C 00 00 *5...ô.....\$...			F4 1F 00 00 24 04 00 00-F4 1F 00 00 24
04 00 00 ô...\$...ô...\$...			76 01 00 00 2A 35 00 00-76 01 00 00 2A
35 00 00 v...*5..v...*5..			F4 1F 00 00 A7 1C 00 00-F4 1F 00 00
ô...\$...ô...			
24	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
"......ÿÿÿÿ			
25	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
26	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
27	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
28	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			

29	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00	&.....		00 00 00 00 00 00 00 00-B3 B3 B3 00
 ^{3 3 3} .		
30	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
31	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 F3
1F 00 00,....\$.ó...		2A 35 00 00 F3 1F 00 00-02 00 00 00 2A
35 00 00	*5..ó.....*5..		F3 1F 00 00 24 04 00 00-F3 1F 00 00
ó...\$.ó...			
32	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
33	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
34	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
35	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
36	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
37	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00	&.....		00 00 00 00 00 00 00 00-B3 B3 B3 00
 ^{3 3 3} .		
38	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
39	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 D9
19 00 00,....\$.Û...		2A 35 00 00 D9 19 00 00-02 00 00 00 2A
35 00 00	*5..Û.....*5..		D9 19 00 00 24 04 00 00-D9 19 00 00
Û...\$.Û...			
40	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
41	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
42	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
43	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
44	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
45	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00	&.....		00 00 00 00 00 00 00 00-B3 B3 B3 00
 ^{3 3 3} .		
46	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
47	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 C0
13 00 00,....\$.À...		

35 00 00 *5..À.....*5..		2A 35 00 00 C0 13 00 00-02 00 00 00 2A
À...\$...À...		C0 13 00 00 24 04 00 00-C0 13 00 00
48 EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
49 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
50 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
51 EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
52 EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
53 EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00-B3 B3 B3 00
54 EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
55 EMR_POLYLINE 0D 00 00,...\$...\$... 35 00 00 *5..\$.....*5.. \$...\$...\$...	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 A7 2A 35 00 00 A7 0D 00 00-02 00 00 00 2A A7 0D 00 00 24 04 00 00-A7 0D 00 00
56 EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
57 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
58 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
59 EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
60 EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
61 EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00-B3 B3 B3 00
62 EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
63 EMR_POLYLINE 07 00 00,...\$...□... 35 00 00 *5..□.....*5.. □...\$...□...	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 8E 2A 35 00 00 8E 07 00 00-02 00 00 00 2A 8E 07 00 00 24 04 00 00-8E 07 00 00
64 EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
65 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00

66	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
67	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
68	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
69	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-02 B3 B3 B3 00
70	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
71	EMR_POLYLINE 01 00 00\$,...u... 35 00 00 *5...u.....*5... u...\$,...u...	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 75 2A 35 00 00 75 01 00 00-02 00 00 00 2A 75 01 00 00 24 04 00 00-75 01 00 00
72	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
73	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
74	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
75	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
76	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
77	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-02 B3 B3 B3 00
78	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
79	EMR_POLYLINE 1F 00 00\$,...ó... 04 00 00 \$...□\$... □ ..\$,...ó...	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 F3 24 04 00 00 89 20 00 00-02 00 00 00 24 89 20 00 00 24 04 00 00-F3 1F 00 00
80	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
81	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
82	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
83	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
84	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
85	EMR_CREATEPEN 00 00 00 &.....	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00

..... ^{3 3 3} .		00 00 00 00 00 00 00 00-B3 B3 B3 00
86 EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
87 EMR_POLYLINE 1F 00 00\$...ó... 1C 00 00 \$...□\$... □ ..\$...ó...	0x002C(44)	04 00 00 00 2C 00 00 00-A7 1C 00 00 F3 A7 1C 00 00 89 20 00 00-02 00 00 00 A7 89 20 00 00 A7 1C 00 00-F3 1F 00 00
88 EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
89 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
90 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
91 EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
92 EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
93 EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
94 EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
95 EMR_POLYLINE 1F 00 00*5...ó... 35 00 00 *5...□*5... □ ..*5...ó...	0x002C(44)	04 00 00 00 2C 00 00 00-2A 35 00 00 F3 2A 35 00 00 89 20 00 00-02 00 00 00 2A 89 20 00 00 2A 35 00 00-F3 1F 00 00
96 EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
97 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
98 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
99 EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
100 EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
101 EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
102 EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
103 EMR_POLYLINE 1F 00 00\$...ó... 04 00 00 *5...ó.....\$...	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 F3 2A 35 00 00 F3 1F 00 00-02 00 00 00 24

			F3 1F 00 00 2A 35 00 00-F3 1F 00 00
ó...*5..ó...			
104	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
105	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
106	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
107	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
108	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
109	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00 B3 B3 B3 00
110	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
111	EMR_POLYLINE 1F 00 00,...□...ó... 03 00 00 \$...ó.....□... ó...\$...ó...	0x002C(44)	04 00 00 00 2C 00 00 00-8E 03 00 00 F3 24 04 00 00 F3 1F 00 00-02 00 00 00 8E F3 1F 00 00 24 04 00 00-F3 1F 00 00
112	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
113	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
114	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
115	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
116	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
117	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-00 B3 B3 B3 00
118	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
119	EMR_POLYLINE 19 00 00,...□...Û... 03 00 00 \$...Û.....□... Û...\$...Û...	0x002C(44)	04 00 00 00 2C 00 00 00-8E 03 00 00 D9 24 04 00 00 D9 19 00 00-02 00 00 00 8E D9 19 00 00 24 04 00 00-D9 19 00 00
120	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
121	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
122	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-

123	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
124	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
125	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
126	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
127	EMR_POLYLINE 13 00 00□...À... 03 00 00 \$...À.....□... À...\$...À...	0x002C(44)	04 00 00 00 2C 00 00 00-8E 03 00 00 C0 24 04 00 00 C0 13 00 00-02 00 00 00 8E C0 13 00 00 24 04 00 00-C0 13 00 00
128	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
129	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
130	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
131	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
132	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
133	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00
134	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
135	EMR_POLYLINE 0D 00 00□...\$... 03 00 00 \$...\$.....□... \$...\$...\$...	0x002C(44)	04 00 00 00 2C 00 00 00-8E 03 00 00 A7 24 04 00 00 A7 0D 00 00-02 00 00 00 8E A7 0D 00 00 24 04 00 00-A7 0D 00 00
136	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
137	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
138	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
139	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
140	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
141	EMR_CREATEPEN 00 00 00 &..... ^{3 3 3} .	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-B3 B3 B3 00

142	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
143	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8E 03 00 00 8E
07 00 00□...□...			24 04 00 00 8E 07 00 00-02 00 00 00 8E
03 00 00 \$...□.....□...			8E 07 00 00 24 04 00 00-8E 07 00 00
□...\$...□...			
144	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
145	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
146	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
147	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
148	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
149	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			00 00 00 00 00 00 00 00-B3 B3 B3 00
..... ^{3 3 3} .			
150	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
151	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-8E 03 00 00 75
01 00 00□...u...			24 04 00 00 75 01 00 00-02 00 00 00 8E
03 00 00 \$...u.....□...			75 01 00 00 24 04 00 00-75 01 00 00
u...\$...u...			
152	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
153	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
154	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
155	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€			
156	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....			
157	EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 00
00 00 00 &.....			00 00 00 00 00 00 00 00-B3 B3 B3 00
..... ^{3 3 3} .			
158	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....			
159	EMR_POLYLINE	0x002C(44)	04 00 00 00 2C 00 00 00-24 04 00 00 75
01 00 00\$...u...			24 04 00 00 F3 1F 00 00-02 00 00 00 24
04 00 00 \$...ó.....\$...			F3 1F 00 00 24 04 00 00-75 01 00 00
ó...\$...u...			

160	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
161	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
162	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
163	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 80
164	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00
165	EMR_CREATEBRUSHINDIRECT 00 00 00 '..... .E□.....	0x0018(24)	27 00 00 00 18 00 00 00-01 00 00 00 00 00 45 86 00 00 00 00 00-
166	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
167	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
168	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
169	EMR_CREATEPEN 00 00 00 &.....ÿÿÿÿ.	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 05 00 00 00 00 00 00 00 00-FF FF FF 00
170	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
171	EMR_POLYGON 13 00 00D...D...À... 0A 00 00 □...ó.....D... 16 00 00 ó...□...ó...□... 0A 00 00 À...D...À...D... ó...	0x0044(68)	03 00 00 00 44 00 00 00-44 0A 00 00 C0 86 16 00 00 F3 1F 00 00-05 00 00 00 44 F3 1F 00 00 86 16 00 00-F3 1F 00 00 86 C0 13 00 00 44 0A 00 00-C0 13 00 00 44 F3 1F 00 00
172	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
173	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
174	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
175	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 80
176	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00
177	EMR_CREATEBRUSHINDIRECT 00 00 00 '..... .E□.....	0x0018(24)	27 00 00 00 18 00 00 00-01 00 00 00 00 00 45 86 00 00 00 00 00-
178	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00

.....		00 00 00 00 00 00 00 00-00 00 00 00
258 EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
.....		
259 EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
.....		
260 EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-03 00 00 00
%.....		
261 EMR_EXTTEXTOUTW	0x0060(96)	54 00 00 00 60 00 00 00-40 01 00 00 F2
01 00 00 T...`...@...ò...		29 03 00 00 75 03 00 00-01 00 00 00 00
00 00 00)...u.....		00 00 00 00 40 01 00 00-F2 01 00 00 03
00 00 00@...ò.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00 L.....		00 00 00 00 00 00 00 00-54 00 00 00 32
00 2C 00T...2.,.		35 00 00 00 C4 00 00 00-62 00 00 00 C4
00 00 00 5...Ä...b...Ä...		
262 EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ		
263 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....		
264 EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....		
265 EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 80
%.....€		
266 EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00
(.....		
267 EMR_CREATEBRUSHINDIRECT	0x0018(24)	27 00 00 00 18 00 00 00-01 00 00 00 00
00 00 00 T.....		00 45 86 00 00 00 00 00-
.E□.....		
268 EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
%.....		
269 EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-07 00 00 80
%.....€		
270 EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-02 00 00 00
(.....		
271 EMR_CREATEPEN	0x001C(28)	26 00 00 00 1C 00 00 00-02 00 00 00 05
00 00 00 &.....		00 00 00 00 00 00 00 00-FF FF FF 00
.....ÿÿÿ.		
272 EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-02 00 00 00
%.....		
273 EMR_POLYGON	0x004C(76)	03 00 00 00 4C 00 00 00-DD 36 00 00 29
11 00 00L...Ý6..)...		B0 37 00 00 FB 11 00 00-06 00 00 00 47
37 00 00 °7..û.....G7..		FB 11 00 00 DD 36 00 00-FB 11 00 00 DD
36 00 00 û...Ý6..û...Ý6..		29 11 00 00 B0 37 00 00-29 11 00 00 B0
37 00 00)...°7..)....°7..		

283	EMR_EXTTEXTOUTW	0x0078(120)	54 00 00 00 78 00 00 00-14 38 00 00 0D
12 00 00	T...x...8.....		34 3D 00 00 90 13 00 00-01 00 00 00 00
00 00 00	4=..□.....		00 00 00 00 14 38 00 00-0D 12 00 00 07
00 00 008.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00	L.....		00 00 00 00 00 00 00 00-5C 00 00 00 41
00 76 00\...A.v.		65 00 72 00 61 00 67 00-65 00 00 00 EB
00 00 00	e.r.a.g.e...ë...		B0 00 00 00 C4 00 00 00-76 00 00 00 C4
00 00 00	°...Ä...v...Ä...		C4 00 00 00 C4 00 00 00-
Ä...Ä...			
284	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
285	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
286	EMR_GDICOMMENT	0x001C(28)	46 00 00 00 1C 00 00 00-10 00 00 00 45
4D 46 2B F.....EMF+			02 40 00 00 0C 00 00 00-00 00 00 00
.@.....			
287	EMR_EOF	0x0014(20)	0E 00 00 00 14 00 00 00-00 00 00 00 10
00 00 00			14 00 00 00
....			

2) GDI calls

EMF GDI Calls

Number of Calls: 286

```
1      GdiComment(██████████);
2      GdiComment(██████████);
3      SetMapMode(hDC, MM_ANISOTROPIC);
4      SetViewportExtEx(hDC, 144, 144, NULL);
5      SetWindowExtEx(hDC, 2540, 2540, NULL);
6      SetViewportOrgEx(hDC, 0, 0, NULL);
7      SetWindowOrgEx(hDC, 0, 0, NULL);
8      SetROP2(hDC, R2_COPYPEN);
9      SetBkMode(hDC, TRANSPARENT);
10     SaveDC(hDC);
11     CreateBrushIndirect(&lb);      // EMRCREATEBRUSHINDIRECT.ihBrush = 1
        // Parameter(s):
        LOGBRUSH lb;
        lb.lbStyle = BS_SOLID;
        lb.lbColor = RGB(255, 255, 255);
        lb.lbHatch = 0;
12     SelectObject(hDC, 1);
13     CreatePen(PS_NULL, 0, RGB(255, 255, 255));      // EMRCREATEPEN.ihPen = 2
14     SelectObject(hDC, 2);
15     Polygon(hDC, lppt, 6);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (7999, 8998);
        lppt[1] = (0, 8998);
        lppt[2] = (0, 0);
        lppt[3] = (15998, 0);
        lppt[4] = (15998, 8998);
        lppt[5] = (7999, 8998);
        rclBounds = RECT(0, 0, 15998, 8998);
16     RestoreDC(hDC, -1);
17     SetROP2(hDC, R2_COPYPEN);
18     SaveDC(hDC);
19     SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
20     DeleteObject(hDC, 2);
21     CreatePen(PS_SOLID, 0, RGB(179, 179, 179));      // EMRCREATEPEN.ihPen = 2
22     SelectObject(hDC, 2);
23     Polyline(hDC, lppt, 6);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (7335, 8180);
        lppt[1] = (1060, 8180);
        lppt[2] = (1060, 374);
        lppt[3] = (13610, 374);
        lppt[4] = (13610, 8180);
        lppt[5] = (7335, 8180);
        rclBounds = RECT(1060, 374, 13610, 8180);
24     RestoreDC(hDC, -1);
25     SetROP2(hDC, R2_COPYPEN);
26     SaveDC(hDC);
27     SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
28     DeleteObject(hDC, 2);
29     CreatePen(PS_SOLID, 0, RGB(179, 179, 179));      // EMRCREATEPEN.ihPen = 2
30     SelectObject(hDC, 2);
31     Polyline(hDC, lppt, 2);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (13610, 8179);
        lppt[1] = (1060, 8179);
        rclBounds = RECT(1060, 8179, 13610, 8179);
32     RestoreDC(hDC, -1);
33     SetROP2(hDC, R2_COPYPEN);
34     SaveDC(hDC);
35     SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
```

```

36 DeleteObject(hDC, 2);
37 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
38 SelectObject(hDC, 2);
39 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13610, 6617);
    lppt[1] = (1060, 6617);
    rclBounds = RECT(1060, 6617, 13610, 6617);
40 RestoreDC(hDC, -1);
41 SetROP2(hDC, R2_COPYPEN);
42 SaveDC(hDC);
43 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
44 DeleteObject(hDC, 2);
45 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
46 SelectObject(hDC, 2);
47 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13610, 5056);
    lppt[1] = (1060, 5056);
    rclBounds = RECT(1060, 5056, 13610, 5056);
48 RestoreDC(hDC, -1);
49 SetROP2(hDC, R2_COPYPEN);
50 SaveDC(hDC);
51 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
52 DeleteObject(hDC, 2);
53 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
54 SelectObject(hDC, 2);
55 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13610, 3495);
    lppt[1] = (1060, 3495);
    rclBounds = RECT(1060, 3495, 13610, 3495);
56 RestoreDC(hDC, -1);
57 SetROP2(hDC, R2_COPYPEN);
58 SaveDC(hDC);
59 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
60 DeleteObject(hDC, 2);
61 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
62 SelectObject(hDC, 2);
63 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13610, 1934);
    lppt[1] = (1060, 1934);
    rclBounds = RECT(1060, 1934, 13610, 1934);
64 RestoreDC(hDC, -1);
65 SetROP2(hDC, R2_COPYPEN);
66 SaveDC(hDC);
67 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
68 DeleteObject(hDC, 2);
69 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
70 SelectObject(hDC, 2);
71 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13610, 373);
    lppt[1] = (1060, 373);
    rclBounds = RECT(1060, 373, 13610, 373);
72 RestoreDC(hDC, -1);
73 SetROP2(hDC, R2_COPYPEN);
74 SaveDC(hDC);
75 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
76 DeleteObject(hDC, 2);
77 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
78 SelectObject(hDC, 2);
79 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;

```

```

    lppt[0] = (1060, 8329);
    lppt[1] = (1060, 8179);
    rclBounds = RECT(1060, 8179, 1060, 8329);
80 RestoreDC(hDC, -1);
81 SetROP2(hDC, R2_COPYPEN);
82 SaveDC(hDC);
83 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
84 DeleteObject(hDC, 2);
85 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
86 SelectObject(hDC, 2);
87 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (7335, 8329);
    lppt[1] = (7335, 8179);
    rclBounds = RECT(7335, 8179, 7335, 8329);
88 RestoreDC(hDC, -1);
89 SetROP2(hDC, R2_COPYPEN);
90 SaveDC(hDC);
91 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
92 DeleteObject(hDC, 2);
93 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
94 SelectObject(hDC, 2);
95 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (13610, 8329);
    lppt[1] = (13610, 8179);
    rclBounds = RECT(13610, 8179, 13610, 8329);
96 RestoreDC(hDC, -1);
97 SetROP2(hDC, R2_COPYPEN);
98 SaveDC(hDC);
99 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
100 DeleteObject(hDC, 2);
101 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
102 SelectObject(hDC, 2);
103 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (1060, 8179);
    lppt[1] = (13610, 8179);
    rclBounds = RECT(1060, 8179, 13610, 8179);
104 RestoreDC(hDC, -1);
105 SetROP2(hDC, R2_COPYPEN);
106 SaveDC(hDC);
107 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
108 DeleteObject(hDC, 2);
109 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
110 SelectObject(hDC, 2);
111 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (910, 8179);
    lppt[1] = (1060, 8179);
    rclBounds = RECT(910, 8179, 1060, 8179);
112 RestoreDC(hDC, -1);
113 SetROP2(hDC, R2_COPYPEN);
114 SaveDC(hDC);
115 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
116 DeleteObject(hDC, 2);
117 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
118 SelectObject(hDC, 2);
119 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (910, 6617);
    lppt[1] = (1060, 6617);
    rclBounds = RECT(910, 6617, 1060, 6617);
120 RestoreDC(hDC, -1);
121 SetROP2(hDC, R2_COPYPEN);
122 SaveDC(hDC);

```

```

123 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
124 DeleteObject(hDC, 2);
125 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
126 SelectObject(hDC, 2);
127 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (910, 5056);
    lppt[1] = (1060, 5056);
    rclBounds = RECT(910, 5056, 1060, 5056);
128 RestoreDC(hDC, -1);
129 SetROP2(hDC, R2_COPYPEN);
130 SaveDC(hDC);
131 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
132 DeleteObject(hDC, 2);
133 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
134 SelectObject(hDC, 2);
135 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (910, 3495);
    lppt[1] = (1060, 3495);
    rclBounds = RECT(910, 3495, 1060, 3495);
136 RestoreDC(hDC, -1);
137 SetROP2(hDC, R2_COPYPEN);
138 SaveDC(hDC);
139 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
140 DeleteObject(hDC, 2);
141 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
142 SelectObject(hDC, 2);
143 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (910, 1934);
    lppt[1] = (1060, 1934);
    rclBounds = RECT(910, 1934, 1060, 1934);
144 RestoreDC(hDC, -1);
145 SetROP2(hDC, R2_COPYPEN);
146 SaveDC(hDC);
147 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
148 DeleteObject(hDC, 2);
149 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
150 SelectObject(hDC, 2);
151 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (910, 373);
    lppt[1] = (1060, 373);
    rclBounds = RECT(910, 373, 1060, 373);
152 RestoreDC(hDC, -1);
153 SetROP2(hDC, R2_COPYPEN);
154 SaveDC(hDC);
155 SelectObject(hDC, (HGDI OBJ)BLACK_PEN);
156 DeleteObject(hDC, 2);
157 CreatePen(PS_SOLID, 0, RGB(179, 179, 179)); // EMRCREATEPEN.ihPen = 2
158 SelectObject(hDC, 2);
159 Polyline(hDC, lppt, 2);
    // Parameter(s):
    const POINT* lppt;
    lppt[0] = (1060, 8179);
    lppt[1] = (1060, 373);
    rclBounds = RECT(1060, 373, 1060, 8179);
160 RestoreDC(hDC, -1);
161 SetROP2(hDC, R2_COPYPEN);
162 SaveDC(hDC);
163 SelectObject(hDC, (HGDI OBJ)LTGRAY_BRUSH);
164 DeleteObject(hDC, 1);
165 CreateBrushIndirect(&lb); // EMRCREATEBRUSHINDIRECT.ihBrush = 1
    // Parameter(s):
    LOGBRUSH lb;
    lb.lbStyle = BS_SOLID;

```

```

        lb.lbColor = RGB(0, 69, 134);
        lb.lbHatch = 0;
166 SelectObject(hDC, 1);
167 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
168 DeleteObject(hDC, 2);
169 CreatePen(PS_NULL, 0, RGB(255, 255, 255)); // EMRCREATEPEN.ihPen = 2
170 SelectObject(hDC, 2);
171 Polygon(hDC, lppt, 5);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (2628, 8179);
        lppt[1] = (5766, 8179);
        lppt[2] = (5766, 5056);
        lppt[3] = (2628, 5056);
        lppt[4] = (2628, 8179);
        rclBounds = RECT(2628, 5056, 5766, 8179);
172 RestoreDC(hDC, -1);
173 SetROP2(hDC, R2_COPYPEN);
174 SaveDC(hDC);
175 SelectObject(hDC, (HGDIOBJ)LTGRAY_BRUSH);
176 DeleteObject(hDC, 1);
177 CreateBrushIndirect(&lb); // EMRCREATEBRUSHINDIRECT.ihBrush = 1
        // Parameter(s):
        LOGBRUSH lb;
        lb.lbStyle = BS_SOLID;
        lb.lbColor = RGB(0, 69, 134);
        lb.lbHatch = 0;
178 SelectObject(hDC, 1);
179 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
180 DeleteObject(hDC, 2);
181 CreatePen(PS_NULL, 0, RGB(255, 255, 255)); // EMRCREATEPEN.ihPen = 2
182 SelectObject(hDC, 2);
183 Polygon(hDC, lppt, 5);
        // Parameter(s):
        const POINT* lppt;
        lppt[0] = (8903, 8179);
        lppt[1] = (12041, 8179);
        lppt[2] = (12041, 1934);
        lppt[3] = (8903, 1934);
        lppt[4] = (8903, 8179);
        rclBounds = RECT(8903, 1934, 12041, 8179);
184 RestoreDC(hDC, -1);
185 SetROP2(hDC, R2_COPYPEN);
186 SaveDC(hDC);
187 CreateFontIndirect(&lf); // Arial, ihFont = 3
        // Parameter(s):
        LOGFONT lf;
        lf.lfHeight = -353;
        lf.lfWidth = 0;
        lf.lfEscapement = 0;
        lf.lfOrientation = 0;
        lf.lfWeight = FW_NORMAL | FW_REGULAR;
        lf.lfItalic = FALSE;
        lf.lfUnderline = FALSE;
        lf.lfStrikeOut = FALSE;
        lf.lfCharSet = ANSI_CHARSET;
        lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
        lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
        lf.lfQuality = DEFAULT_QUALITY;
        lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
        lstrcpy(lf.lfFaceName, _T("Arial"));
188 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
189 SetTextColor(hDC, RGB(0, 0, 0));
190 SelectObject(hDC, 3);
191 ExtTextOutW(hDC, 4080, 8747, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("A"), 1, lpDx);
        // Parameter(s):
        int* lpDx;
        lpDx[0] = 235;
192 RestoreDC(hDC, -1);
193 SetROP2(hDC, R2_COPYPEN);
194 SaveDC(hDC);

```

```

195 SelectObject(hDC, (HGDI OBJ) OEM_FIXED_FONT);
196 DeleteObject(hDC, 3);
197 CreateFontIndirect(&lf); // Arial, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Arial"));
198 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
199 SetTextColor(hDC, RGB(0, 0, 0));
200 SelectObject(hDC, 3);
201 ExtTextOutW(hDC, 10355, 8747, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("B"), 1, lpDx);
    // Parameter(s):
    int* lpDx;
    lpDx[0] = 235;
202 RestoreDC(hDC, -1);
203 SetROP2(hDC, R2_COPYPEN);
204 SaveDC(hDC);
205 SelectObject(hDC, (HGDI OBJ) OEM_FIXED_FONT);
206 DeleteObject(hDC, 3);
207 CreateFontIndirect(&lf); // Arial, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Arial"));
208 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
209 SetTextColor(hDC, RGB(0, 0, 0));
210 SelectObject(hDC, 3);
211 ExtTextOutW(hDC, 614, 8304, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("0"), 1, lpDx);
    // Parameter(s):
    int* lpDx;
    lpDx[0] = 196;
212 RestoreDC(hDC, -1);
213 SetROP2(hDC, R2_COPYPEN);
214 SaveDC(hDC);
215 SelectObject(hDC, (HGDI OBJ) OEM_FIXED_FONT);
216 DeleteObject(hDC, 3);
217 CreateFontIndirect(&lf); // Arial, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;

```

```

    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Arial"));
218 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
219 SetTextColor(hDC, RGB(0, 0, 0));
220 SelectObject(hDC, 3);
221 ExtTextOutW(hDC, 320, 6742, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("0,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 196;
    lpDx[1] = 98;
    lpDx[2] = 196;
222 RestoreDC(hDC, -1);
223 SetROP2(hDC, R2_COPYPEN);
224 SaveDC(hDC);
225 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
226 DeleteObject(hDC, 3);
227 CreateFontIndirect(&lf);    // Arial, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Arial"));
228 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
229 SetTextColor(hDC, RGB(0, 0, 0));
230 SelectObject(hDC, 3);
231 ExtTextOutW(hDC, 614, 5181, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("1"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 196;
232 RestoreDC(hDC, -1);
233 SetROP2(hDC, R2_COPYPEN);
234 SaveDC(hDC);
235 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
236 DeleteObject(hDC, 3);
237 CreateFontIndirect(&lf);    // Arial, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Arial"));
238 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
239 SetTextColor(hDC, RGB(0, 0, 0));
240 SelectObject(hDC, 3);
241 ExtTextOutW(hDC, 320, 3620, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("1,5"), 3, lpDx);
    // Parameter(s):

```

```

    int* lpDx:
    lpDx[0] = 196;
    lpDx[1] = 98;
    lpDx[2] = 196;
242 RestoreDC(hDC, -1);
243 SetROP2(hDC, R2_COPYPEN);
244 SaveDC(hDC);
245 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
246 DeleteObject(hDC, 3);
247 CreateFontIndirect(&lf);    // Arial, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Arial"));
248 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
249 SetTextColor(hDC, RGB(0, 0, 0));
250 SelectObject(hDC, 3);
251 ExtTextOutW(hDC, 614, 2059, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("2"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 196;
252 RestoreDC(hDC, -1);
253 SetROP2(hDC, R2_COPYPEN);
254 SaveDC(hDC);
255 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
256 DeleteObject(hDC, 3);
257 CreateFontIndirect(&lf);    // Arial, ihFont = 3
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -353;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
    lstrcpy(lf.lfFaceName, _T("Arial"));
258 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
259 SetTextColor(hDC, RGB(0, 0, 0));
260 SelectObject(hDC, 3);
261 ExtTextOutW(hDC, 320, 498, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("2,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 196;
    lpDx[1] = 98;
    lpDx[2] = 196;
262 RestoreDC(hDC, -1);
263 SetROP2(hDC, R2_COPYPEN);
264 SaveDC(hDC);
265 SelectObject(hDC, (HGDIOBJ)LTGRAY_BRUSH);
266 DeleteObject(hDC, 1);
267 CreateBrushIndirect(&lb);    // EMRCREATEBRUSHINDIRECT.ihBrush = 1
    // Parameter(s):

```


```

LOGBRUSH lb;
lb.lbStyle = BS_SOLID;
lb.lbColor = RGB(0, 69, 134);
lb.lbHatch = 0;
268 SelectObject(hDC, 1);
269 SelectObject(hDC, (HGDIOBJ)BLACK_PEN);
270 DeleteObject(hDC, 2);
271 CreatePen(PS_NULL, 0, RGB(255, 255, 255)); // EMRCREATEPEN.ihPen = 2
272 SelectObject(hDC, 2);
273 Polygon(hDC, lppt, 6);
// Parameter(s):
const POINT* lppt;
lppt[0] = (14151, 4603);
lppt[1] = (14045, 4603);
lppt[2] = (14045, 4393);
lppt[3] = (14256, 4393);
lppt[4] = (14256, 4603);
lppt[5] = (14151, 4603);
rclBounds = RECT(14045, 4393, 14256, 4603);
274 RestoreDC(hDC, -1);
275 SetROP2(hDC, R2_COPYPEN);
276 SaveDC(hDC);
277 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
278 DeleteObject(hDC, 3);
279 CreateFontIndirect(&lf); // Arial, ihFont = 3
// Parameter(s):
LOGFONT lf;
lf.lfHeight = -353;
lf.lfWidth = 0;
lf.lfEscapement = 0;
lf.lfOrientation = 0;
lf.lfWeight = FW_NORMAL | FW_REGULAR;
lf.lfItalic = FALSE;
lf.lfUnderline = FALSE;
lf.lfStrikeOut = FALSE;
lf.lfCharSet = ANSI_CHARSET;
lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
lf.lfQuality = DEFAULT_QUALITY;
lf.lfPitchAndFamily = VARIABLE_PITCH | FF_DONTCARE;
lstrcpy(lf.lfFaceName, _T("Arial"));
280 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
281 SetTextColor(hDC, RGB(0, 0, 0));
282 SelectObject(hDC, 3);
283 ExtTextOutW(hDC, 14356, 4621, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("Average"), 7,
lpDx);
// Parameter(s):
int* lpDx;
lpDx[0] = 235;
lpDx[1] = 176;
lpDx[2] = 196;
lpDx[3] = 118;
lpDx[4] = 196;
lpDx[5] = 196;
lpDx[6] = 196;
284 RestoreDC(hDC, -1);
285 SetROP2(hDC, R2_COPYPEN);
286 GdiComment(████████);

```

3) Image (LO-ODS Excel to Writer)

3) LO saved ODS Excel to Writer

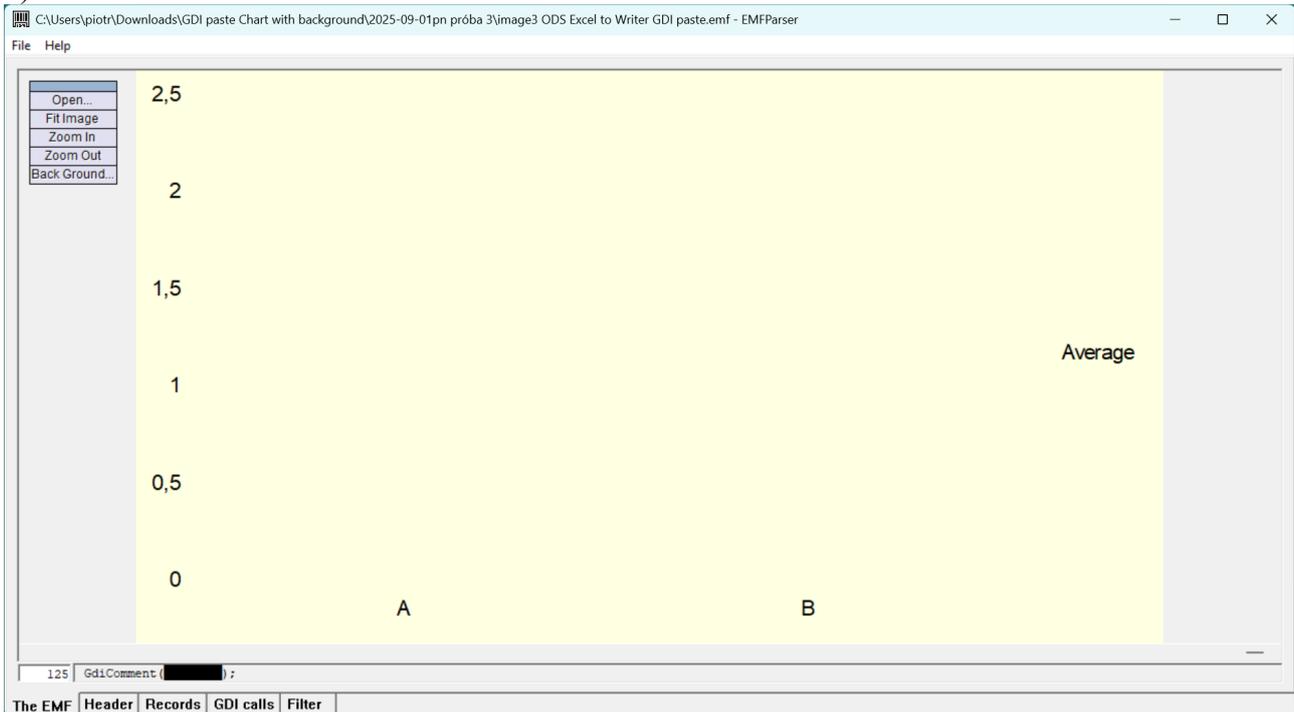

3) Header

EMF Header Info

```
filename:      C:\Users\piotr\Downloads\GDI paste Chart with background\2025-09-01pn
próba 3\image3 ODS Excel to Writer GDI paste.emf
iType:        1
nSize:        108
rclBounds:    (0, 0) - (906, 509)
rclFrame:     (0, 0) - (15997, 8996)
dSignature:   0x464D4520
nVersion:     0x00010000
nBytes:       14404
nRecords:    126
nHandles:     2
sReserved:    0
nDescription: 0
offDescription: 0
nPalEntries:  0 (0x0000)
szlDevice:    907, 510
szlMillimeters: 159, 89
```

3) Records

EMF Records List

Number of Records: 127

iType	nSize	Data
0 EMR_HEADER 00 00 00l..... 00 00 00 □...ý..... 00 01 00 }>..\$#.. EMF.... 00 00 00 D8...~..... 01 00 00□...p... 00 00 00 □...Y.....ip..r..	0x006C(108)	01 00 00 00 6C 00 00 00-00 00 00 00 00 8A 03 00 00 FD 01 00 00-00 00 00 00 00 7D 3E 00 00 24 23 00 00-20 45 4D 46 00 44 38 00 00 7E 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-8B 03 00 00 FE 9F 00 00 00 59 00 00 00-00 00 00 00 00 00 00 00 00 EC 70 02 00-72 5F 01 00
1 EMR_GDICOMMENT 4D 46 2B F....,.... EMF+ 10 C0 DB .@.....ÀÛ□...□...	0x002C(44)	46 00 00 00 2C 00 00 00-20 00 00 00 45 01 40 01 00 1C 00 00 00-10 00 00 00 02 01 00 00 00 8E 00 00 00-8F 00 00 00
2 EMR_GDICOMMENT 4D 46 2B F...L...@...EMF+ 40 09 00 "@.....@.. 00 00 00\$@..... 00 00 00!@..... .@.....	0x004C(76)	46 00 00 00 4C 00 00 00-40 00 00 00 45 22 40 00 00 0C 00 00 00-00 00 00 00 1E 0C 00 00 00 00 00 00 00-24 40 00 01 0C 00 00 00 00 21 40 00 00-0C 00 00 00 00 04 40 00 00 0C 00 00 00-00 00 00 00
3 EMR_SETMAPMODE	0x000C(12)	11 00 00 00 0C 00 00 00-08 00 00 00
4 EMR_SETVIEWPORTEXTEX 00 00 00□...□...	0x0010(16)	0B 00 00 00 10 00 00 00-90 00 00 00 90
5 EMR_SETWINDOWEXTEX 09 00 00i...i...	0x0010(16)	09 00 00 00 10 00 00 00-EC 09 00 00 EC
6 EMR_SETVIEWPORTORGEX 00 00 00	0x0010(16)	0C 00 00 00 10 00 00 00-00 00 00 00 00
7 EMR_SETWINDOWORGEX 00 00 00	0x0010(16)	0A 00 00 00 10 00 00 00-00 00 00 00 00
8 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
9 EMR_SETBKMODE	0x000C(12)	12 00 00 00 0C 00 00 00-01 00 00 00
10 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
11 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00

12 EMR_GDICOMMENT
4D 46 2B F....,....EMF+
10 C0 DB .@.....ÀÛ
....X...X...

0x002C(44) 46 00 00 00 2C 00 00 00-20 00 00 00 45
01 40 01 00 1C 00 00 00-10 00 00 00 02
00 00 00 00 58 02 00 00-58 02 00 00

13 EMR_GDICOMMENT
4D 46 2B F.....EMF+
00 80 3F 0@.....€?
40 00 00 "@.....*@..
00 00 00 \$......€?....
00 00 00€?.....
00 00 00 2@.....
40 00 0001E.D.E*@..
00 00 00 \$......€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@..\$.
02 2C 3A °.,:.....°,,:
00 00 00@.€\$...
00 00 00ÿÿÿÿ.....
....,Á-J□@EJ

0x010C(268) 46 00 00 00 0C 01 00 00-00 01 00 00 45
30 40 02 00 10 00 00 00-04 00 00 00 00
22 40 04 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 00 00 00 30 6C 45-00 D0 04 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 00 00 00 00 00 00 00-0A 40 00 80 24
18 00 00 00 FF FF FF FF-01 00 00 00 00
00 00 00 00 B8 C1 AF 4A-90 A9 45 4A

14 EMR_GDICOMMENT
4D 46 2B F...t...h...EMF+
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00*@..\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00*@..\$.
00 00 00€?.....
40 00 01 ..€?..ÄÄ..ÀÁ2@..
00 B8 41àÊD.,A
00 00 00 .@1E.à.E*@..\$.
00 00 00€?.....
40 00 04 ..€?.....@..
00 00 00 (.....ÀÛ....

0x0274(628) 46 00 00 00 74 02 00 00-68 02 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-2A 40 00 00 24
18 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 80 3F 00 00 CB C4-00 00 C0 C1 32
1C 00 00 00 10 00 00 00-00 E0 CA 44 00
00 40 6C 45 00 E0 04 45-2A 40 00 00 24
18 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 80 3F 00 00 00 00-00 00 00 00 08
28 00 00 00 1C 00 00 00-02 10 C0 DB 00

30 6C 45€...€.01E
00 00 00 .D.E4@.....
00 80 3F *@..\$......€?
00 CB C4€?...ËÄ
00 00 00 ..ÀÁ2@.....
E0 04 45 .àÊD..,A.@1E.à.E
00 80 3F *@..\$......€?
00 00 00€?.....
00 00 00%@.....
00 00 00@.....
40 07 00 .@.....!@..
00 00 00*@..\$...
00 00 00°,;.....
40 01 02 °.,;...mC...B.@..
00 00 00 4...(...ÀÛ....
00 00 00 □.....pFF....
B3 B3 FFÀÛ....³³³ÿ
10 C0 DB .@..t...h.....ÀÛ
CE 07 4A@Î.J
B5 CB 49 8K□J@Î.J....`µËI
CE 87 49 8K□J`µËI....@Î□I
CE 07 49 8K□J@Î□I....@Î.I
00 00 00 8K□J@Î.I.....
01 00 01 8K□J.....
00 00 00@.....
....
15 EMR_GDICOMMENT
4D 46 2B F...Ø...Ï...EMF+
00 80 3F *@..\$......€?
00 00 00€?.....
00 00 00*@..\$.....
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(...
00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.D.E

00 00 00 10 00 00 00 80-00 00 00 80 00
00 D0 04 45 34 40 00 00-0C 00 00 00 00
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 C0 C1 32 40 00 01-1C 00 00 00 10
00 E0 CA 44 00 00 B8 41-00 40 6C 45 00
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 25 40 00 00-10 00 00 00 04
00 00 00 00 1F 40 03 00-0C 00 00 00 00
1E 40 09 00 0C 00 00 00-00 00 00 00 21
0C 00 00 00 00 00 00 00-2A 40 00 00 24
18 00 00 00 B0 02 2C 3A-00 00 00 00 00
B0 02 2C 3A 00 00 6D 43-00 00 B8 42 08
34 00 00 00 28 00 00 00-02 10 C0 DB 00
88 00 00 00 00 00 00 00-00 70 46 46 02
00 00 00 00 02 10 C0 DB-00 00 00 00 B3
08 40 02 03 74 00 00 00-68 00 00 00 02
0A 00 00 00 00 20 00 00-00 00 00 00 40
38 4B 8B 4A 40 CE 07 4A-00 00 00 00 60
38 4B 8B 4A 60 B5 CB 49-00 00 00 00 40
38 4B 8B 4A 40 CE 87 49-00 00 00 00 40
38 4B 8B 4A 40 CE 07 49-00 00 00 00 00
38 4B 8B 4A 00 00 00 00-00 01 00 01 00
00 01 00 00 15 40 02 00-10 00 00 00 04
01 00 00 00
46 00 00 00 D8 01 00 00-CC 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00

40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?...ËÄ..ÄÄ
E0 CA 44 2@.....àÊD
40 00 00 ..,A.@1E.à.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@...\$.
02 2C 3A °.,:.....°, :
00 00 00 ..mC...,B.@.4...
00 00 00 (.....ÀÛ.....□...
00 00 00Ô.F.....
40 03 03 ..ÀÛ.....³³³ÿ.@..
00 00 00 <...0.....ÀÛ....
4B 8B 4A8K□J
00 00 008K□JĐÁ)J....
00 00 00 ĐÁ)J...□.@.....
.....

16 EMR_GDICOMMENT 0x01C8(456)
4D 46 2B F...È...¼...EMF+
00 80 3F *@...\$......€?
00 00 00€?....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(..
00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.Đ.E
40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?...ËÄ..ÄÄ
A0 E8 44 2@..... èD
40 00 00 ..èB.□;E.àäD*@..

34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 CB C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 00 6D 43 00 00 B8 42-08 40 01 02 34
28 00 00 00 02 10 C0 DB-00 00 00 00 88
00 00 00 00 00 D4 14 46-02 00 00 00 00
02 10 C0 DB 00 00 00 00-B3 B3 B3 FF 08
3C 00 00 00 30 00 00 00-02 10 C0 DB 04
00 00 00 00 00 00 00 00-00 00 00 00 38
00 00 00 00 38 4B 8B 4A-D0 C1 29 4A 00
D0 C1 29 4A 00 01 01 81-15 40 03 00 10
04 00 00 00 01 00 00 00-

46 00 00 00 C8 01 00 00-BC 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 CB C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 E8 42 00 90 3B 45-00 E0 E4 44 2A

00 00 00 \$.....€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@...\$.
02 2C 3A °.,:.....°.,:
00 00 00 ..mC.,B.@...`...
20 00 00 T.....ÀÛ.....
B5 CB 49 @.'I`µËI.÷ÂI`µËI
C1 29 4A .÷ÂIÐÁ)J@.'IÐÁ)J
CE 07 49 ð.5J@Î.I òlJ@Î.I
C1 29 4A òlJÐÁ)Jð.5JÐÁ)J
00 00 00 ...□...□.@.€....
....□E.ÿ

17 EMR_GDICOMMENT
4D 46 2B F...È...4...EMF+
00 80 3F *@...\$.€?
00 00 00€?....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(..
00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.Ð.E
40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?...ËÄ..ÀÁ
E0 CA 44 2@.....àÊD
40 00 00 ..,A.@1E.à.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@...\$.
00 00 00

24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 00 6D 43 00 00 B8 42-08 40 02 03 60
54 00 00 00 02 10 C0 DB-08 00 00 00 00
40 0F 27 49 60 B5 CB 49-00 F7 C2 49 60
00 F7 C2 49 D0 C1 29 4A-40 0F 27 49 D0
F0 1A 35 4A 40 CE 07 49-A0 D2 6C 4A 40
A0 D2 6C 4A D0 C1 29 4A-F0 1A 35 4A D0
00 01 01 81 00 01 01 81-14 40 02 80 10
04 00 00 00 86 45 00 FF-

0x01C8 (456)

46 00 00 00 C8 01 00 00-BC 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 CB C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18

02 2C 3A °.,:.....°.,:
00 00 00 ...mC. iD.@..4...
00 00 00 (.....ÀÛ.....□...
00 00 00pFF.....
40 04 03 ..ÀÛ.....³³³ÿ.@..
00 00 00 ,... ..ÀÛ....
4B 8B 4A8K□J
00 00 00 ÿÿ ?.....@.....
.....

18 EMR_GDICOMMENT
4D 46 2B F...ø...ì...EMF+
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00*@..\$......
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(...
00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.D.E
40 00 00 4@.....*@..
00 00 00 \$......€?....
00 C0 C1€?...ËÄ..ÄÄ
E0 CA 44 2@.....àÊD
40 00 00 ..,A.@1E.à.E*@..
00 00 00 \$......€?....
00 00 00€?.....
10 C0 DB .@..(.....ÀÛ
00 00 80€.€
00 00 00 .01E.D.E4@.....
00 00 00*@..\$......
00 80 3F ..€?.....€?
00 00 00 ..ËÄ..ÄÄ2@.....
40 6C 45àÊD.,A.@1E
00 00 00 .à.E*@..\$......
00 80 3F ..€?.....€?
00 00 00@..(...

0x02F8(760)

B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 00 6D 43 00 A0 EF 44-08 40 01 02 34
28 00 00 00 02 10 C0 DB-00 00 00 00 88
00 00 00 00 00 70 46 46-02 00 00 00 00
02 10 C0 DB 00 00 00 00-B3 B3 B3 FF 08
2C 00 00 00 20 00 00 00-02 10 C0 DB 02
00 00 00 00 00 00 00 00-00 00 00 00 38
FF FF 7F 3F 00 01 00 00-15 40 04 00 10
04 00 00 00 01 00 00 00-
46 00 00 00 F8 02 00 00-EC 02 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 CB C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 00 10-00 00 00 80 00
00 30 6C 45 00 D0 04 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 CB C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 E0 CA 44-00 00 B8 41 00
00 E0 04 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-08 40 00 04 28

00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.Đ.E
40 00 00 4@.....*@..
00 00 00 \$.....€?...
00 C0 C1€?...ËÄ..ÄÁ
E0 CA 44 2@.....àÊD
40 00 00 ..,A.@1E.à.E*@..
00 00 00 \$.....€?...
00 00 00€?...
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@...\$.
02 2C BA °.,:.....°,°
00 00 00 ..mC. iD.@..4...
00 00 00 (.....ÀÛ....□...
00 00 00pFF.....
40 05 03 ..ÀÛ.....³³³ÿ.@..
00 00 00 ,... ..ÀÛ....
FF 7F 3Fÿÿ ?
00 00 00 ĐÁ)J.....@.....
.....

19 EMR_GDICOMMENT
4D 46 2B F...€ ...EMF+
00 80 3F *@...\$.€?
00 00 00€?...
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(..
00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.Đ.E
40 00 00 4@.....*@..
00 00 00 \$.....€?...
00 C0 C1€?...ËÄ..ÄÁ
E0 CA 44 2@.....àÊD

1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 CB C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 00 6D 43 00 A0 EF 44-08 40 01 02 34
28 00 00 00 02 10 C0 DB-00 00 00 00 88
00 00 00 00 00 70 46 46-02 00 00 00 00
02 10 C0 DB 00 00 00 00-B3 B3 B3 FF 08
2C 00 00 00 20 00 00 00-02 10 C0 DB 02
00 00 00 00 00 00 00 00-00 00 00 00 FF
D0 C1 29 4A 00 01 00 00-15 40 05 00 10
04 00 00 00 01 00 00 00-

0x058C(1420) 46 00 00 00 8C 05 00 00-80 05 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 CB C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00

40 00 00 ..,A.@1E.à.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
10 C0 DB .@..(.....ÀÛ
00 00 80€...€
00 00 00 .01E.Ð.E4@.....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00 ..ËÄ..ÀÁ2@.....
40 6C 45àÊD..,A.@1E
00 00 00 .à.E*@...\$.
00 80 3F ..€?.....€?
00 00 00@..(
00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.Ð.E
40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?...ËÄ..ÀÁ
E0 CA 44 2@.....àÊD
40 00 00 ..,A.@1E.à.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
10 C0 DB .@..(.....ÀÛ
00 00 80€...€
00 00 00 .01E.Ð.E4@.....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00 ..ËÄ..ÀÁ2@.....
40 6C 45àÊD..,A.@1E
00 00 00 .à.E*@...\$.
00 80 3F ..€?.....€?
00 00 00@..(
00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.Ð.E
40 00 00 4@.....*@..

00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 00 10-00 00 00 80 00
00 30 6C 45 00 D0 04 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 CB C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 E0 CA 44-00 00 B8 41 00
00 E0 04 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 CB C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 00 10-00 00 00 80 00
00 30 6C 45 00 D0 04 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 CB C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 E0 CA 44-00 00 B8 41 00
00 E0 04 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A

27	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
28	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
29	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
30	EMR_EXTTEXTOUTW	0x0054(84)	54 00 00 00 54 00 00 00-F2 0F 00 00 DE
21 00 00	T...T...ò...Ð!...		B2 10 00 00 73 23 00 00-01 00 00 00 00
00 00 00	²...s#.....		00 00 00 00 F2 0F 00 00-DE 21 00 00 01
00 00 00ò...Ð!.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00	L.....		00 00 00 00 00 00 00 00-50 00 00 00 41
00 00 00P...A...		BE 00 00 00
¾...			
31	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
32	EMR_GDICOMMENT	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
4D 46 2B	F...ü...ð...EMF+		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 80 3F	*@..\$.€?		00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00€?....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$.€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00&@.....		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 00@..(...		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 10ÀÛ.....		00 00 00 80 00 00 00 80-00 30 6C 45 00
D0 04 45	...€...€.01E.Ð.E		34 40 00 00 0C 00 00 00-00 00 00 00 2A
40 00 00	4@.....*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.€?....		00 00 00 00 00 00 80 3F-00 00 CB C4 00
00 C0 C1€?...ËÄ..ÀÁ		32 40 00 01 1C 00 00 00-10 00 00 00 00
E0 CA 44	2@.....àÊÐ		00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
40 00 00	..,A.@1E.à.E*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.€?....		00 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 00€?.....		08 40 00 04 28 00 00 00-1C 00 00 00 02
10 C0 DB	.@..(.....ÀÛ		00 00 00 00 00 00 00 10-00 00 00 80 00
00 00 80€...€		00 30 6C 45 00 D0 04 45-34 40 00 00 0C
00 00 00	.01E.Ð.E4@.....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$.€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		00 00 CB C4 00 00 C0 C1-32 40 00 01 1C
00 00 00	..ËÄ..ÀÁ2@.....		10 00 00 00 00 E0 CA 44-00 00 B8 41 00
40 6C 45àÊÐ..,A.@1E		

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
.....			00 00 00 00 00 00 00 00-00 00 00 00
39	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
.....			
40	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
.....			
41	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
%.....			
42	EMR_EXTTEXTOUTW	0x0054(84)	54 00 00 00 54 00 00 00-B2 28 00 00 DE
21 00 00	T...T... ² (...Đ!...		72 29 00 00 73 23 00 00-01 00 00 00 00
00 00 00	r)...s#.....		00 00 00 00 B2 28 00 00-DE 21 00 00 01
00 00 00	... ² (...Đ!.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00	L.....		00 00 00 00 00 00 00 00-50 00 00 00 42
00 00 00P...B...		C3 00 00 00
Ä...			
43	EMR_GDICOMMENT	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
4D 46 2B	F...ü...đ...EMF+		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 80 3F	*@...\$.....€?		00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00€?....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@...\$.....		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00&@.....		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 00@..(...		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 10ÀÛ.....		00 00 00 80 00 00 00 80-00 30 6C 45 00
D0 04 45	...€...€.01E.Đ.E		34 40 00 00 0C 00 00 00-00 00 00 00 2A
40 00 00	4@.....*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.....€?....		00 00 00 00 00 00 80 3F-00 00 CB C4 00
00 C0 C1€?...ÈÄ..ÀÁ		32 40 00 01 1C 00 00 00-10 00 00 00 00
E0 CA 44	2@.....àÊĐ		00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
40 00 00	..,A.@1E.à.E*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.....€?....		00 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 00€?.....		08 40 00 04 28 00 00 00-1C 00 00 00 02
10 C0 DB	.@..(.....ÀÛ		00 00 00 00 00 00 00 10-00 00 00 80 00
00 00 80€...€		00 30 6C 45 00 D0 04 45-34 40 00 00 0C
00 00 00	.01E.Đ.E4@.....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@...\$.....		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
.....			00 00 00 00 00 00 00 00-00 00 00 00
50	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
51	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
52	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
53	EMR_EXTEXTOUTW 20 00 00 T...T...ö... ..	0x0054(84)	54 00 00 00 54 00 00 00-F6 01 00 00 17
00 00 00	□...¬!.....		96 02 00 00 AC 21 00 00-01 00 00 00 00
00 00 00	...ö... ..		00 00 00 00 F6 01 00 00-17 20 00 00 01
00 00 00	L.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00P...0... ²...		00 00 00 00 00 00 00-50 00 00 00 30 B2 00 00 00
54	EMR_GDICOMMENT 4D 46 2B F...ü...ö...EMF+	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
00 80 3F	*@..\$.€?		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00	...€?....		00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00	...*@..\$.€?		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 80 3F	..€?.....€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00&@.....		00 00 00 00 00 00 00-26 40 00 00 10
00 00 00@..(...		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 10ÀÛ.....		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
D0 04 45	...€...€.01E.Đ.E		00 00 00 80 00 00 00 80-00 30 6C 45 00
40 00 00	4@.....*@..		34 40 00 00 0C 00 00 00-00 00 00 00 2A
00 00 00	\$.€?....		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 C0 C1€?...ËÄ..ÀÁ		00 00 00 00 00 00 80 3F-00 00 CB C4 00
E0 CA 44	2@.....àÊĐ		32 40 00 01 1C 00 00 00-10 00 00 00 00
40 00 00	..,A.@1E.à.E*@..		00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
00 00 00	\$.€?....		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00€?.....		00 00 00 00 00 00 80 3F-00 00 00 00 00
10 C0 DB	.@..(.....ÀÛ		08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 80€.€		00 00 00 00 00 00 00 10-00 00 00 80 00
00 00 00	.01E.Đ.E4@.....		00 30 6C 45 00 D0 04 45-34 40 00 00 0C

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
.....			
61	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
.....			
62	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
.....			
63	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
%.....			
64	EMR_EXTTTEXTOUTW	0x0060(96)	54 00 00 00 60 00 00 00-E7 00 00 00 0E
1A 00 00	T...`...ç.....		96 02 00 00 A3 1B 00 00-01 00 00 00 00
00 00 00	□...£.....		00 00 00 00 E7 00 00 00-0E 1A 00 00 03
00 00 00ç.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00	L.....		00 00 00 00 00 00 00 00-54 00 00 00 30
00 2C 00T...0.,.		35 00 00 00 B2 00 00 00-5D 00 00 00 B2
00 00 00	5...²...]...²...		
65	EMR_GDICOMMENT	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
4D 46 2B	F...ü...ð...EMF+		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 80 3F	*@..\$.€?		00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00€?...		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$.€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00&@.....		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 00@..(...		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 10ÀÛ.....		00 00 00 80 00 00 00 80-00 30 6C 45 00
D0 04 45	...€...€.01E.D.E		34 40 00 00 0C 00 00 00-00 00 00 00 2A
40 00 00	4@.....*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.€?.....		00 00 00 00 00 00 80 3F-00 00 CB C4 00
00 C0 C1€?...ËÄ..ÀÁ		32 40 00 01 1C 00 00 00-10 00 00 00 00
E0 CA 44	2@.....àÊD		00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
40 00 00	..,A.@1E.à.E*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.€?.....		00 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 00€?.....		08 40 00 04 28 00 00 00-1C 00 00 00 02
10 C0 DB	.@..(.....ÀÛ		

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
72	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
73	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
74	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
75	EMR_EXTTEXTOUTW	0x0054(84)	54 00 00 00 54 00 00 00-F6 01 00 00 04
14 00 00	T...T...ö.....		96 02 00 00 99 15 00 00-01 00 00 00 00
00 00 00	□...□.....		00 00 00 00 F6 01 00 00-04 14 00 00 01
00 00 00	...ö.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00	L.....		00 00 00 00 00 00 00 00-50 00 00 00 31
00 00 00P...1...		B2 00 00 00
2...			
76	EMR_GDICOMMENT	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
4D 46 2B	F...ü...ö...EMF+		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 80 3F	*@...\$.....€?		00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00€?....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00	...*@...\$.....		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00&@.....		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 00@..(...		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 10ÀÛ.....		00 00 00 80 00 00 00 80-00 30 6C 45 00
D0 04 45	...€...€.01E.D.E		34 40 00 00 0C 00 00 00-00 00 00 00 2A
40 00 00	4@.....*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.....€?....		00 00 00 00 00 00 80 3F-00 00 CB C4 00
00 C0 C1€?...ËÄ..ÀÁ		32 40 00 01 1C 00 00 00-10 00 00 00 00
E0 CA 44	2@.....àÊD		00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
40 00 00	..,A.@1E.à.E*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.....€?....		

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
83	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
84	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
85	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
86	EMR_EXTTEXTOUTW 0D 00 00 T...`...ç...û... 00 00 00 □...□..... 00 00 00 ...ç...û..... 00 00 00 L..... 00 2C 00T...1.,. 00 00 00 5...²...]...²...	0x0060(96)	54 00 00 00 60 00 00 00-E7 00 00 00 FB 96 02 00 00 90 0F 00 00-01 00 00 00 00 00 00 00 00 E7 00 00 00-FB 0D 00 00 03 4C 00 00 00 02 00 00 00-00 00 00 00 00 00 00 00 00 00 00 00 00-54 00 00 00 31 35 00 00 00 B2 00 00 00-5D 00 00 00 B2
87	EMR_GDICOMMENT 4D 46 2B F...ü...đ...EMF+ 00 80 3F *@..\$.€? 00 00 00€?.... 00 00 00*@..\$. 00 80 3F ..€?.....€? 00 00 00&@..... 00 00 00@..(.. 00 00 10ÀÛ..... D0 04 45 ...€...€.01E.D.E 40 00 00 4@.....*@.. 00 00 00 \$.€?.... 00 C0 C1€?...ËÄ..ÄÄ E0 CA 44 2@.....àÊD	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45 2A 40 00 00 24 00 00 00-18 00 00 00 00 00 00 00 00 00 00 00 00-00 00 80 3F 00 00 00 00 00 2A 40 00 00-24 00 00 00 18 00 00 80 3F 00 00 00 00-00 00 00 00 00 00 00 00 00 00 00 00 00-26 40 00 00 10 04 00 00 00 00 00 00 00-08 40 00 04 28 1C 00 00 00 02 10 C0 DB-00 00 00 00 00 00 00 00 80 00 00 00 80-00 30 6C 45 00 34 40 00 00 0C 00 00 00-00 00 00 00 2A 24 00 00 00 18 00 00 00-00 00 80 3F 00 00 00 00 00 00 00 80 3F-00 00 CB C4 00 32 40 00 01 1C 00 00 00-10 00 00 00 00

00 C0 C1€?...ËÄ..ÄÄ		00 00 00 00 00 00 80 3F-00 00 CB C4 00
E0 CA 44	2@.....àÊD		32 40 00 01 1C 00 00 00-10 00 00 00 00
40 00 00	..,A.@1E.à.E*@..		00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
00 00 00	\$.....€?....		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00€?.....		00 00 00 00 00 00 80 3F-00 00 00 00 00
10 C0 DB	.@..(.....ÀÛ		08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 80€...€		00 00 00 00 00 00 00 10-00 00 00 80 00
00 00 00	.01E.Đ.E4@.....		00 30 6C 45 00 D0 04 45-34 40 00 00 0C
00 00 00*@...\$......		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 80 3F	..€?.....€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00	..ËÄ..ÄÄ2@.....		00 00 CB C4 00 00 C0 C1-32 40 00 01 1C
40 6C 45àÊD..,A.@1E		10 00 00 00 00 00 E0 CA 44-00 00 B8 41 00
00 00 00	.à.E*@...\$......		00 E0 04 45 2A 40 00 00-24 00 00 00 18
00 80 3F	..€?.....€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00%@.....		00 00 00 00 00 00 00 00-25 40 00 00 10
00 00 00@.....		04 00 00 00 00 00 00 00-1F 40 03 00 0C
00 00 00@.....		00 00 00 00 1E 40 09 00-0C 00 00 00 00
40 00 00	!@.....*@..		21 40 07 00 0C 00 00 00-00 00 00 00 2A
00 00 00	\$.....€?....		24 00 00 00 18 00 00 00-00 00 80 3F 00
63 E5 42€?çÈWBÈcâB		00 00 00 00 00 00 80 3F-E7 C8 57 42 C8
.@.....			04 40 00 00 0C 00 00 00-00 00 00 00
99	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
".....ÿÿÿÿ			
100	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
101	EMR_SAVEDC	0x0008(8)	21 00 00 00 08 00 00 00-
!.....			
102	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-0A 00 00 80
%.....€			
103	EMR_DELETEOBJECT	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00
(.....			
104	EMR_EXTCREATEFONTINDIRECTW	0x014C(332)	52 00 00 00 4C 01 00 00-01 00 00 00 A1
FE FF FF R...L.....;þÿÿ			00 00 00 00 00 00 00 00-00 00 00 90
01 00 00□...		00 00 00 00 00 00 00 22-41 00 70 00 74
00 6F 00"A.p.t.o.		73 00 20 00 4E 00 61 00-72 00 72 00 6F
00 77 00	s. .N.a.r.r.o.w.		00 00 00 00 00 00 00 00-00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00

40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?...ËÄ..ÄÄ
E0 CA 44 2@.....àÊD
40 00 00 ..,A.@1E.à.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
10 C0 DB .@..(.....ÀÛ
00 00 80€...€
00 00 00 .01E.Ð.E4@.....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00 ..ËÄ..ÄÄ2@.....
40 6C 45àÊD..,A.@1E
00 00 00 .à.E*@...\$.
00 80 3F ..€?.....€?
00 00 00%@.....
00 00 00@.....
00 00 00@.....
40 00 00 !@.....*@..
00 00 00 \$.....°,,:.....
00 82 44°,,:.PRE..□D
45 00 FF .@.€\$......□E.ÿ
EC 88 47ì□G
.ð□G

110 EMR_GDICOMMENT
4D 46 2B F...ü...ð...EMF+
00 80 3F *@...\$......€?
00 00 00€?....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(..
00 00 10ÀÛ.....
D0 04 45 ...€...€.01E.Ð.E
40 00 00 4@.....*@..

0x01FC(508)

34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 CB C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 10-00 00 00 80 00
00 30 6C 45 00 D0 04 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 CB C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 E0 CA 44-00 00 B8 41 00
00 E0 04 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-25 40 00 00 10
04 00 00 00 00 00 00 00-1F 40 03 00 0C
00 00 00 00 1E 40 09 00-0C 00 00 00 00
21 40 07 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-B0 02 2C 3A 00
00 00 00 00 B0 02 2C 3A-00 50 52 45 00
0A 40 00 80 24 00 00 00-18 00 00 00 86
01 00 00 00 00 00 00 00-00 00 00 00 00
00 F2 85 47

46 00 00 00 FC 01 00 00-F0 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 30 6C 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A

00 00 00 \$.....€?....
 00 C0 C1€?...ËÄ..ÀÁ
 E0 CA 44 2@.....àÊD
 40 00 00 ..,A.@1E.à.E*@..
 00 00 00 \$.....€?....
 00 00 00€?.....
 10 C0 DB .@..(.....ÀÛ
 00 00 80€...€
 00 00 00 .01E.Ð.E4@.....
 00 00 00*@..\$.
 00 80 3F ..€?.....€?
 00 00 00 ..ËÄ..ÀÁ2@.....
 40 6C 45àÊD..,A.@1E
 00 00 00 .à.E*@..\$.
 00 80 3F ..€?.....€?
 00 00 00%@.....
 00 00 00@.....
 00 00 00@.....
 40 00 00 !@.....*@..
 00 00 00 \$.....€?....
 A1 87 44€?.ove□;□D
 .@.....

24 00 00 00 18 00 00 00-00 00 80 3F 00
 00 00 00 00 00 00 80 3F-00 00 CB C4 00
 32 40 00 01 1C 00 00 00-10 00 00 00 00
 00 00 B8 41 00 40 6C 45-00 E0 04 45 2A
 24 00 00 00 18 00 00 00-00 00 80 3F 00
 00 00 00 00 00 00 80 3F-00 00 00 00 00
 08 40 00 04 28 00 00 00-1C 00 00 00 02
 00 00 00 00 00 00 00 10-00 00 00 80 00
 00 30 6C 45 00 D0 04 45-34 40 00 00 0C
 00 00 00 00 2A 40 00 00-24 00 00 00 18
 00 00 80 3F 00 00 00 00-00 00 00 00 00
 00 00 CB C4 00 00 C0 C1-32 40 00 01 1C
 10 00 00 00 00 E0 CA 44-00 00 B8 41 00
 00 E0 04 45 2A 40 00 00-24 00 00 00 18
 00 00 80 3F 00 00 00 00-00 00 00 00 00
 00 00 00 00 00 00 00 00-25 40 00 00 10
 04 00 00 00 00 00 00 00-1F 40 03 00 0C
 00 00 00 00 1E 40 09 00-0C 00 00 00 00
 21 40 07 00 0C 00 00 00-00 00 00 00 2A
 24 00 00 00 18 00 00 00-00 00 80 3F 00
 00 00 00 00 00 00 80 3F-1C 6F 56 45 83
 04 40 00 00 0C 00 00 00-00 00 00 00

111	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
112	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
113	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
114	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-0A 00 00 80
115	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00
116	EMR_EXTCREATEFONTINDIRECTW FE FF FF R...L.....;þÿÿ 01 00 00□... 00 6F 00 "A.p.t.o. 00 77 00 s. .N.a.r.r.o.w. 00 00 00	0x014C(332)	52 00 00 00 4C 01 00 00-01 00 00 00 A1 00 00 00 00 00 00 00 00-00 00 00 00 90 00 00 00 00 00 00 00 22-41 00 70 00 74 73 00 20 00 4E 00 61 00-72 00 72 00 6F 00 00 00 00 00 00 00 00-00 00 00 00 00

00 00 00@..(...		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 10ÀÛ.....		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
D0 04 45	...€...€.01E.Đ.E		00 00 00 80 00 00 00 80-00 30 6C 45 00
40 06 04	4@.....@..		34 40 00 00 0C 00 00 00-00 00 00 00 08
00 00 00ÀÛ.....		18 00 00 00 0C 00 00 00-02 10 C0 DB 00
00 00 004@.....		03 00 00 10 34 40 06 00-0C 00 00 00 00
122	EMR_GDICOMMENT	0x001C(28)	46 00 00 00 1C 00 00 00-10 00 00 00 45
4D 46 2B	F.....EMF+		02 40 00 00 0C 00 00 00-00 00 00 00
	.@.....		
123	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
	".....ÿÿÿÿ		
124	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
		
125	EMR_GDICOMMENT	0x001C(28)	46 00 00 00 1C 00 00 00-10 00 00 00 45
4D 46 2B	F.....EMF+		02 40 00 00 0C 00 00 00-00 00 00 00
	.@.....		
126	EMR_EOF	0x0014(20)	0E 00 00 00 14 00 00 00-00 00 00 00 10
00 00 00		14 00 00 00
		

3) GDI calls

EMF GDI Calls

Number of Calls: 125

```
1      GdiComment(████████);
2      GdiComment(████████);
3      SetMapMode(hdc, MM_ANISOTROPIC);
4      SetViewportExtEx(hdc, 144, 144, NULL);
5      SetWindowExtEx(hdc, 2540, 2540, NULL);
6      SetViewportOrgEx(hdc, 0, 0, NULL);
7      SetWindowOrgEx(hdc, 0, 0, NULL);
8      SetROP2(hdc, R2_COPYPEN);
9      SetBkMode(hdc, TRANSPARENT);
10     SaveDC(hdc);
11     SetROP2(hdc, R2_COPYPEN);
12     GdiComment(████████);
13     GdiComment(████████);
14     GdiComment(████████);
15     GdiComment(████████);
16     GdiComment(████████);
17     GdiComment(████████);
18     GdiComment(████████);
19     GdiComment(████████);
20     RestoreDC(hdc, -1);
21     SetROP2(hdc, R2_COPYPEN);
22     SaveDC(hdc);
23     RestoreDC(hdc, -1);
24     SetROP2(hdc, R2_COPYPEN);
25     SaveDC(hdc);
26     CreateFontIndirect(&lf);    // Aptos Narrow, ihFont = 1
        // Parameter(s):
        LOGFONT lf;
        lf.lfHeight = -351;
        lf.lfWidth = 0;
        lf.lfEscapement = 0;
        lf.lfOrientation = 0;
        lf.lfWeight = FW_NORMAL | FW_REGULAR;
        lf.lfItalic = FALSE;
        lf.lfUnderline = FALSE;
        lf.lfStrikeOut = FALSE;
        lf.lfCharSet = ANSI_CHARSET;
        lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
        lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
        lf.lfQuality = DEFAULT_QUALITY;
        lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
        lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
27     SetTextAlign(hdc, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
28     SetTextColor(hdc, RGB(0, 0, 0));
29     SelectObject(hdc, 1);
30     ExtTextOutW(hdc, 4082, 8670, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("A"), 1, lpDx);
        // Parameter(s):
        int* lpDx:
        lpDx[0] = 190;
31     SetROP2(hdc, R2_COPYPEN);
32     GdiComment(████████);
33     RestoreDC(hdc, -1);
34     SetROP2(hdc, R2_COPYPEN);
35     SaveDC(hdc);
36     SelectObject(hdc, (HGDIOBJ)OEM_FIXED_FONT);
37     DeleteObject(hdc, 1);
38     CreateFontIndirect(&lf);    // Aptos Narrow, ihFont = 1
        // Parameter(s):
        LOGFONT lf;
        lf.lfHeight = -351;
        lf.lfWidth = 0;
        lf.lfEscapement = 0;
        lf.lfOrientation = 0;
```

```

    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
39 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
40 SetTextColor(hDC, RGB(0, 0, 0));
41 SelectObject(hDC, 1);
42 ExtTextOutW(hDC, 10418, 8670, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("B"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 195;
43 GdiComment(██████████);
44 RestoreDC(hDC, -1);
45 SetROP2(hDC, R2_COPYPEN);
46 SaveDC(hDC);
47 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
48 DeleteObject(hDC, 1);
49 CreateFontIndirect(&lf); // Aptos Narrow, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
50 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
51 SetTextColor(hDC, RGB(0, 0, 0));
52 SelectObject(hDC, 1);
53 ExtTextOutW(hDC, 502, 8215, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("0"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 178;
54 GdiComment(██████████);
55 RestoreDC(hDC, -1);
56 SetROP2(hDC, R2_COPYPEN);
57 SaveDC(hDC);
58 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
59 DeleteObject(hDC, 1);
60 CreateFontIndirect(&lf); // Aptos Narrow, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
61 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);

```

```

62 SetTextColor(hDC, RGB(0, 0, 0));
63 SelectObject(hDC, 1);
64 ExtTextOutW(hDC, 231, 6670, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("0,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 178;
    lpDx[1] = 93;
    lpDx[2] = 178;
65 GdiComment(██████████);
66 RestoreDC(hDC, -1);
67 SetROP2(hDC, R2_COPYPEN);
68 SaveDC(hDC);
69 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
70 DeleteObject(hDC, 1);
71 CreateFontIndirect(&lf); // Aptos Narrow, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
72 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
73 SetTextColor(hDC, RGB(0, 0, 0));
74 SelectObject(hDC, 1);
75 ExtTextOutW(hDC, 502, 5124, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("1"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 178;
76 GdiComment(██████████);
77 RestoreDC(hDC, -1);
78 SetROP2(hDC, R2_COPYPEN);
79 SaveDC(hDC);
80 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
81 DeleteObject(hDC, 1);
82 CreateFontIndirect(&lf); // Aptos Narrow, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
83 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
84 SetTextColor(hDC, RGB(0, 0, 0));
85 SelectObject(hDC, 1);
86 ExtTextOutW(hDC, 231, 3579, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("1,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 178;
    lpDx[1] = 93;
    lpDx[2] = 178;
87 GdiComment(██████████);

```

```


88 RestoreDC(hDC, -1);
89 SetROP2(hDC, R2_COPYPEN);
90 SaveDC(hDC);
91 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
92 DeleteObject(hDC, 1);
93 CreateFontIndirect(&lf); // Aptos Narrow, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
94 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
95 SetTextColor(hDC, RGB(0, 0, 0));
96 SelectObject(hDC, 1);
97 ExtTextOutW(hDC, 502, 2034, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("2"), 1, lpDx);
    // Parameter(s):
    int* lpDx;
    lpDx[0] = 178;
98 GdiComment(██████████);
99 RestoreDC(hDC, -1);
100 SetROP2(hDC, R2_COPYPEN);
101 SaveDC(hDC);
102 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
103 DeleteObject(hDC, 1);
104 CreateFontIndirect(&lf); // Aptos Narrow, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
105 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
106 SetTextColor(hDC, RGB(0, 0, 0));
107 SelectObject(hDC, 1);
108 ExtTextOutW(hDC, 231, 489, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("2,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx;
    lpDx[0] = 178;
    lpDx[1] = 93;
    lpDx[2] = 178;
109 GdiComment(██████████);
110 GdiComment(██████████);
111 RestoreDC(hDC, -1);
112 SetROP2(hDC, R2_COPYPEN);
113 SaveDC(hDC);
114 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
115 DeleteObject(hDC, 1);
116 CreateFontIndirect(&lf); // Aptos Narrow, ihFont = 1
    // Parameter(s):
    LOGFONT lf;

```

```
lf.lfHeight = -351;
lf.lfWidth = 0;
lf.lfEscapement = 0;
lf.lfOrientation = 0;
lf.lfWeight = FW_NORMAL | FW_REGULAR;
lf.lfItalic = FALSE;
lf.lfUnderline = FALSE;
lf.lfStrikeOut = FALSE;
lf.lfCharSet = ANSI_CHARSET;
lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
lf.lfQuality = DEFAULT_QUALITY;
lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
lstrcpy(lf.lfFaceName, _T("Aptos Narrow"));
117 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
118 SetTextColor(hDC, RGB(0, 0, 0));
119 SelectObject(hDC, 1);
120 ExtTextOutW(hDC, 14526, 4596, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("Average"), 7,
lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 190;
    lpDx[1] = 144;
    lpDx[2] = 170;
    lpDx[3] = 110;
    lpDx[4] = 173;
    lpDx[5] = 157;
    lpDx[6] = 174;
121 GdiComment( );
122 GdiComment( );
123 RestoreDC(hDC, -1);
124 SetROP2(hDC, R2_COPYPEN);
125 GdiComment( );
```

4) Image (LO-XLSX Excel to Writer)

4) LO saved XLSX Excel to Writer

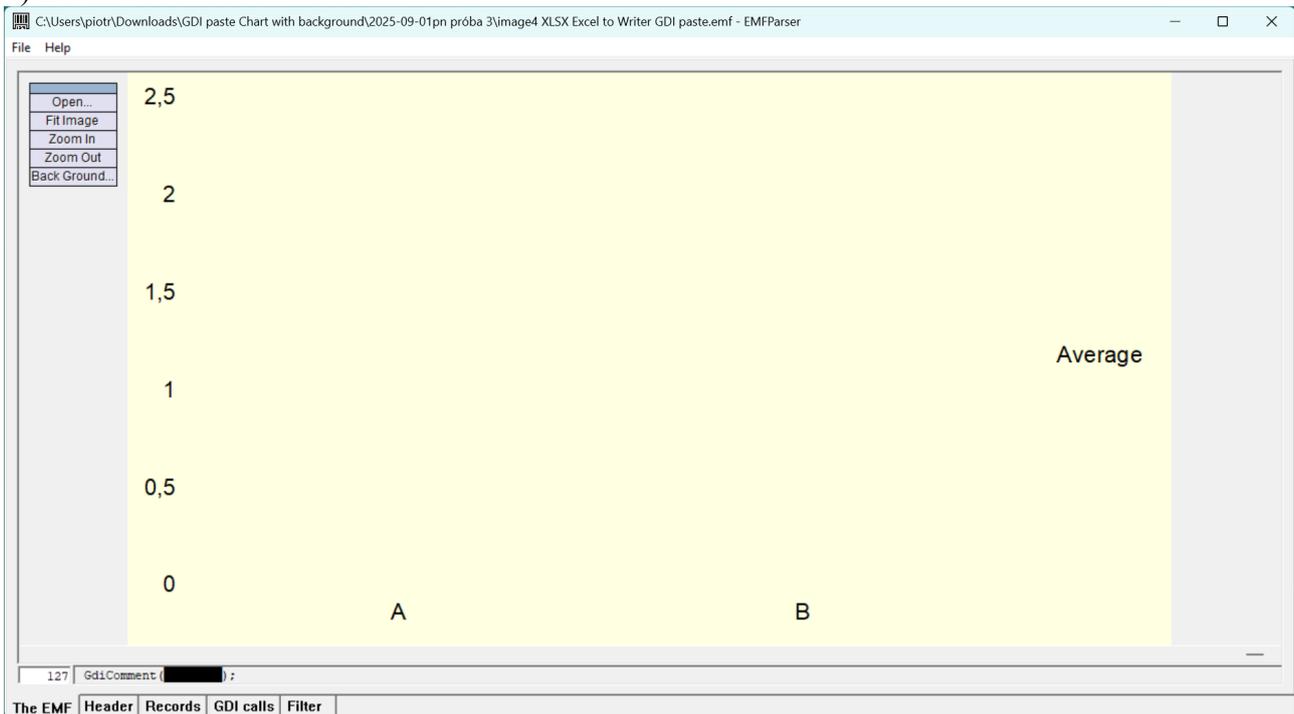

4) Header

EMF Header Info

```
filename:      C:\Users\piotr\Downloads\GDI paste Chart with background\2025-09-01pn
próba 3\image4 XLSX Excel to Writer GDI paste.emf
iType:        1
nSize:        108
rclBounds:    (0, 0) - (899, 497)
rclFrame:     (0, 0) - (15874, 8784)
dSignature:   0x464D4520
nVersion:     0x00010000
nBytes:       15440
nRecords:    128
nHandles:     2
sReserved:    0
nDescription: 0
offDescription: 0
nPalEntries:  0 (0x0000)
szlDevice:    900, 498
szlMillimeters: 158, 87
```

4) Records

EMF Records List

Number of Records: 129

iType	nSize	Data
0 EMR_HEADER 00 00 00l..... 00 00 00 □...ñ..... 00 01 00 .>..P".. EMF.... 00 00 00 P<..€..... 01 00 00□...ò... 00 00 00 □...W.....l...*W..	0x006C(108)	01 00 00 00 6C 00 00 00-00 00 00 00 00 83 03 00 00 F1 01 00 00-00 00 00 00 00 02 3E 00 00 50 22 00 00-20 45 4D 46 00 50 3C 00 00 80 00 00 00-02 00 00 00 00 00 00 00 00 00 00 00 00-84 03 00 00 F2 9E 00 00 00 57 00 00 00-00 00 00 00 00 00 00 00 00 1E 6C 02 00-2A 57 01 00
1 EMR_GDICOMMENT 4D 46 2B F....,.... EMF+ 10 C0 DB .@.....ÀÛ□...□...	0x002C(44)	46 00 00 00 2C 00 00 00-20 00 00 00 45 01 40 01 00 1C 00 00 00-10 00 00 00 02 01 00 00 00 8E 00 00 00-8F 00 00 00
2 EMR_GDICOMMENT 4D 46 2B F...L...@...EMF+ 40 09 00 "@.....@.. 00 00 00\$@..... 00 00 00!@..... .@.....	0x004C(76)	46 00 00 00 4C 00 00 00-40 00 00 00 45 22 40 00 00 0C 00 00 00-00 00 00 00 1E 0C 00 00 00 00 00 00 00-24 40 00 01 0C 00 00 00 00 21 40 00 00-0C 00 00 00 00 04 40 00 00 0C 00 00 00-00 00 00 00
3 EMR_SETMAPMODE	0x000C(12)	11 00 00 00 0C 00 00 00-08 00 00 00
4 EMR_SETVIEWPORTEXTEX 00 00 00□...□...	0x0010(16)	0B 00 00 00 10 00 00 00-90 00 00 00 90
5 EMR_SETWINDOWEXTEX 09 00 00i...i...	0x0010(16)	09 00 00 00 10 00 00 00-EC 09 00 00 EC
6 EMR_SETVIEWPORTORGEX 00 00 00	0x0010(16)	0C 00 00 00 10 00 00 00-00 00 00 00 00
7 EMR_SETWINDOWORGEX 00 00 00	0x0010(16)	0A 00 00 00 10 00 00 00-00 00 00 00 00
8 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
9 EMR_SETBKMODE	0x000C(12)	12 00 00 00 0C 00 00 00-01 00 00 00
10 EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
11 EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00

12 EMR_GDICOMMENT
4D 46 2B F....,.... EMF+
10 C0 DB .@.....ÀÛ
....X...X...

0x002C(44) 46 00 00 00 2C 00 00 00-20 00 00 00 45
01 40 01 00 1C 00 00 00-10 00 00 00 02
00 00 00 00 58 02 00 00-58 02 00 00

13 EMR_GDICOMMENT
4D 46 2B F.....EMF+
00 80 3F 0@.....€?
40 00 00 "@.....*@..
00 00 00 \$......€?....
00 00 00€?.....
00 00 00 2@.....
40 00 00`jE.°.E*@..
00 00 00 \$......€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@..\$.
02 2C 3A °.,:.....°,,:
00 00 00@.€\$...
00 00 00ÿÿÿÿ.....
....ph@Jð.AJ

0x010C(268) 46 00 00 00 0C 01 00 00-00 01 00 00 45
30 40 02 00 10 00 00 00-04 00 00 00 00
22 40 04 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 00 00 00 60 6A 45-00 B0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 00 00 00 00 00 00 00-0A 40 00 80 24
18 00 00 00 FF FF FF FF-01 00 00 00 00
00 00 00 00 70 68 AE 4A-F0 02 41 4A

14 EMR_GDICOMMENT
4D 46 2B F...t...h...EMF+
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00*@..\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00*@..\$.
00 00 00€?.....
40 00 01 ..€?.`ÉÄ..ÀÁ2@..
00 B8 41`ÉD.,A
00 00 00 .`jE.À.E*@..\$.
00 00 00€?.....
40 00 04 ..€?.....@..
00 00 00 (.....ÀÛ....

0x0274(628) 46 00 00 00 74 02 00 00-68 02 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-2A 40 00 00 24
18 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 80 3F 00 60 C9 C4-00 00 C0 C1 32
1C 00 00 00 10 00 00 00-00 60 C9 44 00
00 60 6A 45 00 C0 01 45-2A 40 00 00 24
18 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 80 3F 00 00 00 00-00 00 00 00 08
28 00 00 00 1C 00 00 00-02 10 C0 DB 00

60 6A 45€...€.`jE
00 00 00 .°.E4@.....
00 80 3F *@..\$......€?
60 C9 C4€?.`ÉÄ
00 00 00 ..ÄÄ2@.....
C0 01 45 .`ÉD..,A.`jE.Ä.E
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00%@.....
00 00 00@.....
40 07 00 .@.....!@..
00 00 00*@..\$...
00 00 00°,;.....
40 01 02 °.,;.€rC...B.@..
00 00 00 4...(...ÄÛ....
00 00 00 □.....
B3 B3 FFÄÛ....³³³ÿ
10 C0 DB .@..t...h....ÄÛ
EC 04 4Ai.J
6E C7 49 .æ□J.i.J.....nçI
D4 84 49 .æ□J.nçI....@Ô□I
D4 04 49 .æ□J@Ô□I....@Ô.I
00 00 00 .æ□J@Ô.I.....
01 00 01 .æ□J.....
00 00 00@.....
....

15 EMR_GDICOMMENT
4D 46 2B F...Ø...Ï...EMF+
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00*@..\$.....
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(...
00 00 10ÄÛ.....
B0 01 45 ...€...€.`jE.°.E

00 00 00 10 00 00 00 80-00 00 00 80 00
00 B0 01 45 34 40 00 00-0C 00 00 00 00
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 C0 C1 32 40 00 01-1C 00 00 00 10
00 60 C9 44 00 00 B8 41-00 60 6A 45 00
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 25 40 00 00-10 00 00 00 04
00 00 00 00 1F 40 03 00-0C 00 00 00 00
1E 40 09 00 0C 00 00 00-00 00 00 00 21
0C 00 00 00 00 00 00 00-2A 40 00 00 24
18 00 00 00 B0 02 2C 3A-00 00 00 00 00
B0 02 2C 3A 00 80 72 43-00 00 B7 42 08
34 00 00 00 28 00 00 00-02 10 C0 DB 00
88 00 00 00 00 00 00 00-00 00 00 00 02
00 00 00 00 02 10 C0 DB-00 00 00 00 B3
08 40 02 03 74 00 00 00-68 00 00 00 02
0A 00 00 00 00 20 00 00-00 00 00 00 10
10 E6 87 4A 10 EC 04 4A-00 00 00 00 00
10 E6 87 4A 00 6E C7 49-00 00 00 00 40
10 E6 87 4A 40 D4 84 49-00 00 00 00 40
10 E6 87 4A 40 D4 04 49-00 00 00 00 00
10 E6 87 4A 00 00 00 00-00 01 00 01 00
00 01 00 00 15 40 02 00-10 00 00 00 04
01 00 00 00

0x01D8(472)

46 00 00 00 D8 01 00 00-CC 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00

40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?.`ÉÄ..ÄÄ
60 C9 44 2@.....`ÉD
40 00 00 ..,A.`jE.À.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@...\$.
02 2C 3A °.,:.....°, :
00 00 00 .€rC...·B.@...4...
00 00 00 (.....ÀÛ.....□...
00 00 00
40 03 03 ..ÀÛ.....³³³ÿ.@..
00 00 00 <...0.....ÀÛ....
E6 87 4Aæ□J
00 00 00æ□J !&J....
00 00 00 !&J...□.@.....
.....

16 EMR_GDICOMMENT
4D 46 2B F...È...¼...EMF+
00 80 3F *@...\$......€?
00 00 00€?....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(..
00 00 10ÀÛ.....
B0 01 45 ...€...€.`jE.°.E
40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?.`ÉÄ..ÄÄ
A0 E7 44 2@..... çD
40 00 00 ..æB...7E. àD*@..

34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 80 72 43 00 00 B7 42-08 40 01 02 34
28 00 00 00 02 10 C0 DB-00 00 00 00 88
00 00 00 00 00 00 00 00-02 00 00 00 00
02 10 C0 DB 00 00 00 00-B3 B3 B3 FF 08
3C 00 00 00 30 00 00 00-02 10 C0 DB 04
00 00 00 00 00 00 00 00-00 00 00 00 10
00 00 00 00 10 E6 87 4A-20 21 26 4A 00
20 21 26 4A 00 01 01 81-15 40 03 00 10
04 00 00 00 01 00 00 00-

0x01C8(456) 46 00 00 00 C8 01 00 00-BC 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 E6 42 00 00 37 45-00 20 E0 44 2A

00 00 00 \$.....€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@...\$.
02 2C 3A °.,:.....°, :
00 00 00 ..rC..¶B.@...`...
20 00 00 T.....ÀÛ.....
6E C7 49 @î.I.nçI.âËI.nçI
38 26 4A .âËIð8&J@î.I.ð8&J
33 05 49 pñ)J€3.I□ØmJ€3.I
38 26 4A □ØmJð8&Jpñ)Jð8&J
00 00 00 ...□...□.@.€....
....□E.ÿ

17 EMR_GDICOMMENT
4D 46 2B F...È...¶...EMF+
00 80 3F *@...\$.€?
00 00 00€?....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@...(...
00 00 10ÀÛ.....
B0 01 45 ...€...€.`jE.°.E
40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?.`ÉÄ..ÄÄ
60 C9 44 2@.....`ÉD
40 00 00 ..,A.`jE.À.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@...\$.

0x01C8 (456)

24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 00 72 43 00 00 B6 42-08 40 02 03 60
54 00 00 00 02 10 C0 DB-08 00 00 00 00
40 CE 07 49 00 6E C7 49-00 E5 CB 49 00
00 E5 CB 49 F0 38 26 4A-40 CE 07 49 F0
70 F1 29 4A 80 33 05 49-90 D8 6D 4A 80
90 D8 6D 4A F0 38 26 4A-70 F1 29 4A F0
00 01 01 81 00 01 01 81-14 40 02 80 10
04 00 00 00 86 45 00 FF-

46 00 00 00 C8 01 00 00-BC 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18

02 2C BA °.,:.....°.,°
00 00 00 .€rC.°èD.@..4...
00 00 00 (.....ÀÛ.....□...
00 00 00
40 04 03 ..ÀÛ.....³³³ÿ.@..
00 00 00 ,... ..ÀÛ....
FF 7F 3Fÿÿ ?
00 00 00 !&J.....@.....
.....

18 EMR_GDICOMMENT
4D 46 2B F... ..EMF+
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00*@..\$......
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(...
00 00 10ÀÛ.....
B0 01 45 ...€...€.`jE.° .E
40 00 00 4@.....*@..
00 00 00 \$......€?....
00 C0 C1€?.`ÉÄ..ÀÁ
60 C9 44 2@.....`ÉD
40 00 00 ..,A.`jE.À.E*@..
00 00 00 \$......€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@..\$......
02 2C 3A °.,:.....°.,:
00 00 00 .€XC...`B.@..4...
00 00 00 (.....ÀÛ.....□...
00 00 00
40 02 03 ..ÀÛ.....³³³ÿ.@..
00 00 00 □...x.....ÀÛ....

0x0220(544)

B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 80 72 43 00 B0 EA 44-08 40 01 02 34
28 00 00 00 02 10 C0 DB-00 00 00 00 88
00 00 00 00 00 00 00 00-02 00 00 00 00
02 10 C0 DB 00 00 00 00-B3 B3 B3 FF 08
2C 00 00 00 20 00 00 00-02 10 C0 DB 02
00 00 00 00 00 00 00 00-00 00 00 00 FF
20 21 26 4A 00 01 00 00-15 40 04 00 10
04 00 00 00 01 00 00 00-
46 00 00 00 20 02 00 00-14 02 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 80 58 43 00 00 B7 42-08 40 01 02 34
28 00 00 00 02 10 C0 DB-00 00 00 00 88
00 00 00 00 00 00 00 00-02 00 00 00 00
02 10 C0 DB 00 00 00 00-B3 B3 B3 FF 08
84 00 00 00 78 00 00 00-02 10 C0 DB 0C

C8 1A 47 !&J.È.G
C8 1A 47 !&J. ì.J.È.G
C8 1A 47 .ì.J. nÇI.È.G
C8 1A 47 .nÇI. @Ô I.È.G
C8 1A 47 @Ô I. @Ô .I.È.G
C8 1A 47 @Ô .I. È.G
01 00 01
00 00 00 .@.
19 EMR_GDICOMMENT
4D 46 2B F. X. L. EMF+
00 80 3F *@. . . \$ €?
00 00 00 €?
00 00 00 *@. . . \$
00 80 3F ..€? €?
00 00 00 &@
00 00 00 @ . . (. . . .
00 00 10 ÀÛ
B0 01 45 . . . € . . . € . `jE . ° . E
40 00 00 4@ *@
00 00 00 \$ €?
00 C0 C1 €? . `ÉÄ . . ÀÁ
60 C9 44 2@ `ÉD
40 00 00 . . ,A . `jE . À . E *@
00 00 00 \$ €?
00 00 00 €?
10 C0 DB .@ . . (. ÀÛ
00 00 80 € €
00 00 00 . `jE . ° . E 4@
00 00 00 *@ . . . \$
00 80 3F ..€? €?
00 00 00 . `ÉÄ . . ÀÁ 2@
60 6A 45 `ÉD . . ,A . `jE
00 00 00 . À . E *@ . . \$
00 80 3F ..€? €?
00 00 00 @ . . (. . . .
00 00 10 ÀÛ

00 20 00 00 00 00 00 00-20 21 26 4A 00
20 21 26 4A 00 00 00 00-10 EC 04 4A 00
10 EC 04 4A 00 00 00 00-00 6E C7 49 00
00 6E C7 49 00 00 00 00-40 D4 84 49 00
40 D4 84 49 00 00 00 00-40 D4 04 49 00
40 D4 04 49 00 00 00 00-00 00 00 00 00
00 00 00 00 00 01 00 01-00 01 00 01 00
15 40 02 00 10 00 00 00-04 00 00 00 01
0x0558(1368) 46 00 00 00 58 05 00 00-4C 05 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 00 10-00 00 00 80 00
00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 60 C9 C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 60 C9 44-00 00 B8 41 00
00 C0 01 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00

B0 01 45 ...€...€.`jE.°.E
40 00 00 4@.....*@..
00 00 00 \$......€?....
00 C0 C1€?.`ÉÄ..ÄÄ
60 C9 44 2@.....`ÉD
40 00 00 ..,A.`jE.Ä.E*@..
00 00 00 \$......€?....
00 00 00€?.....
10 C0 DB .@..(.....ÀÛ
00 00 80€...€
00 00 00 .`jE.°.E4@.....
00 00 00*@..\$......
00 80 3F ..€?.....€?
00 00 00 .`ÉÄ..ÄÄ2@.....
60 6A 45`ÉD..,A.`jE
00 00 00 .Ä.E*@..\$......
00 80 3F ..€?.....€?
00 00 00@..(..
00 00 10ÀÛ.....
B0 01 45 ...€...€.`jE.°.E
40 00 00 4@.....*@..
00 00 00 \$......€?....
00 C0 C1€?.`ÉÄ..ÄÄ
60 C9 44 2@.....`ÉD
...
20 EMR_GDICOMMENT
4D 46 2B F...i...à...EMF+
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00*@..\$......
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(..
00 00 10ÀÛ.....
B0 01 45 ...€...€.`jE.°.E
40 00 00 4@.....*@..

00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 00 10-00 00 00 80 00
00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 60 C9 C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 60 C9 44-00 00 B8 41 00
00 C0 01 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8

0x01EC(492) 46 00 00 00 EC 01 00 00-E0 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A

00 00 00 \$.....€?....
00 C0 C1€?.`ÉÄ..ÀÁ
60 C9 44 2@.....`ÉD
40 00 00 ..,A.`jE.À.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
00 00 00 %@.....
40 09 00 .@.....@..
00 00 00!@.....
00 00 00*@..\$.
02 2C 3A °.,:.....°,,:
00 00 00 .€rC.°êD.@..4...
00 00 00 (.....ÀÛ.....□...
00 00 00
40 02 03 ..ÀÛ.....³³³ÿ.@..
00 00 00 P...D.....ÀÛ.....
00 00 00
E6 07 4A .Ô.G.æ.J.....æ.J
E6 87 4A .Ô.G.æ□J.....æ□J
40 02 00 .Ô.G.....@..
.....

21 EMR_GDICOMMENT
4D 46 2B F.....EMF+
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00*@..\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(..
00 00 10ÀÛ.....
B0 01 45 ...€...€.`jE.°.E
40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?.`ÉÄ..ÀÁ
60 C9 44 2@.....`ÉD
40 00 00 ..,A.`jE.À.E*@..

24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
25 40 00 00 10 00 00 00-04 00 00 00 00
1F 40 03 00 0C 00 00 00-00 00 00 00 1E
0C 00 00 00 00 00 00 00-21 40 07 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
B0 02 2C 3A 00 00 00 00-00 00 00 00 B0
00 80 72 43 00 B0 EA 44-08 40 01 02 34
28 00 00 00 02 10 C0 DB-00 00 00 00 88
00 00 00 00 00 00 00 00-02 00 00 00 00
02 10 C0 DB 00 00 00 00-B3 B3 B3 FF 08
50 00 00 00 44 00 00 00-02 10 C0 DB 06
00 20 00 00 00 00 00 00-00 00 00 00 00
00 D4 14 47 10 E6 07 4A-00 00 00 00 10
00 D4 14 47 10 E6 87 4A-00 00 00 00 10
00 D4 14 47 00 01 00 01-00 01 00 00 15
10 00 00 00 04 00 00 00-01 00 00 00

0x032C(812) 46 00 00 00 2C 03 00 00-20 03 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A

00 00 00 \$.....€?....
00 00 00€?.....
10 C0 DB .@..(.....ÀÛ
00 00 80€...€
00 00 00 .`jE.°.E4@.....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00 .`ÉÄ..ÀÁ2@.....
60 6A 45`ÉD...A.`jE
00 00 00 .À.E*@...\$.
00 80 3F ..€?.....€?
00 00 00@..(..
00 00 10ÀÛ.....
B0 01 45 ...€...€.`jE.°.E
40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?.`ÉÄ..ÀÁ
60 C9 44 2@.....`ÉD
40 00 00 ..,A.`jE.À.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
10 C0 DB .@..(.....ÀÛ
00 00 80€...€
00 00 00 .`jE.°.E4@.....
00 00 00*@...\$.
00 80 3F ..€?.....€?
00 00 00 .`ÉÄ..ÀÁ2@.....
60 6A 45`ÉD...A.`jE
00 00 00 .À.E*@...\$.
00 80 3F ..€?.....€?
00 00 00%@.....
00 00 00@.....
00 00 00@.....
40 00 00 !@.....*@..
00 00 00 \$.....€?....

24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 00 10-00 00 00 80 00
00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 60 C9 C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 60 C9 44-00 00 B8 41 00
00 C0 01 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 00 10-00 00 00 80 00
00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 60 C9 C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 60 C9 44-00 00 B8 41 00
00 C0 01 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-25 40 00 00 10
04 00 00 00 00 00 00 00-1F 40 03 00 0C
00 00 00 00 1E 40 09 00-0C 00 00 00 00
21 40 07 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00

31	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
%.....			
32	EMR_EXTTEXTOUTW	0x0054(84)	54 00 00 00 54 00 00 00-10 02 00 00 7E
1F 00 00 T...T.....~...			D3 02 00 00 01 21 00 00-01 00 00 00 00
00 00 00 Ó....!.....			00 00 00 00 10 02 00 00-7E 1F 00 00 01
00 00 00~.....			4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00 L.....			00 00 00 00 00 00 00 00-50 00 00 00 30
00 00 00P...0...			C3 00 00 00
Ä...			
33	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
.....			
34	EMR_GDICOMMENT	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
4D 46 2B F...ü...ð...EMF+			2A 40 00 00 24 00 00 00-18 00 00 00 00
00 80 3F *@..\$......€?			00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00€?....			00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$......			00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F ..€?.....€?			00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00&@.....			04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 00@..(...			1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 10ÀÛ.....			00 00 00 80 00 00 00 80-00 60 6A 45 00
B0 01 45 ...€...€.`jE.°.E			34 40 00 00 0C 00 00 00-00 00 00 00 2A
40 00 00 4@.....*@..			24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 \$......€?....			00 00 00 00 00 00 80 3F-00 60 C9 C4 00
00 C0 C1€?.`ÉÄ..ÀÁ			32 40 00 01 1C 00 00 00-10 00 00 00 00
60 C9 44 2@.....`ÉD			00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
40 00 00 ..,A.`jE.À.E*@..			24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 \$......€?....			00 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 00€?.....			08 40 00 04 28 00 00 00-1C 00 00 00 02
10 C0 DB .@..(.....ÀÛ			00 00 00 00 00 00 00 10-00 00 00 80 00
00 00 80€...€			00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00 .`jE.°.E4@.....			00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$......			00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F ..€?.....€?			00 60 C9 C4 00 00 C0 C1-32 40 00 01 1C
00 00 00 .`ÉÄ..ÀÁ2@.....			10 00 00 00 00 60 C9 44-00 00 B8 41 00
60 6A 45`ÉD.,A.`jE			00 C0 01 45 2A 40 00 00-24 00 00 00 18
00 00 00 .À.E*@..\$......			00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F ..€?.....€?			

.....		00 00 00 00 00 00 00 00-00 00 00 00
41 EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
.....		
42 EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
.....		
43 EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
%.....		
44 EMR_EXTTEXTOUTW	0x0060(96)	54 00 00 00 60 00 00 00-EA 00 00 00 96
19 00 00 T...`...ê...□...		D5 02 00 00 19 1B 00 00-01 00 00 00 00
00 00 00 Õ.....		00 00 00 00 EA 00 00 00-96 19 00 00 03
00 00 00 ...ê...□.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00 L.....		00 00 00 00 00 00 00 00-54 00 00 00 30
00 2C 00T...0.,.		35 00 00 00 C3 00 00 00-65 00 00 00 C3
00 00 00 5...Ã...e...Ã...		
45 EMR_GDICOMMENT	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
4D 46 2B F...ü...ð...EMF+		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 80 3F *@..\$.€?		00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00€?....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$.€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F ..€?.....€?		00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00&@.....		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 00@..(...		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 10ÀÛ.....		00 00 00 80 00 00 00 80-00 60 6A 45 00
B0 01 45 ...€...€.`jE.°E		34 40 00 00 0C 00 00 00-00 00 00 00 2A
40 00 00 4@.....*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 \$.€?....		00 00 00 00 00 00 80 3F-00 60 C9 C4 00
00 C0 C1€?.`ÉÄ..ÀÁ		32 40 00 01 1C 00 00 00-10 00 00 00 00
60 C9 44 2@.....`ÉD		00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
40 00 00 ..,A.`jE.À.E*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 \$.€?....		00 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 00€?.....		08 40 00 04 28 00 00 00-1C 00 00 00 02
10 C0 DB .@..(.....ÀÛ		00 00 00 00 00 00 00 10-00 00 00 80 00
00 00 80€...€		00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00 .`jE.°E4@.....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$.€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F ..€?.....€?		00 60 C9 C4 00 00 C0 C1-32 40 00 01 1C
00 00 00 .`ÉÄ..ÀÁ2@.....		10 00 00 00 00 60 C9 44-00 00 B8 41 00
60 6A 45`ÉD.,A.`jE		

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
.....			00 00 00 00 00 00 00 00-00 00 00 00
52	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
.....			
53	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
.....			
54	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
%.....			
55	EMR_EXTTEXTOUTW	0x0054(84)	54 00 00 00 54 00 00 00-10 02 00 00 AD
13 00 00	T...T.....		D3 02 00 00 30 15 00 00-01 00 00 00 00
00 00 00	ó...0.....		00 00 00 00 10 02 00 00-AD 13 00 00 01
00 00 00		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00	L.....		00 00 00 00 00 00 00 00-50 00 00 00 31
00 00 00P...1...		C3 00 00 00
Ä...			
56	EMR_GDICOMMENT	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
4D 46 2B	F...ü...ð...EMF+		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 80 3F	*@..\$.€?		00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00€?....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$.€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00&@.....		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 00@..(...		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 10ÀÛ.....		00 00 00 80 00 00 00 80-00 60 6A 45 00
B0 01 45	...€...€.`jE.°.E		34 40 00 00 0C 00 00 00-00 00 00 00 2A
40 00 00	4@.....*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.€?....		00 00 00 00 00 00 80 3F-00 60 C9 C4 00
00 C0 C1€?.`ÉÄ..ÀÁ		32 40 00 01 1C 00 00 00-10 00 00 00 00
60 C9 44	2@.....`ÉD		00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
40 00 00	..,A.`jE.À.E*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.€?....		00 00 00 00 00 00 80 3F-00 00 00 00 00
00 00 00€?.....		08 40 00 04 28 00 00 00-1C 00 00 00 02
10 C0 DB	.@..(.....ÀÛ		00 00 00 00 00 00 00 10-00 00 00 80 00
00 00 80€...€		00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00	..`jE.°.E4@.....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00*@..\$.€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
.....			00 00 00 00 00 00 00 00-00 00 00 00
63	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
64	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
65	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
66	EMR_EXTEXTOUTW 0D 00 00 T...`...ê...Å... 00 00 00 Õ...H..... 00 00 00 ...ê...Å..... 00 00 00 L..... 00 2C 00T...1.,, 00 00 00 5...Ã...e...Ã...	0x0060(96)	54 00 00 00 60 00 00 00-EA 00 00 00 C5 D5 02 00 00 48 0F 00 00-01 00 00 00 00 00 00 00 00 EA 00 00 00-C5 0D 00 00 03 4C 00 00 00 02 00 00 00-00 00 00 00 00 00 00 00 00 00 00 00 00-54 00 00 00 31 35 00 00 00 C3 00 00 00-65 00 00 00 C3
67	EMR_GDICOMMENT 4D 46 2B F...ü...ð...EMF+ 00 80 3F *@..\$.€? 00 00 00€?.... 00 00 00*@..\$. 00 80 3F ..€?.....€? 00 00 00&@..... 00 00 00@..(.. 00 00 10ÀÛ..... B0 01 45 ...€...€.`jE.°.E 40 00 00 4@.....*@.. 00 00 00 \$.€?.... 00 C0 C1€?.`ÉÃ..ÀÁ 60 C9 44 2@.....`ÉD 40 00 00 ..,A.`jE.À.E*@.. 00 00 00 \$.€?.... 00 00 00€?..... 10 C0 DB .@..(.....ÀÛ 00 00 80€...€ 00 00 00 .`jE.°.E4@.....	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45 2A 40 00 00 24 00 00 00-18 00 00 00 00 00 00 00 00 00 00 00 00-00 00 80 3F 00 00 00 00 00 2A 40 00 00-24 00 00 00 18 00 00 80 3F 00 00 00 00-00 00 00 00 00 00 00 00 00 00 00 00 00-26 40 00 00 10 04 00 00 00 00 00 00 00-08 40 00 04 28 1C 00 00 00 02 10 C0 DB-00 00 00 00 00 00 00 00 80 00 00 00 80-00 60 6A 45 00 34 40 00 00 0C 00 00 00-00 00 00 00 2A 24 00 00 00 18 00 00 00-00 00 80 3F 00 00 00 00 00 00 00 80 3F-00 60 C9 C4 00 32 40 00 01 1C 00 00 00-10 00 00 00 00 00 00 B8 41 00 60 6A 45-00 C0 01 45 2A 24 00 00 00 18 00 00 00-00 00 80 3F 00 00 00 00 00 00 00 80 3F-00 00 00 00 00 08 40 00 04 28 00 00 00-1C 00 00 00 02 00 00 00 00 00 00 00 10-00 00 00 80 00 00 60 6A 45 00 B0 01 45-34 40 00 00 0C

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
74	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
75	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
76	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
77	EMR_EXTTEXTOUTW 07 00 00 T...T.....Û... 00 00 00 Ó..._..... 00 00 00ü..... 00 00 00 L..... 00 00 00P...2... Ä...	0x0054(84)	54 00 00 00 54 00 00 00-10 02 00 00 DC D3 02 00 00 5F 09 00 00-01 00 00 00 00 00 00 00 00 10 02 00 00-DC 07 00 00 01 4C 00 00 00 02 00 00 00-00 00 00 00 00 00 00 00 00 00 00 00 00-50 00 00 00 32 C3 00 00 00
78	EMR_GDICOMMENT 4D 46 2B F...ü...ð...EMF+ 00 80 3F *@..\$.€? 00 00 00€?.... 00 00 00*@..\$. 00 80 3F ..€?.....€? 00 00 00&@..... 00 00 00@..(.. 00 00 10ÀÛ..... B0 01 45 ...€...€.`jE.°.E 40 00 00 4@.....*@.. 00 00 00 \$.€?..... 00 C0 C1€?.`ÉÀ..ÀÁ 60 C9 44 2@.....`ÉD 40 00 00 ..,A.`jE.À.E*@.. 00 00 00 \$.€?..... 00 00 00€?..... 10 C0 DB .@..(.....ÀÛ	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45 2A 40 00 00 24 00 00 00-18 00 00 00 00 00 00 00 00 00 00 00 00-00 00 80 3F 00 00 00 00 00 2A 40 00 00-24 00 00 00 18 00 00 80 3F 00 00 00 00-00 00 00 00 00 00 00 00 00 00 00 00 00-26 40 00 00 10 04 00 00 00 00 00 00 00-08 40 00 04 28 1C 00 00 00 02 10 C0 DB-00 00 00 00 00 00 00 00 80 00 00 00 80-00 60 6A 45 00 34 40 00 00 0C 00 00 00-00 00 00 00 2A 24 00 00 00 18 00 00 00-00 00 80 3F 00 00 00 00 00 00 00 80 3F-00 60 C9 C4 00 32 40 00 01 1C 00 00 00-10 00 00 00 00 00 00 B8 41 00 60 6A 45-00 C0 01 45 2A 24 00 00 00 18 00 00 00-00 00 80 3F 00 00 00 00 00 00 00 80 3F-00 00 00 00 00 08 40 00 04 28 00 00 00-1C 00 00 00 02

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
85	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
86	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
87	EMR_SELECTOBJECT	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
88	EMR_EXTTEXTOUTW	0x0060(96)	54 00 00 00 60 00 00 00-EA 00 00 00 F4
01 00 00	T...`...ê...ô...		D5 02 00 00 77 03 00 00-01 00 00 00 00
00 00 00	Ö...w.....		00 00 00 00 EA 00 00 00-F4 01 00 00 03
00 00 00	...ê...ô.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00	L.....		00 00 00 00 00 00 00 00-54 00 00 00 32
00 2C 00T...2.,.		35 00 00 00 C3 00 00 00-65 00 00 00 C3
00 00 00	5...Ã...e...Ã...		
89	EMR_GDICOMMENT	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
4D 46 2B	F...ü...ô...EMF+		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 80 3F	*@..\$.€?		00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00€?....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 00	...*@..\$.€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 80 3F	..€?.....€?		00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00&@.....		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 00@..(...		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 10ÀÛ.....		00 00 00 80 00 00 00 80-00 60 6A 45 00
B0 01 45	...€...€.`jE.°.E		34 40 00 00 0C 00 00 00-00 00 00 00 2A
40 00 00	4@.....*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.€?....		00 00 00 00 00 00 80 3F-00 60 C9 C4 00
00 C0 C1€?.`ÉÄ..ÀÁ		32 40 00 01 1C 00 00 00-10 00 00 00 00
60 C9 44	2@.....`ÉD		00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
40 00 00	..,A.`jE.À.E*@..		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00	\$.€?....		

00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
96	EMR_SETTEXTALIGN	0x000C(12)	16 00 00 00 0C 00 00 00-18 00 00 00
97	EMR_SETTEXTCOLOR	0x000C(12)	18 00 00 00 0C 00 00 00-00 00 00 00
98	EMR_SELECTOBJECT %.....	0x000C(12)	25 00 00 00 0C 00 00 00-01 00 00 00
99	EMR_EXTEXTOUTW 21 00 00 T...T...£...#!...	0x0054(84)	54 00 00 00 54 00 00 00-A3 0F 00 00 23
00 00 00	□...!".....		8D 10 00 00 A6 22 00 00-01 00 00 00 00
00 00 00£...#!.....		00 00 00 00 A3 0F 00 00-23 21 00 00 01
00 00 00	L.....		4C 00 00 00 02 00 00 00-00 00 00 00 00
00 00 00P...A...		00 00 00 00 00 00 00 00-50 00 00 00 41
i...			ED 00 00 00
100	EMR_GDICOMMENT 4D 46 2B F...ü...ð...EMF+	0x01FC(508)	46 00 00 00 FC 01 00 00-F0 01 00 00 45
00 80 3F	*@..\$.€?		2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00€?....		00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00*@..\$.....		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 80 3F	..€?.....€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00&@.....		00 00 00 00 00 00 00 00-26 40 00 00 10
00 00 00@..(...		04 00 00 00 00 00 00 00-08 40 00 04 28
00 00 10ÀÛ.....		1C 00 00 00 02 10 C0 DB-00 00 00 00 00
B0 01 45	...€...€.`jE.°.E		00 00 00 80 00 00 00 80-00 60 6A 45 00
40 00 00	4@.....*@..		34 40 00 00 0C 00 00 00-00 00 00 00 2A
00 00 00	\$.€?....		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 C0 C1€?.`ÉÄ..ÄÄ		00 00 00 00 00 00 80 3F-00 60 C9 C4 00
60 C9 44	2@.....`ÉD		32 40 00 01 1C 00 00 00-10 00 00 00 00

40 00 00	..,A.`jE.À.E*@..		00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
00 00 00	\$.....€?....		24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00€?.....		00 00 00 00 00 00 80 3F-00 00 00 00 00
10 C0 DB	.@..(.....ÀÛ		08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 80€...€		00 00 00 00 00 00 00 10-00 00 00 80 00
00 00 00	.`jE.°.E4@.....		00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00*@..\$......		00 00 00 00 2A 40 00 00-24 00 00 00 18
00 80 3F	..€?.....€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00	.`ÉÄ..ÄÁ2@.....		00 60 C9 C4 00 00 C0 C1-32 40 00 01 1C
60 6A 45`ÉD..,A.`jE		10 00 00 00 00 60 C9 44-00 00 B8 41 00
00 00 00	.À.E*@..\$......		00 C0 01 45 2A 40 00 00-24 00 00 00 18
00 80 3F	..€?.....€?		00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00%@.....		00 00 00 00 00 00 00 00-25 40 00 00 10
00 00 00@.....		04 00 00 00 00 00 00 00-1F 40 03 00 0C
00 00 00@.....		00 00 00 00 1E 40 09 00-0C 00 00 00 00
40 00 00	!@.....*@..		21 40 07 00 0C 00 00 00-00 00 00 00 2A
00 00 00	\$.....€?....		24 00 00 00 18 00 00 00-00 00 80 3F 00
63 FA 44€?.b.EWcúD		00 00 00 00 00 00 80 3F-1C 62 16 45 57
.@.....			04 40 00 00 0C 00 00 00-00 00 00 00
101	EMR_RESTOREDC ".....ÿÿÿÿ	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
102	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
103	EMR_SAVEDC !.....	0x0008(8)	21 00 00 00 08 00 00 00-
104	EMR_SELECTOBJECT %.....€	0x000C(12)	25 00 00 00 0C 00 00 00-0A 00 00 80
105	EMR_DELETEOBJECT (.....	0x000C(12)	28 00 00 00 0C 00 00 00-01 00 00 00
106	EMR_EXTCREATEFONTINDIRECTW FE FF FF R...L.....;þÿÿ	0x014C(332)	52 00 00 00 4C 01 00 00-01 00 00 00 A1
01 00 00□...		00 00 00 00 00 00 00 00-00 00 00 00 90
00 61 00"A.r.i.a.		00 00 00 00 00 00 00 22-41 00 72 00 69
00 00 00	l.....		6C 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00
00 00 00		00 00 00 00 00 00 00 00-00 00 00 00 00

00 C0 C1€?.`ÉÄ..ÄÄ
60 C9 44 2@.....`ÉD
40 00 00 ..,A.`jE.Ä.E*@..
00 00 00 \$.....€?....
00 00 00€?.....
10 C0 DB .@..(.....ÄÛ
00 00 80€...€
00 00 00 .`jE.°.E4@.....
00 00 00*@..\$.
00 80 3F ..€?.....€?
00 00 00 .`ÉÄ..ÄÄ2@.....
60 6A 45`ÉD..,A.`jE
00 00 00 .Ä.E*@..\$.
00 80 3F ..€?.....€?
00 00 00%@.....
00 00 00@.....
00 00 00@.....
40 00 00 !@.....*@..
00 00 00 \$......°,;:....
40 7E 44°,;:..NE.@~D
45 00 FF .@.€\$......E.ÿ
08 7A 47zG
..tG
112 EMR_GDICOMMENT
4D 46 2B F...ü...ð...EMF+
00 80 3F *@..\$......€?
00 00 00€?....
00 00 00*@..\$.
00 80 3F ..€?.....€?
00 00 00&@.....
00 00 00@..(..
00 00 10ÄÛ.....
B0 01 45 ...€...€.`jE.°.E
40 00 00 4@.....*@..
00 00 00 \$.....€?....
00 C0 C1€?.`ÉÄ..ÄÄ

00 00 00 00 00 00 80 3F-00 60 C9 C4 00
32 40 00 01 1C 00 00 00-10 00 00 00 00
00 00 B8 41 00 60 6A 45-00 C0 01 45 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 00 00 00 00
08 40 00 04 28 00 00 00-1C 00 00 00 02
00 00 00 00 00 00 00 10-00 00 00 80 00
00 60 6A 45 00 B0 01 45-34 40 00 00 0C
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 60 C9 C4 00 00 C0 C1-32 40 00 01 1C
10 00 00 00 00 60 C9 44-00 00 B8 41 00
00 C0 01 45 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-25 40 00 00 10
04 00 00 00 00 00 00 00-1F 40 03 00 0C
00 00 00 00 1E 40 09 00-0C 00 00 00 00
21 40 07 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-B0 02 2C 3A 00
00 00 00 00 B0 02 2C 3A-00 00 4E 45 00
0A 40 00 80 24 00 00 00-18 00 00 00 86
01 00 00 00 00 00 00 00-00 00 00 00 00
00 14 74 47

0x01FC(508)

46 00 00 00 FC 01 00 00-F0 01 00 00 45
2A 40 00 00 24 00 00 00-18 00 00 00 00
00 00 00 00 00 00 00 00-00 00 80 3F 00
00 00 00 00 2A 40 00 00-24 00 00 00 18
00 00 80 3F 00 00 00 00-00 00 00 00 00
00 00 00 00 00 00 00 00-26 40 00 00 10
04 00 00 00 00 00 00 00-08 40 00 04 28
1C 00 00 00 02 10 C0 DB-00 00 00 00 00
00 00 00 80 00 00 00 80-00 60 6A 45 00
34 40 00 00 0C 00 00 00-00 00 00 00 2A
24 00 00 00 18 00 00 00-00 00 80 3F 00
00 00 00 00 00 00 80 3F-00 60 C9 C4 00

B0 01 45	...€...€.`jE.°.E		00 00 00 80 00 00 00 80-00 60 6A 45 00
40 06 04	4@.....@..		34 40 00 00 0C 00 00 00-00 00 00 00 08
00 00 00ÀÛ....		18 00 00 00 0C 00 00 00-02 10 C0 DB 00
00 00 004@.....		03 00 00 10 34 40 06 00-0C 00 00 00 00
124	EMR_GDICOMMENT	0x001C(28)	46 00 00 00 1C 00 00 00-10 00 00 00 45
4D 46 2B	F.....EMF+		02 40 00 00 0C 00 00 00-00 00 00 00
	.@.....		
125	EMR_RESTOREDC	0x000C(12)	22 00 00 00 0C 00 00 00-FF FF FF FF
	"......ÿÿÿÿ		
126	EMR_SETROP2	0x000C(12)	14 00 00 00 0C 00 00 00-0D 00 00 00
		
127	EMR_GDICOMMENT	0x001C(28)	46 00 00 00 1C 00 00 00-10 00 00 00 45
4D 46 2B	F.....EMF+		02 40 00 00 0C 00 00 00-00 00 00 00
	.@.....		
128	EMR_EOF	0x0014(20)	0E 00 00 00 14 00 00 00-00 00 00 00 10
00 00 00		14 00 00 00
		

4) GDI calls

EMF GDI Calls

Number of Calls: 127

```
1     GdiComment(██████████);
2     GdiComment(██████████);
3     SetMapMode(hDC, MM_ANISOTROPIC);
4     SetViewportExtEx(hDC, 144, 144, NULL);
5     SetWindowExtEx(hDC, 2540, 2540, NULL);
6     SetViewportOrgEx(hDC, 0, 0, NULL);
7     SetWindowOrgEx(hDC, 0, 0, NULL);
8     SetROP2(hDC, R2_COPYPEN);
9     SetBkMode(hDC, TRANSPARENT);
10    SaveDC(hDC);
11    SetROP2(hDC, R2_COPYPEN);
12    GdiComment(██████████);
13    GdiComment(██████████);
14    GdiComment(██████████);
15    GdiComment(██████████);
16    GdiComment(██████████);
17    GdiComment(██████████);
18    GdiComment(██████████);
19    GdiComment(██████████);
20    GdiComment(██████████);
21    GdiComment(██████████);
22    RestoreDC(hDC, -1);
23    SetROP2(hDC, R2_COPYPEN);
24    SaveDC(hDC);
25    RestoreDC(hDC, -1);
26    SetROP2(hDC, R2_COPYPEN);
27    SaveDC(hDC);
28    CreateFontIndirect(&lf);    // Arial, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Arial"));
29    SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
30    SetTextColor(hDC, RGB(0, 0, 0));
31    SelectObject(hDC, 1);
32    ExtTextOutW(hDC, 528, 8062, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("0"), 1, lpDx);
    // Parameter(s):
    int* lpDx;
    lpDx[0] = 195;
33    SetROP2(hDC, R2_COPYPEN);
34    GdiComment(██████████);
35    RestoreDC(hDC, -1);
36    SetROP2(hDC, R2_COPYPEN);
37    SaveDC(hDC);
38    SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
39    DeleteObject(hDC, 1);
40    CreateFontIndirect(&lf);    // Arial, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
```

```

lf.lfEscapement = 0;
lf.lfOrientation = 0;
lf.lfWeight = FW_NORMAL | FW_REGULAR;
lf.lfItalic = FALSE;
lf.lfUnderline = FALSE;
lf.lfStrikeOut = FALSE;
lf.lfCharSet = ANSI_CHARSET;
lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
lf.lfQuality = DEFAULT_QUALITY;
lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
lstrcpy(lf.lfFaceName, _T("Arial"));
41 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
42 SetTextColor(hDC, RGB(0, 0, 0));
43 SelectObject(hDC, 1);
44 ExtTextOutW(hDC, 234, 6550, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("0,5"), 3, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 195;
    lpDx[1] = 101;
    lpDx[2] = 195;
45 GdiComment(██████████);
46 RestoreDC(hDC, -1);
47 SetROP2(hDC, R2_COPYPEN);
48 SaveDC(hDC);
49 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
50 DeleteObject(hDC, 1);
51 CreateFontIndirect(&lf);    // Arial, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Arial"));
52 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
53 SetTextColor(hDC, RGB(0, 0, 0));
54 SelectObject(hDC, 1);
55 ExtTextOutW(hDC, 528, 5037, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("1"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 195;
56 GdiComment(██████████);
57 RestoreDC(hDC, -1);
58 SetROP2(hDC, R2_COPYPEN);
59 SaveDC(hDC);
60 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
61 DeleteObject(hDC, 1);
62 CreateFontIndirect(&lf);    // Arial, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;

```

```

        lf.lfQuality = DEFAULT_QUALITY;
        lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
        lstrcpy(lf.lfFaceName, _T("Arial"));
63 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
64 SetTextColor(hDC, RGB(0, 0, 0));
65 SelectObject(hDC, 1);
66 ExtTextOutW(hDC, 234, 3525, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("1,5"), 3, lpDx);
        // Parameter(s):
        int* lpDx:
        lpDx[0] = 195;
        lpDx[1] = 101;
        lpDx[2] = 195;
67 GdiComment(██████████);
68 RestoreDC(hDC, -1);
69 SetROP2(hDC, R2_COPYPEN);
70 SaveDC(hDC);
71 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
72 DeleteObject(hDC, 1);
73 CreateFontIndirect(&lf); // Arial, ihFont = 1
        // Parameter(s):
        LOGFONT lf;
        lf.lfHeight = -351;
        lf.lfWidth = 0;
        lf.lfEscapement = 0;
        lf.lfOrientation = 0;
        lf.lfWeight = FW_NORMAL | FW_REGULAR;
        lf.lfItalic = FALSE;
        lf.lfUnderline = FALSE;
        lf.lfStrikeOut = FALSE;
        lf.lfCharSet = ANSI_CHARSET;
        lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
        lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
        lf.lfQuality = DEFAULT_QUALITY;
        lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
        lstrcpy(lf.lfFaceName, _T("Arial"));
74 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
75 SetTextColor(hDC, RGB(0, 0, 0));
76 SelectObject(hDC, 1);
77 ExtTextOutW(hDC, 528, 2012, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("2"), 1, lpDx);
        // Parameter(s):
        int* lpDx:
        lpDx[0] = 195;
78 GdiComment(██████████);
79 RestoreDC(hDC, -1);
80 SetROP2(hDC, R2_COPYPEN);
81 SaveDC(hDC);
82 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
83 DeleteObject(hDC, 1);
84 CreateFontIndirect(&lf); // Arial, ihFont = 1
        // Parameter(s):
        LOGFONT lf;
        lf.lfHeight = -351;
        lf.lfWidth = 0;
        lf.lfEscapement = 0;
        lf.lfOrientation = 0;
        lf.lfWeight = FW_NORMAL | FW_REGULAR;
        lf.lfItalic = FALSE;
        lf.lfUnderline = FALSE;
        lf.lfStrikeOut = FALSE;
        lf.lfCharSet = ANSI_CHARSET;
        lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
        lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
        lf.lfQuality = DEFAULT_QUALITY;
        lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
        lstrcpy(lf.lfFaceName, _T("Arial"));
85 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
86 SetTextColor(hDC, RGB(0, 0, 0));
87 SelectObject(hDC, 1);
88 ExtTextOutW(hDC, 234, 500, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("2,5"), 3, lpDx);
        // Parameter(s):
        int* lpDx:

```

```

    lpDx[0] = 195;
    lpDx[1] = 101;
    lpDx[2] = 195;
89  GdiComment(██████████);
90  RestoreDC(hDC, -1);
91  SetROP2(hDC, R2_COPYPEN);
92  SaveDC(hDC);
93  SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
94  DeleteObject(hDC, 1);
95  CreateFontIndirect(&lf);    // Arial, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Arial"));
96  SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
97  SetTextColor(hDC, RGB(0, 0, 0));
98  SelectObject(hDC, 1);
99  ExtTextOutW(hDC, 4003, 8483, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("A"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 237;
100 GdiComment(██████████);
101 RestoreDC(hDC, -1);
102 SetROP2(hDC, R2_COPYPEN);
103 SaveDC(hDC);
104 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
105 DeleteObject(hDC, 1);
106 CreateFontIndirect(&lf);    // Arial, ihFont = 1
    // Parameter(s):
    LOGFONT lf;
    lf.lfHeight = -351;
    lf.lfWidth = 0;
    lf.lfEscapement = 0;
    lf.lfOrientation = 0;
    lf.lfWeight = FW_NORMAL | FW_REGULAR;
    lf.lfItalic = FALSE;
    lf.lfUnderline = FALSE;
    lf.lfStrikeOut = FALSE;
    lf.lfCharSet = ANSI_CHARSET;
    lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
    lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
    lf.lfQuality = DEFAULT_QUALITY;
    lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
    lstrcpy(lf.lfFaceName, _T("Arial"));
107 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
108 SetTextColor(hDC, RGB(0, 0, 0));
109 SelectObject(hDC, 1);
110 ExtTextOutW(hDC, 10188, 8483, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("B"), 1, lpDx);
    // Parameter(s):
    int* lpDx:
    lpDx[0] = 237;
111 GdiComment(██████████);
112 GdiComment(██████████);
113 RestoreDC(hDC, -1);
114 SetROP2(hDC, R2_COPYPEN);
115 SaveDC(hDC);
116 SelectObject(hDC, (HGDIOBJ)OEM_FIXED_FONT);
117 DeleteObject(hDC, 1);
118 CreateFontIndirect(&lf);    // Arial, ihFont = 1

```



```

// Parameter(s):
LOGFONT lf;
lf.lfHeight = -351;
lf.lfWidth = 0;
lf.lfEscapement = 0;
lf.lfOrientation = 0;
lf.lfWeight = FW_NORMAL | FW_REGULAR;
lf.lfItalic = FALSE;
lf.lfUnderline = FALSE;
lf.lfStrikeOut = FALSE;
lf.lfCharSet = ANSI_CHARSET;
lf.lfOutPrecision = OUT_DEFAULT_PRECIS;
lf.lfClipPrecision = CLIP_DEFAULT_PRECIS;
lf.lfQuality = DEFAULT_QUALITY;
lf.lfPitchAndFamily = VARIABLE_PITCH | FF_SWISS;
lstrcpy(lf.lfFaceName, _T("Arial"));
119 SetTextAlign(hDC, TA_LEFT | TA_BASELINE | TA_NOUPDATECP);
120 SetTextColor(hDC, RGB(0, 0, 0));
121 SelectObject(hDC, 1);
122 ExtTextOutW(hDC, 14207, 4505, ETO_OPAQUE, RECT(0, 0, 0, 0), _T("Average"), 7,
lpDx);
// Parameter(s):
int* lpDx:
lpDx[0] = 237;
lpDx[1] = 174;
lpDx[2] = 199;
lpDx[3] = 114;
lpDx[4] = 199;
lpDx[5] = 195;
lpDx[6] = 194;
123 GdiComment(██████████);
124 GdiComment(██████████);
125 RestoreDC(hDC, -1);
126 SetROP2(hDC, R2_COPYPEN);
127 GdiComment(██████████);

```

tdf#168237 bug summary image

0,0	1,0
0,1	1,0
0,1	0,9
1,0	0,0

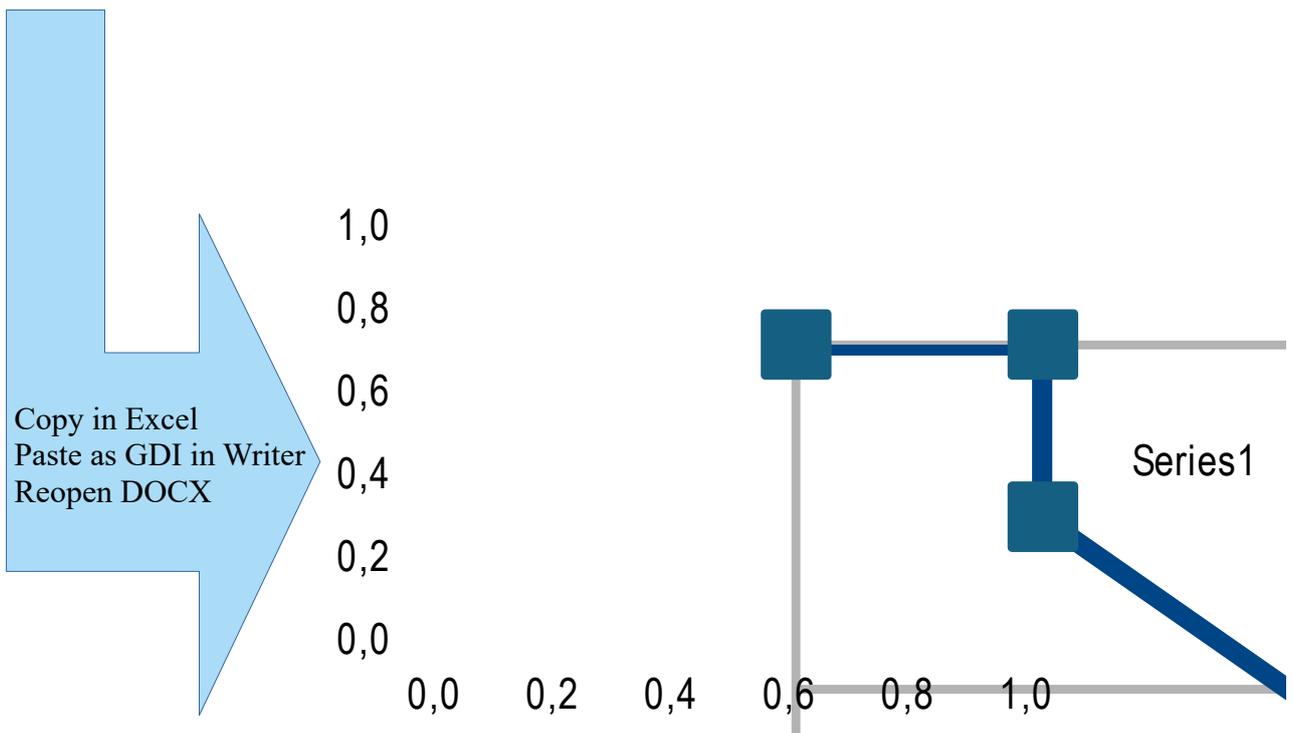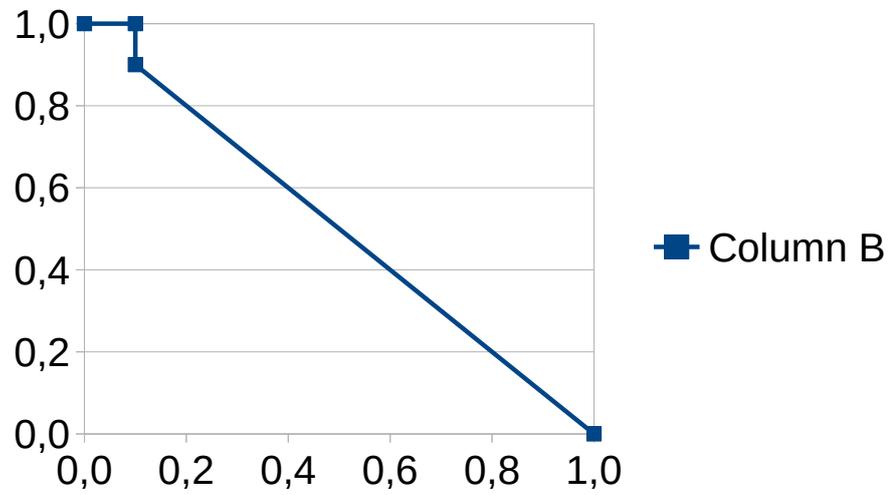

Version: 25.8.1.1 (X86_64)
Build ID: 54047653041915e595ad4e45cccea684809c77b5
CPU threads: 16; OS: Windows 11 X86_64 (build 26100); UI render: Skia/Raster; VCL: win
Locale: pl-PL (pl_PL); UI: en-US
Calc: CL threaded